

[Manuals.plus](#) /

› [SOCICO](#) /

› SOCICO Analog Kids Watch Instruction Manual, Model SD-6018

SOCICO SD-6018

SOCICO Analog Kids Watch Instruction Manual

Model: SD-6018

1. PRODUCT OVERVIEW

The SOCICO Analog Kids Watch, Model SD-6018, is designed to help children aged 9 to 18 learn to tell time effectively. It features an easy-to-read analog display, a durable strap, and a useful night light function. This watch is also water-resistant, making it suitable for everyday activities.



Image 1.1: The SOCICO Analog Kids Watch, featuring a clear dial and a night light function for visibility in low light conditions.

2. KEY FEATURES

- **Analog Display:** Clear hour, minute, and second hands for easy time reading.
- **Time Teaching Design:** Features a 24-hour scale and minute markers to aid in learning.
- **Water Resistance:** Rated 50M (5 ATM), suitable for hand washing, rain, showering, and swimming.
- **Night Light Function:** An integrated light for improved visibility in dark environments.
- **Durable Construction:** Features a rubber band and a stainless steel back cover for longevity.
- **Adjustable Buckle:** Stainless steel buckle for a secure and comfortable fit.

Free Matching of Fashion Watches



Image 2.1: Detailed view of the watch components and key features.

3. SETUP AND TIME SETTING

To set the time on your SOCICO Analog Kids Watch, follow these steps:

1. **Locate the Crown:** The crown is the small knob on the right side of the watch case.
2. **Pull Out the Crown:** Gently pull the crown outwards until you feel a click. This will stop the second hand.
3. **Set the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
4. **Push In the Crown:** Once the time is set, push the crown back into its original position. The second hand will resume movement.



Image 3.1: Watch dimensions, illustrating the location of the crown for time adjustment.

4. OPERATING INSTRUCTIONS

4.1. Using the Night Light

The SOCICO Analog Kids Watch features a night light for easy time reading in low-light conditions.

- **Activate:** Press the small button located above the crown on the right side of the watch case.
- **Duration:** The light will illuminate for a short period and then automatically turn off to conserve battery life.



Image 4.1: Night light effect contrast, showing the watch face illuminated and indicating the night light button.

4.2. Water Resistance

This watch is rated 50M (5 ATM) water-resistant. This means it is suitable for:

- Hand washing
- Rain exposure
- Showering (avoid hot water and steam)
- Swimming (not suitable for diving or prolonged submersion)

Important: Do not press any buttons or pull the crown while the watch is wet or submerged, as this can compromise the water resistance.



Image 4.2: Illustration of 50M water resistance for everyday use.

5. MAINTENANCE

5.1. Cleaning

To keep your watch in good condition:

- Wipe the watch case and strap with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish or seals.
- Ensure the watch is dry after cleaning, especially if it has been exposed to water.

5.2. Battery Replacement

The watch uses two specific product batteries. One battery powers the timekeeping function, and another powers the night light. If the watch stops running or the night light ceases to function, the battery may need replacement.

It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

6. TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Night Light Not Working:** The battery for the night light may be depleted. This battery is separate from the timekeeping battery.
- **Condensation Inside Watch:** This indicates a loss of water resistance. Avoid further water exposure and seek professional service immediately.
- **Inaccurate Time:** If the watch is consistently fast or slow, it may require adjustment or servicing by a professional.

7. SPECIFICATIONS

Feature	Detail
Model Number	SD-6018
Dimensions (L x W x H)	25.2 x 4.39 x 1.24 cm
Weight	31 grams
Water Resistance	50M (5 ATM)
Battery Type	2 Specific product batteries (included)
Manufacturer	SOCICO

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms for the SOCICO Analog Kids Watch, Model SD-6018, was not provided in the product data. For detailed warranty information or technical support, please contact the manufacturer directly through their official website or customer service channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question