

## ecozy IM-BS260A

# ecozy Portable Ice Maker Countertop User Manual

MODEL: IM-BS260A

Brand: ecozy

## 1. INTRODUCTION

---

Thank you for choosing the ecozy Portable Ice Maker Countertop. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new ice maker. Please read it thoroughly before first use and retain it for future reference.

This powerful ice maker is designed to produce bullet-shaped ice cubes quickly, with 9 cubes ready in just 6 minutes and up to 26.5 lbs of ice in 24 hours. It features a low noise level of less than 42 dB, a convenient self-cleaning function, and smart indicators for ice full and low water levels.



Figure 1.1: ecozy Portable Ice Maker Countertop

## 2. PRODUCT OVERVIEW

---

### Key Features:

- **Rapid Ice Production:** Produces 9 bullet-shaped ice cubes in just 6 minutes, up to 26.5 lbs in 24 hours.
- **Quiet Operation:** Operates at a low noise level of less than 42 dB.
- **Smart Sensors:** Automatically stops when the ice basket is full and indicates low water levels.
- **Two Ice Sizes:** Offers options for small or large ice cubes.
- **Self-Cleaning Function:** Simplifies maintenance and ensures hygiene.
- **Durable Construction:** Made with corrosion-resistant stainless steel for longevity and easy cleaning.

### Package Contents:

- ecozy Portable Ice Maker
- Ice Scoop
- Ice Bags (3 included)
- Ice Basket

- User Manual (this document)

## **3. SETUP**

---

### **3.1 Unpacking**

Carefully remove the ice maker from its packaging. Inspect the unit for any signs of damage. Remove all packing materials, including any tape or protective films.

### **3.2 Placement**

Place the ice maker on a flat, stable, and level surface away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit, leaving at least 4 inches of space from walls or other appliances to allow for proper heat dissipation.

### **3.3 Initial Cleaning**

Before first use, it is recommended to clean the ice maker. Use the self-cleaning function as described in the Maintenance section (Section 5.2). After the self-cleaning cycle, drain any remaining water and wipe the interior with a soft, damp cloth. Ensure the unit is completely dry before adding water for ice production.

# Convenient Self-Cleaning Function



Figure 3.1: Convenient Self-Cleaning Function

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Adding Water

1. Open the top lid of the ice maker.
2. Remove the ice basket.
3. Fill the water reservoir with clean, potable water up to the MAX water level mark. Do not overfill.
4. Place the ice basket back into position and close the top lid.

# Comes with Ice Bags and Standing Ice Scoop

●○○



Figure 4.1: Ice Maker Dimensions and Accessories

## 4.2 Powering On and Ice Production

1. Plug the ice maker into a grounded electrical outlet.
2. Press the "ON/OFF" button on the control panel to turn on the unit. The ice production cycle will begin automatically.
3. The first batch of ice cubes will be ready in approximately 6 minutes. Subsequent batches may be faster as the internal temperature stabilizes.



Figure 4.2: Rapid Ice Production

### 4.3 Selecting Ice Size

Press the "SELECT" button on the control panel to toggle between small and large ice cube sizes. The selected size will be indicated on the display. Larger cubes are generally produced at lower water temperatures.

# Summer Camping Iced Refreshment



Figure 4.3: Two Ice Sizes Available

## 4.4 Ice Full and Low Water Indicators

- The ice maker is equipped with infrared sensors that detect when the ice basket is full. When full, the unit will automatically pause ice production. The "ICE FULL" indicator light will illuminate. Once ice is removed, production will resume.
- If the water level in the reservoir is too low, the "ADD WATER" indicator light will illuminate, and the unit will pause. Refill the water reservoir to resume ice production.

# 2 Ice Size Available

Large Size/Small Size



Figure 4.4: Control Panel and Indicators

## 5. MAINTENANCE

---

### 5.1 Regular Cleaning

To ensure optimal performance and hygiene, clean your ice maker regularly. Unplug the unit before cleaning. Wipe the exterior with a soft, damp cloth. For the interior, use a mild detergent and warm water, then rinse thoroughly. Do not use abrasive cleaners or solvents.

### 5.2 Self-Cleaning Function

The self-cleaning function helps to deep clean the internal components. To activate:

1. Ensure the water reservoir is filled to the MAX level.
2. Press and hold the "TIMER/CLEAN" button for 3-5 seconds. The self-cleaning cycle will begin, typically lasting about 20 minutes.

3. Once the cycle is complete, drain the water from the unit by removing the drain plug located at the bottom or side (refer to your specific model's diagram for exact location).
4. Rinse the reservoir with clean water and drain again.

### 5.3 Storage

If the ice maker will not be used for an extended period, perform a self-cleaning cycle, drain all water, and thoroughly dry the interior and exterior. Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures. Leave the lid slightly ajar to prevent mildew and odors.

## 6. TROUBLESHOOTING

Before contacting customer support, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Ice maker not turning on	No power; Unit not plugged in; Power button not pressed.	Check power outlet; Ensure unit is properly plugged in; Press the ON/OFF button.
"ADD WATER" indicator is on	Water reservoir is empty or below minimum level.	Fill the water reservoir to the MAX level.
"ICE FULL" indicator is on	Ice basket is full; Ice is blocking the sensor.	Remove ice from the basket; Clear any ice blocking the infrared sensor.
Ice cubes are small or clumpy	Water temperature too high; Ambient temperature too high; Unit needs cleaning.	Use colder water; Place unit in a cooler environment; Perform self-cleaning cycle.
Unit is noisy	Normal operation sounds (compressor, water pump); Unit not level.	Ensure unit is on a flat, stable surface. Some operational noise is normal.

## 7. SPECIFICATIONS

Specification	Value
Brand	ecozy
Model Name	IM-BS260A
Product Dimensions	12.32 x 8.74 x 12.6 inches (8.74"D x 12.32"W x 12.6"H)
Weight	16.9 Pounds
Ice Production Capacity	26.5 Pounds per 24 Hours
Wattage	200 watts
Ice Cube Shape	Bullet
First Available Date	May 25, 2022

## 8. WARRANTY AND SUPPORT

---

Your ecozy Portable Ice Maker is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact ecozy customer service. Contact information can typically be found on the ecozy official website or on the product packaging.

We are committed to providing high-quality products and excellent customer service. Your satisfaction is our priority.