

[manuals.plus](#) /

› [Poolcandy](#) /

› [Poolcandy Inflatable Pedal Runner Instruction Manual](#)

Poolcandy PC2025PR

Poolcandy Inflatable Pedal Runner Instruction Manual

Model: PC2025PR

INTRODUCTION

The Poolcandy Inflatable Pedal Runner is a unique foot-powered pool lounger designed for both relaxation and light exercise in the water. Its innovative pedal system allows users to effortlessly navigate pools and calm lakes, providing an engaging and enjoyable aquatic experience. This manual provides essential information for the safe and proper setup, operation, maintenance, and troubleshooting of your Pedal Runner.



Image: The Poolcandy Inflatable Pedal Runner, a blue and grey inflatable lounger, floating in a swimming pool with a person comfortably seated, demonstrating its use for relaxation and movement.

SAFETY INFORMATION

- This is not a life-saving device. Do not leave children unattended while device is in use.
- Always supervise children and non-swimmers.
- Do not over-inflate the product. Over-inflation can cause damage and reduce product lifespan.
- Keep away from sharp objects, heat sources, and open flames.
- Ensure the pedal system is securely assembled before use to prevent detachment and potential injury.
- Recommended for ages 14 and up.
- Maximum weight capacity: 250 lbs (113 kg). Do not exceed this limit.
- Use only in calm water. Not suitable for open water, strong currents, or rough conditions.

SETUP INSTRUCTIONS

1. Unpacking and Inspection

Carefully remove all components from the packaging. Inspect the inflatable lounger and pedal system for any signs of damage or defects. Ensure all parts are present: inflatable lounger, pedal assembly, and repair kit.

2. Inflation

1. Locate the inflation valves on the inflatable lounger. The Pedal Runner features multi-chamber inflation for enhanced safety and stability.
2. Using an air pump (not included), inflate each chamber until it is firm to the touch but not rigid. Avoid over-inflation.
3. Ensure all valves are securely closed after inflation to prevent air leakage.



Image: An inflated Poolcandy Pedal Runner, showcasing its distinct blue and grey sections, indicating the separate air chambers for inflation.

3. Pedal System Assembly

1. Assemble the pedal mechanism according to the diagram provided in the repair kit instructions (if applicable).
The pedal system typically consists of a central shaft and two paddle blades.
2. Insert the assembled pedal system into the designated slots at the front of the inflatable lounger. Ensure the metal rods are fully seated into the plastic pockets.
3. Verify that the pedal system is securely attached and can rotate freely without obstruction.



Image: A detailed view of the foot-powered pedal mechanism, showing the paddle blades and the attachment points on the inflatable lounger.

OPERATING INSTRUCTIONS

Using Your Pedal Runner

1. Carefully enter the water with the Pedal Runner.
2. Position yourself comfortably in the seat, ensuring your feet are placed on the pedal footrests.
3. To move forward, gently push and pull the pedals with your feet in an alternating motion, similar to riding a bicycle. The paddle blades will propel the lounger through the water.
4. To steer, adjust the direction of your pedaling or use your hands on the side handles for minor adjustments. The lounger offers 360-degree rotation capability for easy maneuverability.
5. Utilize the integrated drink holder for convenience while relaxing.



Image: A person enjoying the Poolcandy Pedal Runner in a pool, demonstrating the comfortable seating and foot-pedal operation.

Official Product Video

Your browser does not support the video tag.

Video: This official product video demonstrates the Poolcandy Pedal Runner in use, showcasing its foot-powered movement and the integrated drink holder feature. It highlights how users can cruise and exercise in the pool.

MAINTENANCE

Cleaning

After each use, rinse the Pedal Runner with fresh water to remove chlorine, salt, or dirt. Allow it to air dry completely before deflating and storing. Do not use harsh chemicals or abrasive cleaners, as these can damage the PVC material.

Storage

Deflate the lounger by opening the valves and gently pressing out the air. Once deflated, fold it neatly and store it in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the pedal system is clean and dry before storing.

Repair Kit

A repair kit is included with your Pedal Runner for minor punctures. In case of a small hole, clean the area around the puncture, apply the adhesive from the kit, and firmly press a patch over the hole. Allow sufficient time for the adhesive to cure before re-inflating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lounger deflates quickly.	Valve not properly closed. Small puncture or leak.	Ensure all inflation valves are securely sealed. Locate the leak (e.g., using soapy water) and repair with the included repair kit.
Pedal system detaches or does not function smoothly.	Improper assembly. Wear and tear on attachment points.	Re-assemble the pedal system, ensuring all components are firmly connected and seated in their designated pockets. Inspect attachment points for damage. If damaged, contact Poolcandy customer support.
Difficulty moving or steering.	Insufficient inflation. Pedal system obstruction.	Check inflation levels and add air if necessary. Ensure no debris is caught in the pedal mechanism.

SPECIFICATIONS

Brand: Poolcandy

Model Name: Pedal Runner Deluxe Foot Powered Pool Lounger

Model Number: PC2025PR

UPC: 810048542369

Material: Polyvinyl Chloride

Color: Blue Silver

Item Weight: 7 Pounds (3.17 kg)

Item Dimensions (LxWxH): 19.7 x 14.4 x 4 inches (50 x 36.6 x 10.2 cm) *-Note: These dimensions likely refer to the packaged size. The inflated dimensions will be larger.*

Maximum Weight Capacity: 250 lbs (113 kg)

Recommended Age: 14+

Features: Foot-pedaled movement, convenient drink holder, heavy-duty handles, multi-chamber inflation.


WARRANTY AND SUPPORT

Specific warranty details for the Poolcandy Inflatable Pedal Runner are not provided in this manual. For information regarding product warranty, returns, or additional support, please contact Poolcandy directly through their official website or the retailer from whom the product was purchased.

You may also visit the [Poolcandy Store on Amazon](#) for more information.

Related Documents - PC2025PR

	<p>Splash Runner Pro 2.0 Motorized Pool Lounger Instruction Manual Comprehensive instruction manual for the PoolCandy Splash Runner Pro 2.0 motorized pool lounger, covering setup, operation, safety, and maintenance.</p>
	<p>PoolCandy Splash Runner Motorized Pool Lounger: Assembly and Operation Guide Comprehensive guide for assembling, operating, and maintaining the PoolCandy Splash Runner Motorized Luxury Pool Lounger. Includes safety warnings, battery information, and usage instructions.</p>
	<p>PoolCandy Illuminated LED Pool Island Instruction Manual Instruction manual for the PoolCandy Illuminated LED Pool Island featuring LiveLights Technology. Includes how to use, battery requirements and installation, notices, cautions, warnings, FCC notice, care and handling, and battery handling information.</p>
	<p>PoolCandy Baby Splash Runner Motorized Remote Control Baby Boat Instruction Manual Comprehensive instruction manual for the PoolCandy Baby Splash Runner Motorized Remote Control Baby Boat, covering safety, operation, inflation, battery installation, and warranty information.</p>
	<p>PoolCandy Gigantic T-Rex Sprinkler Instruction Manual Official instruction manual for the PoolCandy Gigantic T-Rex Sprinkler (Model PC3302TR), detailing inflation, usage, care, and warranty information from B&D Group, LLC.</p>
	<p>Splash Runner Pro 2.0 Motorized Pool Lounger Instruction Manual Comprehensive instruction manual for the PoolCandy Splash Runner Pro 2.0 motorized pool lounger, covering setup, operation, safety, and maintenance.</p>

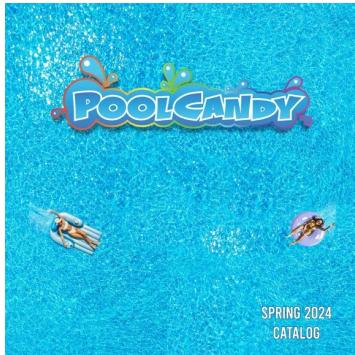

[\[pdf\]](#) Catalog

2024 catalogue with Canadian prices Pool Water Toys On The Right Track Inc PoolCandy condensed v 1710184987 cdn shopify s files 1 0506 7400 8241 |||

Page 1 Page 3 Prices subject to change without notice. All PoolCandy part numbers should start ... orized Tube Runner PC3725MFL Page 11 WHY JUST FLOAT WHEN YOU CAN PEDAL Inflatable Pedal Runner **PC2025PR** Master Pack: 2 66.00 Cdn. each, 2 per case Page 13 PC1035JS1 124.00 Cdn. each, 1 per ...

lang:en **score:26** filesize: 11.89 M page_count: 143 document date: 0000-00-00