

PERFASCIN NF604UD

PERFASCIN NF604UD Replacement Remote Control User Manual

For Emerson and Sylvania Televisions

INTRODUCTION

This manual provides instructions for the PERFASCIN NF604UD replacement remote control. This remote is designed to function as a direct replacement for original remote controls of various Emerson and Sylvania television models, offering immediate functionality without complex setup.

SETUP

1. Battery Installation

The PERFASCIN NF604UD remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

2. Initial Use

This replacement remote control is designed for immediate use. No programming or pairing is required. Once batteries are installed, point the remote towards your television and begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions:



Image: Front view of the PERFASCIN NF604UD remote control, highlighting the layout of all functional buttons.

- **POWER** (Red Button): Turns the television on or off.
- **MUTE**: Silences or restores the television audio.
- **SLEEP**: Activates or adjusts the TV sleep timer function.
- **AUDIO**: Cycles through available audio modes or tracks.
- **INPUT**: Selects the video input source (e.g., HDMI 1, AV, Component).
- **DISPLAY**: Shows on-screen information about the current channel or program.
- **Number Buttons (0-9)**: Directly select channels.
- **ENT.**: Confirms channel entry after using number buttons.
- **+100**: For selecting channels above 99 (e.g., press 1, then +100, then 2 for channel 102).
- **VOL +/-**: Adjusts the volume level.

- **CH +/-:** Changes the television channel up or down.
- **CH. RETURN:** Switches between the current and previously viewed channel.
- **SCREEN MODE:** Adjusts the screen display mode or aspect ratio.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates through on-screen menus and confirms selections.
- **SETUP:** Accesses the television's main setup menu.
- **RETURN:** Returns to the previous menu or screen.

COMPATIBILITY

The PERFASCIN NF604UD remote control is compatible with a range of Emerson and Sylvania TV models. This list is not exhaustive but includes common compatible models:

Compatible Emerson TV Models:

- LC200EM8, LC200EM8G
- BLC320EM9, BLC320EM9B, BLC320EM9A
- ELC320EM9
- LC195EM9, LC195EM9B, LC195EM9E, LC195EM92
- LC195EM82, LC195EM87
- SLC195EM8, SLC195EM82
- LE40M600
- RBLC320EM9-RB, RBLC320EM9RB

Compatible Sylvania TV Models:

- LC195SL8, LC195SL8A
- LC155SC8, LC155SL8, LC155SL8P
- LC200SL8, LC200SL8A, LC200SL9, LC200SL9A
- LC225SC9

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it ceases to function. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).

- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within a reasonable range and pointing the remote directly at the TV.
- **Some buttons not working:**
 - This remote is a replacement and may not have all functions of an original remote if your TV model had unique features. Verify the button's intended function against the TV's original remote or manual.
 - Clean the remote's surface, especially around the non-responsive buttons, to ensure no debris is interfering.

SPECIFICATIONS

Model Number	NF604UD (BY-NF604UD-PF)
Product Dimensions	7 x 2.6 x 0.7 inches
Item Weight	2.39 ounces
Batteries Required	2 x AAA (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television

WARRANTY AND SUPPORT

PERFASCIN is committed to providing quality products. If you encounter any issues or have questions regarding your NF604UD replacement remote control, please contact the seller or PERFASCIN customer support for assistance. Refer to your purchase documentation for specific warranty details and contact information.