

Casio AQ-800E-7ACF

Casio AQ-800E-7A Men's Wrist Watch User Manual

Comprehensive guide for setup, operation, and maintenance of your Casio AQ-800E-7A watch.

1. INTRODUCTION

Welcome to the user manual for your new Casio AQ-800E-7A Men's Wrist Watch. This timepiece combines a classic retro design with modern digital functionality, offering both style and practicality. This manual provides detailed instructions to help you set up, operate, and maintain your watch, ensuring optimal performance and longevity.





Figure 1: Front view of the Casio AQ-800E-7A watch, showcasing its analog dial and digital display.

2. KEY FEATURES

The Casio AQ-800E-7A is equipped with several features designed for convenience and reliability:

- **Retro-Inspired Design:** A blend of 1980s aesthetics with modern updates, featuring both analog and digital displays.
- **Dual Time Display:** Allows tracking of two different time zones simultaneously.
- **Durable Stainless Steel Band:** Features an adjustable clasp for a comfortable and secure fit.
- **1/100-Second Stopwatch:** Precise timing capabilities for various activities.
- **Daily Alarm:** A programmable alarm to keep you on schedule.
- **Day/Date Display & Auto-Calendar:** Convenient display of the current day and date, with an auto-calendar preprogrammed for February's 28 days.
- **Water-Resistant:** Suitable for daily use and resistant to splashes and rain.
- **Long-Lasting Battery:** Powered by an SR920W battery with an approximate 3-year lifespan.



Figure 2: The Casio AQ-800E-7A watch on a wrist, demonstrating its comfortable fit and stylish appearance.

3. SETUP

3.1 Initial Time Setting (Analog)

1. Pull out the crown (small knob on the right side of the watch case) to the first click position.
2. Turn the crown to adjust the analog hands to the correct time.
3. Push the crown back in to its normal position to start the analog timekeeping.

3.2 Digital Time and Date Setting

The digital display has two buttons: **ADJUST** (top left) and **MODE** (bottom left).

1. Press the **MODE** button repeatedly to cycle through the different modes: Timekeeping, Stopwatch, Alarm, Dual Time.
2. In the Timekeeping mode, press and hold the **ADJUST** button until the seconds begin to flash, indicating the setting mode.
3. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minute → Year → Month →

Day.

4. Use the **H-SET** button (bottom right) to increase the flashing value.
5. Once all settings are correct, press the **ADJUST** button again to exit the setting mode.

3.3 Adjusting the Band

The stainless steel band features an adjustable clasp. To adjust the length:

1. Locate the small arrow on the clasp.
2. Use a small, flat-head screwdriver or a similar tool to lift the clasp's locking plate.
3. Slide the clasp along the band to the desired position.
4. Press the locking plate back down firmly until it clicks into place. Ensure it is securely fastened.

4. OPERATING INSTRUCTIONS

4.1 Timekeeping Mode

This is the default mode, displaying the current digital time, day, and date. The analog hands also show the current time.

4.2 Stopwatch Mode

To use the stopwatch function:

1. Press the **MODE** button until "ST" or "STOPWATCH" appears on the digital display.
2. Press the **H-SET** button to start the stopwatch.
3. Press the **H-SET** button again to stop the stopwatch.
4. Press the **ADJUST** button to reset the stopwatch to zero.

4.3 Alarm Mode

To set and use the daily alarm:

1. Press the **MODE** button until "AL" or "ALARM" appears on the digital display.
2. Press and hold the **ADJUST** button until the alarm hour begins to flash.
3. Use the **H-SET** button to adjust the hour.
4. Press the **MODE** button to move to the minute setting, then use **H-SET** to adjust.
5. Press the **ADJUST** button to confirm the alarm setting.
6. To turn the alarm on/off, press the **H-SET** button while in Alarm Mode (without holding ADJUST). An alarm indicator will appear/disappear.

4.4 Dual Time Mode

To set a second time zone:

1. Press the **MODE** button until "DT" or "DUAL TIME" appears on the digital display.
2. Press and hold the **ADJUST** button until the hour begins to flash.
3. Use the **H-SET** button to adjust the hour.
4. Press the **MODE** button to move to the minute setting, then use **H-SET** to adjust.
5. Press the **ADJUST** button to confirm the dual time setting.

5. MAINTENANCE

5.1 Water Resistance

Your Casio AQ-800E-7A watch is water-resistant. This means it is designed to withstand splashes, rain, and brief immersion in water (e.g., washing hands). It is **not** suitable for swimming, diving, or showering with hot water, as steam can penetrate the seals.

- Do not operate buttons or the crown while the watch is wet or submerged.
- If the watch is exposed to saltwater, rinse it thoroughly with fresh water and wipe it dry.

5.2 Cleaning

To maintain the appearance of your watch:

- Wipe the watch case and band with a soft, dry cloth regularly.
- For stubborn dirt, use a soft cloth dampened with a mild soap solution, then wipe dry.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

5.3 Battery Replacement

The watch is powered by an SR920W battery with an approximate lifespan of 3 years. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving.	Crown is pulled out; low battery.	Push the crown back in. If issue persists, battery may need replacement.
Digital display is blank or dim.	Low battery.	Battery needs replacement.
Time is incorrect.	Time not set correctly; accidental button press.	Refer to Section 3.1 and 3.2 for time setting instructions.
Alarm does not sound.	Alarm is turned off; alarm time is incorrect.	Ensure alarm is activated (indicator visible). Re-set alarm time as per Section 4.3.
Water inside the watch.	Exposure to excessive water pressure or steam; damaged seals.	Immediately take the watch to a qualified technician for inspection and repair. Avoid further water exposure.

7. SPECIFICATIONS

- **Model Number:** AQ-800E-7ACF
- **Case Dimensions:** Approximately 4.25 x 3.27 x 2.83 inches (Package Dimensions)
- **Weight:** Approximately 5.29 ounces (Package Weight)

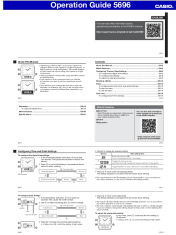



- **Battery Type:** 1 Lithium Ion battery (SR920W)
- **Battery Life:** Approximately 3 years
- **Water Resistance:** Daily water resistance (not for swimming/diving)
- **Functions:** Dual Time, 1/100-second Stopwatch, Daily Alarm, Auto-Calendar (pre-programmed to 28 days for February)
- **Manufacturer:** Casio

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Casio website or contact your local Casio service center. Keep your purchase receipt as proof of purchase for warranty claims. You can find more information and support resources by visiting the official Casio store on Amazon [Casio Store](#).

© 2023 Casio. All rights reserved. This manual is for informational purposes only.

Related Documents

	<p>CASIO 5696 Operation Guide: Setting and Features</p> <p>Comprehensive operation guide for the CASIO 5696 watch, covering time and date settings, alarm, dual time, stopwatch, and main indicators. Learn how to use your CASIO watch effectively.</p>
	<p>CASIO AQ-39, AQ-40, AQ-226A, AQ-226GA User Manual - Operating Instructions and Specifications</p> <p>Comprehensive user manual for CASIO AQ-39, AQ-40, AQ-226A, AQ-226GA watches (modules 745, 755). Covers battery, water resistance, care, operating modes (time, calendar, stopwatch), technical specifications, and product information.</p>
	<p>Casio Module 5208 Watch User Manual: AD-S800, AQ-S800/S810</p> <p>Comprehensive user manual for Casio watches with Module No. 5208, covering models AD-S800, AQ-S800, and AQ-S810. Includes instructions on water resistance, care, timekeeping, world time, alarms, stopwatch, timer, power management, and technical specifications.</p>
	<p>CASIO AQ-161/162 Модуль 3320/3352 Руководство пользователя</p> <p>Подробное руководство пользователя для часов CASIO AQ-161/162 с модулем 3320/3352. Инструкции по настройке времени, водозащиты, использованию функций секундомера, таймера, будильника и лунных фаз.</p>