

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VINABTY](#) /

> [VINABTY CT-RC1CA-21 Replacement Remote Control Instruction Manual for Toshiba 4K Smart LED Fire TV](#)

VINABTY CT-RC1CA-21

VINABTY CT-RC1CA-21 Replacement Remote Control Instruction Manual

Model: CT-RC1CA-21 | Brand: VINABTY

1. INTRODUCTION

This manual provides comprehensive instructions for the VINABTY CT-RC1CA-21 Replacement Remote Control. This remote is designed to be compatible with various Toshiba 4K Smart LED Fire TV models, including 50LF621C21, 32LF221C21, 43LF621C21, 43LF621U21, 32LF221U21, 50LF621U21, and 55LF621U21. Please read this manual carefully to ensure proper setup and operation.





Image 1: Front view of the VINABTY CT-RC1CA-21 Replacement Remote Control, showing all buttons including power, voice control, navigation, volume, channel, and dedicated app buttons for Prime Video, Netflix, Disney+, and Hulu.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image 2: Close-up of the remote's battery compartment, illustrating the correct insertion of AAA batteries.

2.2 Initial Pairing with Toshiba Fire TV

To use the replacement remote, it must be paired with your Toshiba Fire TV. The pairing process is typically done via Bluetooth. If your TV is already on, navigate to the settings menu using your existing remote or the TV's physical buttons.

1. Ensure your TV is powered on.
2. On your TV, navigate to **Settings > Remotes & Bluetooth Devices**.
3. Select **Fire TV Remotes** or **Voice Remotes with Alexa**.
4. On your new VINABTY remote, press and hold the **Home** button (🏠) for approximately 10-15 seconds. The remote's LED indicator may flash to show it's in pairing mode.
5. Your TV should detect the new remote. Select it from the list on the screen to complete the pairing process.

For a visual guide on pairing, please refer to the video below:

Your browser does not support the video tag.

Video 1: Demonstrates how to pair a replacement remote with a Fire TV, showing the steps to navigate through the TV's settings menu and activate pairing mode on the remote.

Another helpful video for pairing with Fire TV Stick/TV Cube:

Your browser does not support the video tag.

Video 2: A short instructional video detailing the steps to pair a remote with a Fire TV Stick or TV Cube, including unplugging and replugging the device and inserting batteries into the remote.

3. OPERATING THE REMOTE

The VINABTY CT-RC1CA-21 remote provides intuitive control over your Toshiba Fire TV. Below are the primary functions of its buttons:

- **Power Button** (🔌): Turns the TV on or off.
- **Voice Control Button** (🗣️): Press and hold to activate Alexa voice commands for searching content, launching apps, or controlling smart home devices.
- **Navigation Ring and Select Button**: Use the ring to navigate menus and the center button to select items.
- **Back Button** (⏪): Returns to the previous screen or menu.
- **Home Button** (🏠): Returns to the Fire TV home screen.
- **Menu Button** (☰): Accesses contextual options or menus.
- **Playback Controls**: Includes Play/Pause, Fast Forward, and Rewind buttons for media control.
- **Volume Up/Down** (🔊) **and Mute** (🔇): Adjusts TV volume and mutes audio.
- **Channel Up/Down** (📺): Changes TV channels.

- **App Shortcut Buttons:** Dedicated buttons for quick access to Prime Video, Netflix, Disney+, and Hulu.

Your browser does not support the video tag.

Video 3: A brief overview of the remote's features, highlighting the dedicated app buttons and voice control functionality.



Image 3: Illustrates the remote being used by a person watching a Toshiba Fire TV, emphasizing its role in media consumption.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's responsiveness decreases or if the LED indicator does not light up during use. Refer to Section 2.1 for battery installation instructions.

- Always use new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

4.2 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

• Remote Not Responding:

- Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
- Ensure there are no obstructions between the remote and the TV.
- Attempt to re-pair the remote with your TV by following the steps in Section 2.2.
- Unplug your TV from the power outlet for 1 minute, then plug it back in. This can resolve temporary communication issues.

• Voice Control Not Working:

- Ensure the remote is properly paired via Bluetooth (see Section 2.2). Voice control requires a Bluetooth connection.
- Press and hold the voice button firmly while speaking your command.
- Check your TV's internet connection, as Alexa voice commands require online access.

6. SPECIFICATIONS

Brand	VINABTY
Model	CT-RC1CA-21
Compatible Devices	Toshiba 4K Smart LED Fire TVs (e.g., 50LF621C21, 32LF221C21, 43LF621C21, 43LF621U21, 32LF221U21, 50LF621U21, 55LF621U21)
Connectivity Technology	Infrared (IR) and Bluetooth (for voice control)
Battery Type	2 x AAA (not included)
Human Interface Input	Buttons, Voice
Special Features	Ergonomic design, Dedicated app shortcut buttons, Voice control with Alexa
Dimensions	15.75 x 5.08 x 1.78 cm
Weight	30 g

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please reach out to the manufacturer's customer service for assistance.

