

EcoLink 9137151741-4

EcoLink Secure 4-Way 6A Universal Multiplug Adapter User Manual

Model: 9137151741-4

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your EcoLink Secure 4-Way 6A Universal Multiplug Adapter. Please read these instructions carefully before use and retain them for future reference.



Figure 1: EcoLink Secure 4-Way 6A Universal Multiplug Adapter. A white and purple adapter designed for connecting multiple electrical appliances.

2. KEY FEATURES

The EcoLink Secure Multiplug Adapter is designed for convenience and safety, offering the following features:

- Portable Design & Light Weight
- Universal Socket compatibility
- Single Power ON/OFF switch with LED Indicator
- Multiplug Extension box with 2 sockets for 3 Pin Plug & 2 sockets for 2 Pin Plug
- Ability to connect multiple appliances simultaneously



Figure 2: The EcoLink Secure 4-Way 6A Universal Multiplug Adapter showcasing its features: easy connection, 2 sockets for 3-pin and 2 for 2-pin plugs, fire-resistant protection, convenient power switch, sleek design, and universal socket design.

3. SETUP INSTRUCTIONS

1. Ensure the power source is off before plugging in the adapter.
2. Insert the EcoLink Multiplug Adapter firmly into a standard wall socket.
3. The adapter features universal sockets, accommodating both 2-pin and 3-pin plugs. Connect your appliances to the available sockets.
4. Turn on the power source. The LED indicator on the adapter will illuminate, signifying that power is supplied to the adapter.

4. OPERATING INSTRUCTIONS

1. To power on the connected appliances, press the ON/OFF switch located on the adapter. The LED indicator will light up, indicating power is flowing to the sockets.
2. To power off all connected appliances, press the ON/OFF switch again. The LED indicator will turn off, cutting power to the sockets.
3. This adapter allows you to connect up to four appliances simultaneously, utilizing two 3-pin sockets and two 2-pin sockets.
4. Always ensure that the total current draw of all connected appliances does not exceed the adapter's maximum rating of 6A to prevent overloading.

5. MAINTENANCE

- Disconnect the adapter from the power source before cleaning.
- Wipe the adapter with a dry, soft cloth. Do not use liquid cleaners, solvents, or abrasive materials, as

these can damage the unit.

- Keep the adapter away from water, excessive moisture, and direct sunlight to ensure longevity and safe operation.
- Do not attempt to open or repair the adapter yourself. Refer to qualified service personnel for any repairs.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
The adapter's LED indicator does not light up when plugged in.	No power from the wall socket or the adapter's ON/OFF switch is in the OFF position.	Check the wall socket with another appliance to confirm power. Ensure the adapter's ON/OFF switch is pressed to the ON position.
Appliances connected to the adapter are not receiving power.	The adapter's ON/OFF switch is off, or the total load exceeds 6A.	Press the ON/OFF switch to the ON position. Reduce the number of connected appliances or ensure their combined current draw is within the 6A limit.

7. SPECIFICATIONS

Specification	Detail
Brand	EcoLink
Model Number	9137151741-4
Colour	White & Purple
Item Type Name	Extension Board
Number of Outlets	4 (2 x 3-pin, 2 x 2-pin)
Plug Type	Type C
Item Weight	118 Grams
Item Dimensions (L x W x H)	12 x 5.6 x 7 Centimeters
Box Contents	4 units EcoLink 4 way Multiplug 6A

8. WARRANTY AND SUPPORT

Warranty: This product comes with a 1-year manufacturer's warranty from the date of purchase.

For any product-related queries, assistance, or warranty claims, please contact our customer support:

- **Consumer Care Executive Number:** 1800 120 800 008
- **Email ID:** customercare_ecolinklighting@signify.com

Manufacturer: Signify Innovations India Limited

Registered Office: PS Arcadia Central, 3A, 3rd Floor, 4A, Abanindranath Thakur Sarani (Camac Street), Kolkata-700017, West Bengal, India.