

Deahun 20-inch Electric Griddle

Deahun Mainstays 20-inch Black Electric Griddle Instruction Manual

Model: 20-inch Electric Griddle

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your new electric griddle. Failure to follow these instructions may result in electric shock, fire, or serious personal injury. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the temperature control probe in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Deahun Mainstays Electric Griddle:

- **Griddle Plate:** Large, non-stick cooking surface.
- **Temperature Control Probe:** Detachable unit for adjusting heat.
- **Grease Drip Tray:** Slide-out tray to collect excess grease.
- **Handles:** Integrated for safe handling.



Figure 1: Overall view of the Deahun Mainstays 20-inch Black Electric Griddle in use, showing its large cooking surface with pancakes and bacon.



Figure 2: Top-down view of the griddle, highlighting the non-stick cooking surface and integrated handles.

3. SETUP

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the griddle.

2. **Initial Cleaning:** Before first use, wipe the griddle plate with a damp cloth and mild detergent. Rinse thoroughly and dry completely. Ensure the temperature control probe is not attached during this step.
3. **Insert Drip Tray:** Slide the grease drip tray into its designated slot beneath the cooking surface. Ensure it is fully inserted.
4. **Attach Temperature Control:** Insert the temperature control probe firmly into the receptacle on the side of the griddle. Ensure it is fully inserted for proper operation.



Figure 3: The detachable temperature control probe, which must be fully inserted into the griddle's receptacle.



Figure 4: The slot for the slide-out grease drip tray, located beneath the cooking surface.



Figure 5: The removable grease drip tray, designed to collect cooking byproducts.

4. OPERATING INSTRUCTIONS

1. **Placement:** Place the griddle on a stable, heat-resistant surface.
2. **Power Connection:** Plug the temperature control probe into a standard 120V AC electrical outlet.
3. **Preheating:** Turn the temperature control knob to your desired setting (from 150°F to 400°F). The indicator light will illuminate, signaling that the griddle is heating. The light will turn off once the desired temperature is reached.
4. **Cooking:** Once preheated, place food directly onto the non-stick cooking surface. The large 20" x 10.5" surface provides ample space for various foods like pancakes, bacon, eggs, burgers, and sandwiches.
5. **Temperature Adjustment:** Adjust the temperature as needed during cooking using the control knob.
6. **Grease Collection:** The slide-out drip tray will collect excess grease and oils during cooking.
7. **Finishing:** After cooking, turn the temperature control knob to the "OFF" position and unplug the griddle from the outlet. Allow the griddle to cool completely before cleaning.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your griddle.

1. **Cool Down:** Always ensure the griddle is completely cool before attempting to clean it.
2. **Remove Temperature Control:** Detach the temperature control probe from the griddle. This part is **not** dishwasher safe and should not be immersed in water. Wipe it clean with a damp cloth if necessary.

3. **Clean Drip Tray:** Remove the grease drip tray and empty its contents. Wash it with warm, soapy water or place it in the dishwasher.
4. **Clean Griddle Plate:** The griddle plate is dishwasher safe. Alternatively, you can hand wash it with warm, soapy water and a non-abrasive sponge. For stubborn food residue, allow it to soak for a short period before cleaning.
5. **Drying and Storage:** Ensure all parts are thoroughly dry before reassembling or storing. Store the griddle in a cool, dry place.

6. TROUBLESHOOTING

- **Griddle not heating:** Ensure the temperature control probe is fully inserted into the griddle and the power cord is securely plugged into a working electrical outlet. Check if the temperature knob is set to an 'ON' position (not 'OFF').
- **Food sticking:** Although the griddle has a non-stick surface, using a small amount of cooking oil or spray can further prevent sticking, especially with certain foods. Ensure the griddle is properly preheated before adding food.
- **Uneven heating:** Allow sufficient time for the griddle to preheat completely. The indicator light turning off signifies it has reached the set temperature. If issues persist, ensure the griddle is placed on a flat, even surface.

7. SPECIFICATIONS

Feature	Specification
Special Feature	Dishwasher Safe (excluding temperature control)
Color	Black
Material	Non-Stick
Brand	Deahun
Wattage	1500 watts
Included Components	Flat Griddle Plate, Temperature Control Probe, Grease Drip Tray
Number of Temperature Settings	6 (150°F to 400°F)
Product Dimensions	11.31 x 22.43 x 2.37 inches

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Deahun customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 Deahun. All rights reserved.