

[Manuals.plus](#) /

› [Leitmotiv](#) /

› Leitmotiv Bamboo Bench with Shelves and Storage Basket, Grey, Large - User Manual

Leitmotiv PTG-LM2039GY

Leitmotiv Bamboo Bench with Shelves and Storage Basket - User Manual

Model: PTG-LM2039GY

[Introduction](#)

[Safety Instructions](#)

[Package Contents](#)

[Setup & Assembly](#)

[Operating &](#)

[Usage](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

1. INTRODUCTION

Thank you for choosing the Leitmotiv Bamboo Bench with Shelves and Storage Basket. This versatile furniture piece is designed to provide convenient seating and storage in your home. Made from durable bamboo, it features two slatted shelves for shoes or other items, a comfortable upholstered seat, and a removable fabric storage basket with dividers. This manual provides essential information for safe assembly, proper use, and maintenance of your new bench.



Image 1.1: The Leitmotiv Bamboo Bench, showcasing its design and functionality in an entryway setting. It features a grey upholstered seat, two bamboo slatted shelves, and a grey fabric storage basket.

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before assembling or using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Assembly:** Assemble the bench on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are securely tightened before use.
- **Weight Capacity:** Do not exceed the maximum recommended weight capacity of 300 kg (661 lbs) for the bench seat. Distribute weight evenly.
- **Stability:** Place the bench on a flat, stable surface. Do not stand on the bench or use it as a step stool.
- **Indoor Use Only:** This product is designed for indoor use only. Exposure to outdoor elements can damage the bamboo and fabric components.
- **Children:** Keep small parts away from children during assembly. Supervise children when they are near the bench to prevent accidents.
- **Maintenance:** Regularly check all fasteners for tightness and re-tighten as necessary.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Bamboo Bench Frame (Pre-assembled sections)
- Upholstered Seat Cushion
- Fabric Storage Basket with Dividers

- Assembly Hardware (Screws, Allen key)
- Instruction Manual

4. SETUP & ASSEMBLY

Assembly is required for this product. Please follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent damage.
2. **Identify Parts:** Refer to the included parts diagram (if available) to identify each component.
3. **Assemble Frame:** Connect the main bamboo frame sections using the provided screws and Allen key. Ensure all connections are snug but do not overtighten initially.
4. **Attach Shelves:** Secure the two slatted bamboo shelves into their designated slots within the frame. Ensure they are level and firmly seated.
5. **Place Seat Cushion:** Position the upholstered seat cushion onto the top of the bamboo frame. It should fit securely.
6. **Insert Storage Basket:** Slide the fabric storage basket into the designated compartment under the seat. The basket includes dividers for organization.
7. **Final Tightening:** Once all components are in place, go back and securely tighten all screws. Do not overtighten to avoid stripping the threads or cracking the bamboo.
8. **Stability Check:** Gently rock the assembled bench to ensure it is stable and level. Adjust if necessary.



Image 4.1: An angled view of the assembled bench, highlighting the two slatted shelves and the integrated fabric storage basket. This image helps visualize the placement of components during assembly.

5. OPERATING & USAGE

The Leitmotiv Bamboo Bench is designed for versatile use in various indoor settings.

- **Seating:** Use the upholstered top as a comfortable seat for putting on or taking off shoes, or as an extra seating option.
- **Shoe Storage:** The two slatted bamboo shelves are ideal for organizing shoes, keeping your entryway tidy.
- **General Storage:** The fabric storage basket can hold various small items such as keys, wallets, gloves, or other entryway essentials. The internal dividers help keep items organized.
- **Placement:** Suitable for entryways, hallways, bedrooms, or living rooms.



Image 5.1: A close-up view of the fabric storage basket, demonstrating its capacity for small items like keys and showing the internal dividers for better organization.

6. MAINTENANCE

Proper care will extend the life and appearance of your Leitmotiv Bamboo Bench.

- **Bamboo Frame:** Wipe the bamboo frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals. Dry immediately with a clean cloth.
- **Upholstered Seat:** Spot clean the fabric seat cushion with a mild detergent and a damp cloth. Do not saturate the fabric. Allow to air dry completely. For stubborn stains, professional cleaning may be required.
- **Storage Basket:** The fabric storage basket can be spot cleaned. If heavily soiled, it may be hand-washed in cold water with mild detergent and air-dried. Do not machine wash or tumble dry.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the bamboo to fade or dry out, and the

fabric to discolor.

- **Humidity:** Maintain a stable indoor humidity level. Extreme fluctuations can affect natural wood products.

7. TROUBLESHOOTING

If you encounter any issues with your bench, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Bench is wobbly or unstable.	Screws are loose; uneven floor surface.	Ensure all assembly screws are securely tightened. Move the bench to a level surface or use furniture pads to stabilize.
Difficulty assembling parts.	Incorrect orientation of parts; screws not aligned.	Review the assembly instructions and diagrams carefully. Ensure parts are oriented correctly before tightening screws. Do not force components.
Fabric basket does not fit.	Basket is not fully expanded or oriented incorrectly.	Ensure the fabric basket is fully unfolded and its internal base is flat. Try re-inserting it into the compartment, ensuring correct alignment.

8. SPECIFICATIONS

Detailed information about your Leitmotiv Bamboo Bench.

Model Number: PTG-LM2039GY

Brand: Leitmotiv

Material: Bamboo (Frame, Shelves), Polyester Fabric (Seat Cushion, Storage Basket)

Color: Grey (Cushion, Basket), Natural Bamboo (Frame)

Dimensions (L x W x H): 69.5 cm x 30 cm x 45 cm (27.4 in x 11.8 in x 17.7 in)

Seat Height: 45 cm (17.7 in)

Item Weight: Approximately 6 kg (13.2 lbs)

Maximum Weight Capacity: 300 kg (661 lbs)

Assembly Required: Yes

Intended Use: Indoor only



Image 8.1: A direct front view of the Leitmotiv Bamboo Bench, clearly displaying the two slatted bamboo shelves designed for shoe storage or other items.

9. WARRANTY & SUPPORT

Leitmotiv products are manufactured to high-quality standards. For information regarding warranty coverage, returns, or technical support, please refer to the retailer's policy where the product was purchased or visit the official Leitmotiv website.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question