

Saved from [manuals.plus](#).

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [WLIVE](#) /

› WLIVE 6-Drawer Dresser & TV Stand User Manual

WLIVE ASNG091 Fabric storage cabinet / DHS2

WLIVE 6-Drawer Dresser & TV Stand User Manual

Model: ASNG091 Fabric storage cabinet / DHS2

Brand: WLIVE

INTRODUCTION

Thank you for choosing the WLIVE 6-Drawer Dresser & TV Stand. This versatile furniture piece is designed to provide ample storage and serve as a stable platform for your television. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.



Image: The WLIVE 6-Drawer Dresser and TV Stand, showcasing its rustic brown finish and six spacious drawers, with a television placed on top.


IMPORTANT SAFETY INFORMATION

To reduce the risk of serious injury or death from furniture tip-over, this product includes anti-tipping accessories. Always install the anti-tipping device as instructed. Failure to do so can result in serious injury or death.

- Read all instructions before assembly and use.
- Keep children away during assembly.
- Ensure all parts are securely fastened before use.
- Do not overload drawers or the top surface.
- Use on a flat, level surface.
- Always install the anti-tip device to prevent tipping hazards.

STURDY STEEL FRAME

PLUS ANTI-TIP DESIGN

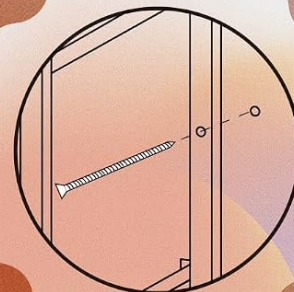

Anti-Tilt Device



Prevent Incidents

Image: A diagram illustrating the sturdy steel frame construction and the anti-tip device, emphasizing its importance for stability and safety.

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

Component List

Part	Description	Quantity
A	Top Wood Board	1
B	Steel Frame (Left)	1
C	Steel Frame (Right)	1
D	Crossbars	X

Part	Description	Quantity
E	Fabric Drawers	6
F	Adjustable Feet	X
G	Arch Handles	6
H	Anti-Tip Kit	1
I	Assembly Hardware (Screws, Allen Wrench)	1 set

Note: "X" indicates quantity varies based on specific design, refer to your packaging for exact numbers.

SETUP AND ASSEMBLY

Assembly typically requires two people and takes approximately 1-2 hours. Follow these steps carefully:

- 1. Unpack and Identify Parts:** Lay out all components on a clean, soft surface (like a rug or blanket) to prevent scratches. Refer to the "Package Contents" section to identify each part.
- 2. Assemble the Steel Frame:**
 - Attach the crossbars (D) to the left (B) and right (C) steel frames using the provided hardware (I). Ensure all connections are aligned before fully tightening screws.
 - Attach the adjustable feet (F) to the bottom of the steel frame. These feet help protect your floor and ensure stability on uneven surfaces.



Image: An exploded view diagram highlighting the elegant metal handles, non-woven fabric, MDF board, and adjustable feet, illustrating the components of the dresser.

3. **Attach the Top Wood Board:** Carefully place the top wood board (A) onto the assembled steel frame. Secure it using the appropriate screws from the hardware kit (I).
4. **Prepare the Fabric Drawers:** Unfold each fabric drawer (E) and insert the bottom panel to give it shape. Attach the arch handles (G) to the front of each drawer using the small screws provided.
5. **Insert Drawers:** Slide the assembled fabric drawers into their respective compartments within the steel frame.
6. **Install Anti-Tip Device:** This is a critical safety step.
 - Locate a suitable wall stud behind the dresser.
 - Attach one bracket of the anti-tip kit (H) to the back of the dresser's top frame.
 - Attach the other bracket to the wall using the provided screws, ensuring it is securely anchored.
 - Connect the two brackets with the strap or cable provided, tightening it to prevent forward tipping.
7. **Final Check:** Ensure all screws are tightened, the dresser is stable, and the anti-tip device is properly installed.

If you encounter any difficulties during assembly, refer to the troubleshooting section or contact customer support.

OPERATING INSTRUCTIONS

The WLIVE 6-Drawer Dresser is designed for versatile use in various rooms.

Using as a Dresser:

- Organize clothing, blankets, toys, or other household items within the six spacious fabric drawers.
- Each drawer has a capacity of approximately 22 lbs (10 kg).
- To open, gently pull the arch handle. To close, push the drawer fully into its compartment.



Image: A visual representation of the drawer capacity, indicating that each drawer can hold approximately 16-20 T-shirts or 13-15 pairs of jeans.

Using as a TV Stand:

- The sturdy wood top surface can support televisions up to 60 inches in size.
- The maximum weight capacity for the top surface is 100 lbs (45 kg).
- Ensure the television's base fits securely on the top surface and does not overhang.



Image: The WLIVE dresser positioned in a bedroom, serving as a TV stand with a television placed on its top surface, demonstrating its functional use.



Image: A graphic indicating the maximum weight capacity of the dresser's top surface, which is 100 lbs, suitable for various items including televisions.

MAINTENANCE AND CARE

Proper care will extend the life of your WLIVE dresser.

- **Cleaning:** Wipe the wood top and steel frame with a dry, soft cloth. For fabric drawers, spot clean with a damp cloth and mild detergent if necessary, then air dry completely. Do not use harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Drawer Care:** Avoid overfilling drawers to prevent strain on the fabric and frame.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading of the fabric and wood finish.

TROUBLESHOOTING

If you encounter issues, refer to the common problems and solutions below:

Common Issues and Solutions

Problem	Possible Cause	Solution
Dresser is wobbly/unstable.	Screws are loose; uneven floor; adjustable feet not properly set.	Tighten all screws. Adjust the leveling feet on the bottom of the frame until stable. Ensure the anti-tip device is installed.
Drawers do not slide in smoothly or fall out.	Fabric drawers not fully shaped; frame misalignment; incorrect drawer placement.	Ensure the bottom panel is fully inserted into each fabric drawer. Check that the steel frame is assembled squarely. Verify drawers are placed in the correct slots.
Missing parts or damaged components.	Manufacturing error or shipping damage.	Do not proceed with assembly. Contact WLIVE customer support immediately for replacement parts.

If the issue persists after attempting these solutions, please contact WLIVE customer support.

SPECIFICATIONS

- **Brand:** WLIVE
- **Model Name:** ASNG091 Fabric storage cabinet / DHS2
- **Product Dimensions (Overall):** 51.2" L x 15.4" W x 26.1" H (130cm L x 39cm W x 66.3cm H)
- **Color:** Rustic Brown
- **Material:** Steel Frame, MDF Board (Top), Non-Woven Fabric (Drawers)
- **Number of Drawers:** 6
- **Drawer Capacity (Each):** Approx. 22 lbs (10 kg)
- **Top Surface Weight Capacity:** Max. 100 lbs (45 kg)
- **Assembly Required:** Yes
- **Special Features:** Adjustable Feet, Anti-Tipping Device



Image: A detailed diagram illustrating the overall dimensions of the dresser, including length, width, and height, along with suggested TV sizes (50, 55, 60 inches) that can be placed on top.

WARRANTY AND SUPPORT

WLIVE is committed to providing high-quality products. For any questions, concerns, or assistance with your product, please contact WLIVE customer support. Please have your model number (ASNG091 Fabric storage cabinet / DHS2) and purchase information ready when contacting support.

For more information, visit the official WLIVE store: [WLIVE Store on Amazon](#)

© 2025 WLIVE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09YQ5943X>

More documents and user manuals: **<https://manuals.plus/>**