

[manuals.plus](#) /› [Eureka](#) /› [Eureka Apollo Bagless Cylinder Vacuum Cleaner Instruction Manual](#)

Eureka Apollo-800W

Eureka Apollo Bagless Cylinder Vacuum Cleaner Instruction Manual

Model: Apollo-800W

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Eureka Apollo Bagless Cylinder Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not leave the vacuum cleaner unattended when plugged in.
- Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PACKAGE CONTENTS

Your Eureka Apollo vacuum cleaner package should include the following components:

- Eureka Apollo Cylinder Vacuum Cleaner Unit
- Flexible Hose
- Telescopic Wand
- Floor Nozzle (Standard Brush)
- 2-in-1 Dusting Brush/Crevise Tool
- User Manual



Figure 1: Eureka Apollo vacuum cleaner and its included attachments. This image displays the main unit, flexible hose, telescopic wand, floor nozzle, and the 2-in-1 dusting brush/crevice tool.

SETUP INSTRUCTIONS

- 1. Attach the Hose:** Insert the flexible hose into the suction inlet on the main vacuum cleaner unit until it clicks securely into place.
- 2. Connect the Telescopic Wand:** Attach the telescopic wand to the handle end of the flexible hose. Ensure it is firmly connected.
- 3. Attach the Floor Nozzle:** Connect the desired floor nozzle (standard brush) to the end of the telescopic wand.
- 4. Attach Accessories (Optional):** For specialized cleaning tasks, attach the 2-in-1 dusting brush/crevice tool directly to the hose handle or the telescopic wand.

OPERATING INSTRUCTIONS

Powering On and Off

- Plug the power cord into a suitable electrical outlet.
- Press the power button located on the main unit to turn the vacuum cleaner on.
- To turn off, press the power button again.

Adjusting Suction Power

The Eureka Apollo features powerful suction suitable for various surfaces.



Figure 2: The vacuum cleaner effectively removes dust, hair, and debris from both hard floors and carpets, demonstrating its powerful 800W motor and 22kPa suction.

Some models may include a suction control slider on the hose handle or main unit to adjust suction strength for different floor types or delicate items. Refer to the markings on your specific unit.

Using the Telescopic Wand and Accessories

- **Telescopic Wand:** Adjust the length of the telescopic wand by pressing the release button and extending or retracting it to a comfortable height for floor cleaning or to reach high areas like curtains and ceilings.



Poignée Télescopique pour une Portée Facile

La conception de la poignée télescopique permet d'accéder facilement aux zones hautes et difficiles à atteindre, comme les rideaux, le plafond et l'envers des meubles.

Figure 3: A user extending the telescopic wand to clean high-up areas, demonstrating the reach and versatility of the vacuum cleaner.

- **2-in-1 Dusting Brush/Crevice Tool:** This versatile tool can be used for cleaning upholstery, pet hair from beds, tight spaces like sofa crevices, computer keyboards, and other delicate surfaces. It can be attached directly to the hose handle.



Brosse 2-en-1 pour la Poussière

Parfaite pour divers besoins de nettoyage : brosse pour animaux de compagnie pour les lits et les poils d'animaux, embout pour fentes pour les interstices des canapés, les claviers d'ordinateur, et brosse pour canapés et autres surfaces en tissu.

Figure 4: The 2-in-1 dusting brush/crevice tool being used to clean dust from shelves, highlighting its utility for various surfaces and tight spots.



Outils Intégrés sur la Poignée

Utilisez facilement cet aspirateur pour les fenêtres, les plinthes, les canapés, les recoins difficiles d'accès et bien plus encore.

Figure 5: A user cleaning a sofa with the integrated tools, demonstrating their convenience for upholstery and hard-to-reach areas.

Automatic Cord Rewind

To retract the power cord, gently pull the cord slightly and then release it. The cord will automatically rewind into the unit.



Retour Automatique du Cordon

La fonction de retour automatique du cordon rend l'utilisation plus pratique et vous évite les enchevêtrements de cble.

Figure 6: A finger pointing to the automatic cord rewind button on the vacuum cleaner, illustrating the convenient feature for quick storage.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Eureka Apollo vacuum cleaner. Always unplug the appliance before performing any maintenance.

Emptying the Dust Container

The vacuum cleaner is equipped with a 2.2-liter dust container. Empty it regularly, especially when the 'MAX' fill line is reached, to maintain strong suction.

1. Press the dust container release button (if applicable) and carefully remove the dust container from the main unit.
2. Position the dust container over a waste bin.
3. Open the bottom flap or lid of the dust container and shake out the contents.
4. Close the flap/lid and reattach the dust container to the vacuum cleaner unit until it clicks into place.



Conteneur à Poussière de 2,2 Litres

Le conteneur à poussière de 2,2 litres de cet aspirateur à cylindre offre une capacité suffisante pour de longues sessions de nettoyage.

Figure 7: The Eureka Apollo vacuum cleaner showcasing its 2.2-liter dust container, designed for efficient debris collection during cleaning sessions.

Cleaning the Filters

The Eureka Apollo uses a HEPA filter system. Filters should be cleaned regularly to prevent clogging and maintain suction power.

1. Remove the dust container as described above.
2. Locate and remove the pre-motor filter (usually foam or felt) and the HEPA post-motor filter.
3. Tap the filters gently over a waste bin to remove loose dust.
4. If washable, rinse the filters under cold running water until the water runs clear. Do not use detergents.
5. Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use a hairdryer or other heating methods.
6. Reinsert the dry filters and reattach the dust container.

Note: Replace filters every 6-12 months, or as needed, depending on usage.

General Cleaning and Storage

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners.
- Check the hose and attachments for blockages periodically.
- Store the vacuum cleaner in a cool, dry place. The compact design allows for easy storage.



Léger et Facile à Utiliser

Portez ce modèle d'aspirateur à sac
ou réservoir tout en aspirant sans vous fatiguer.

Figure 8: The Eureka Apollo vacuum cleaner and its accessories neatly stored in a cabinet, demonstrating its lightweight and compact design for convenient storage.

TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in. No power at outlet. Power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker or try another outlet. Press the power button firmly.
Loss of suction.	Dust container is full. Filters are dirty or clogged. Hose or attachments are blocked.	Empty the dust container. Clean or replace the filters as per maintenance instructions. Check the hose, telescopic wand, and floor nozzle for any obstructions and remove them.
Unusual noise.	Blockage in the hose or nozzle. Motor issue (less common).	Turn off and unplug the vacuum. Check for and remove any blockages. If the noise persists after checking for blockages, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Eureka
Model Number	Apollo-800W
Power	800 Watts
Voltage	240 Volts
Dust Container Capacity	2.2 Liters
Noise Level	72 dB
Filter Type	HEPA Filter
Product Dimensions (L x W x H)	80 x 30.5 x 28 cm
Item Weight	5.6 Kilograms
Cord Length	5 meters
Special Features	Bagless, Automatic Cord Rewind, Telescopic Handle, Lightweight and Compact Design

WARRANTY AND SUPPORT

Specific warranty details for your Eureka Apollo vacuum cleaner are typically provided with the product packaging or can be found on the official Eureka website. Please refer to these resources for information regarding warranty coverage, terms, and conditions.

For technical support, spare parts, or service inquiries, please visit the official Eureka support website or contact their customer service department. Contact information is usually available in the product packaging or on the manufacturer's


website.

© 2023 Eureka. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - Apollo-800W

	<p>Eureka Portable Deep Cleaner 2550 Series Owner's Guide</p> <p>Owner's guide for the Eureka Portable Deep Cleaner, 2550 Series. Includes setup, usage, cleaning, storage, troubleshooting, and warranty information.</p>
	<p>Eureka NEU180 Series Upright & NER300 Series Robotic Vacuum Cleaner Owner's Guide</p> <p>Comprehensive owner's guide for Eureka NEU180 series upright and NER300 series robotic vacuum cleaners, covering assembly, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>Eureka NEY100 Series Spot Cleaner Owner's Guide</p> <p>This document provides comprehensive instructions for the Eureka NEY100 Series spot cleaner, covering setup, operation, maintenance, troubleshooting, and warranty information. Learn how to use your Eureka spot cleaner effectively and safely.</p>
	<p>Eureka 100 easyclean 2-in-1 Combi-Vac Owner's Manual & Guide</p> <p>Official owner's manual and guide for the Eureka 100 easyclean 2-in-1 Combi-Vac with Detachable Hand Vac. Includes assembly, usage, maintenance, troubleshooting, and warranty information. Hosted by Appliance Factory Parts.</p>
	<p>Eureka AirSpeed Bagless Zuum Vacuum Belt Replacement Guide</p> <p>Step-by-step instructions for replacing the belt on a Eureka AirSpeed Bagless Zuum Vacuum cleaner, provided by iFixit. Includes required tools and detailed procedures for safe and effective belt replacement.</p>

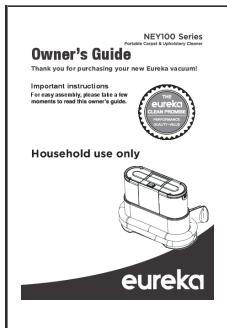

[Eureka NEY100 Series Portable Carpet & Upholstery Cleaner Owner's Guide](#)

This owner's guide provides essential instructions for setting up, operating, maintaining, and troubleshooting the Eureka NEY100 Series portable carpet and upholstery cleaner. Designed for household use.