

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ISLANDSAFE](#) /

› [ISLANDSAFE Digital Electronic Lock Box QT User Manual](#)

ISLANDSAFE QT

ISLANDSAFE Digital Electronic Lock Box QT User Manual

Model: QT

1. INTRODUCTION

Thank you for choosing the ISLANDSAFE Digital Electronic Lock Box. This manual provides essential information for the safe and efficient operation of your new security safe. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The ISLANDSAFE Digital Electronic Lock Box QT, shown open with various items stored inside, including a baseball, medicine bottles, a watch, and a camera lens.

2. SAFETY INFORMATION

- Always keep the emergency keys in a secure location, separate from the safe and away from unauthorized access.
- Do not store the emergency keys inside the safe.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Replace batteries promptly when the low battery indicator appears to avoid being locked out.
- Avoid exposing the safe to extreme temperatures or moisture.

3. PACKAGE CONTENTS

Verify that all components are present:

- ISLANDSAFE Digital Electronic Lock Box QT
- Emergency Keys (2)
- Emergency Battery Box
- Removable Shelf (1)
- Mounting Hardware (Expansion Screws)
- User Manual (This document)

4. PRODUCT OVERVIEW

The ISLANDSAFE Digital Electronic Lock Box QT features a robust design with multiple security and convenience elements.

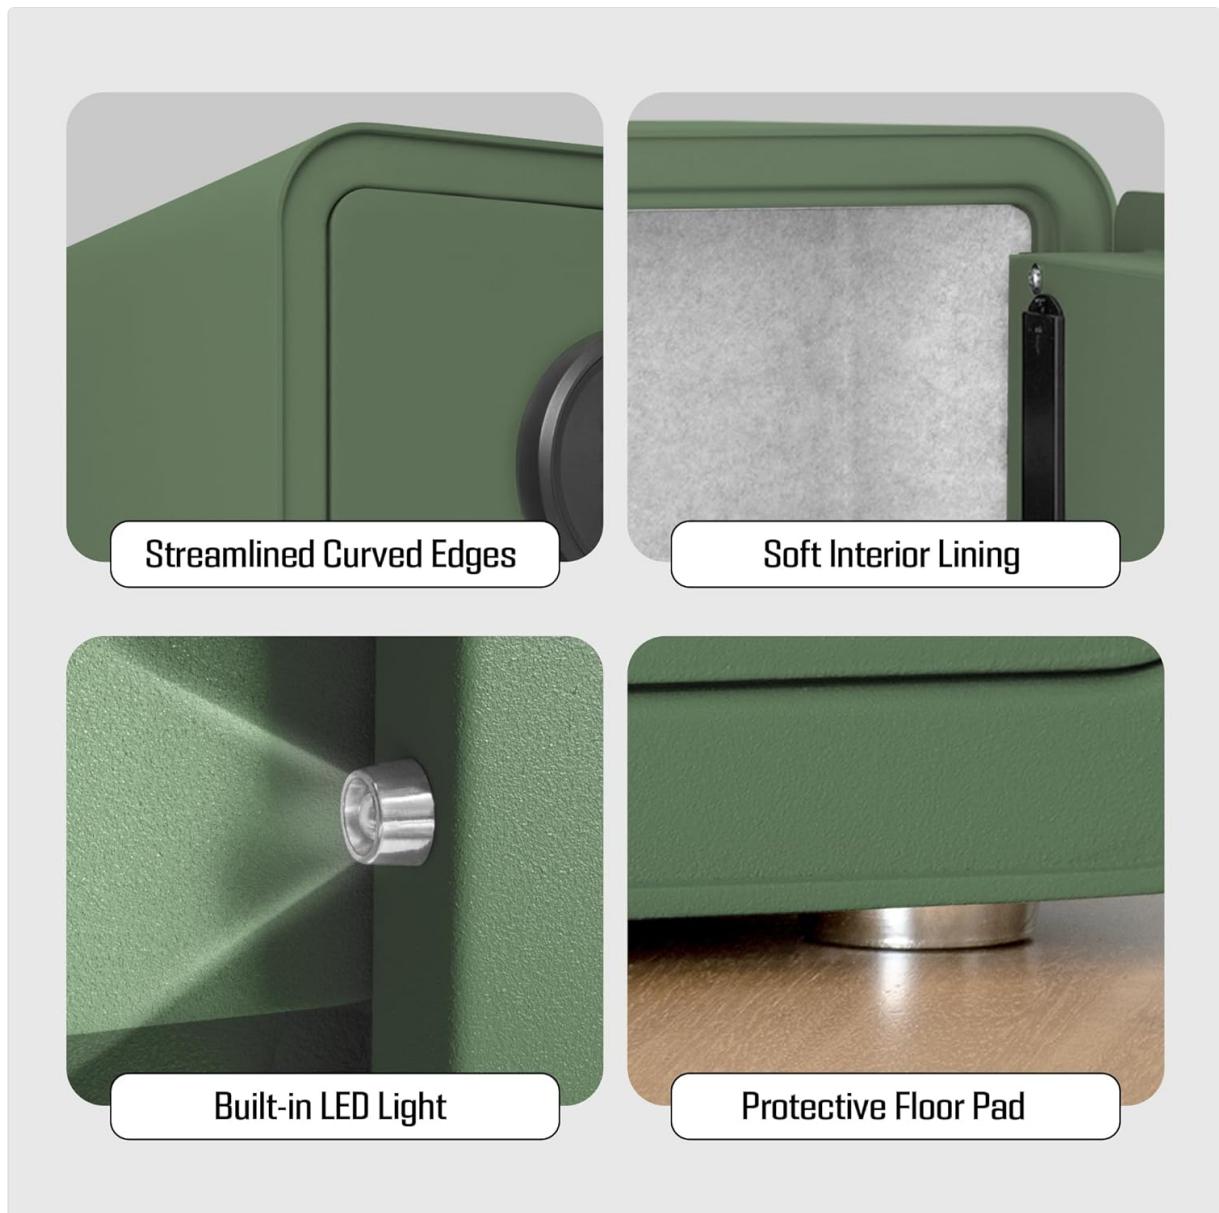


Image 4.1: Detailed views of the safe's features, including streamlined curved edges for safety, soft interior lining to protect contents, a built-in LED light for visibility, and a protective floor pad.

Key Features:

- **Child-Safe Curved Steel Body:** Designed with smooth, rounded edges.
- **5mm Thick Pry-Resistant Door:** Enhances security against forced entry.
- **Dual Solid Steel Bolts:** Provides strong locking mechanism.
- **Removable Shelf:** Allows for flexible organization of contents.
- **Soft Interior Lining:** Protects delicate items from scratches.
- **Built-in LED Light:** Illuminates the interior for easy access in low light.
- **Protective Floor Pad:** Prevents damage to surfaces.
- **Dual Alarm System:** Activates after 3 incorrect passcode entries or violent shaking.

MAXIMUM SECURITY



Image 4.2: An illustration highlighting the safe's maximum security features, including the child-safe curved steel body, the 5mm thick pry-resistant door, and the dual solid steel bolts.



Image 4.3: An animated demonstration of the dual solid steel bolts engaging and disengaging, illustrating the locking mechanism.



Image 4.4: An animated demonstration of the interior LED light activating and deactivating, providing visibility inside the safe.

5. SETUP

5.1 Initial Opening and Battery Installation

1. Locate the emergency keyhole behind the keypad cover.
2. Insert one of the emergency keys into the keyhole and turn it counter-clockwise.
3. While holding the key, turn the knob clockwise to open the safe door.
4. Inside the safe, locate the battery compartment on the back of the door.
5. Insert 4 AA batteries (not included) into the compartment, ensuring correct polarity.
6. Close the battery compartment.

Image 5.1: An animated guide demonstrating the process of using the emergency key to open the safe door.

5.2 Mounting Instructions

The safe has pre-drilled mounting holes in the back for secure installation.

1. Choose a suitable location for mounting (e.g., wall or cabinet).
2. Mark the drilling points through the pre-drilled holes on the safe's back panel onto the mounting surface.
3. Drill pilot holes at the marked points.
4. Align the safe with the drilled holes and secure it using the provided expansion screws.
5. Ensure the safe is firmly attached and stable.

6. OPERATING INSTRUCTIONS

6.1 Setting/Changing the Passcode

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinge). The indicator light on the keypad will flash.
2. Enter your desired 3-8 digit passcode on the keypad.
3. Press the '#' button to confirm. The indicator light will stop flashing, confirming the new passcode is set.

6.2 Opening the Safe

3 SECURE ACCESS MODES



MODE 1

Keypad Entry



- 1- Enter your passcode.
- 2- Turn the knob clockwise to unlock.

MODE 2

Override Key



- 1- Insert the key and turn it counter-clockwise.
- 2- Hold the key, and turn the knob clockwise to unlock.

MODE 3

Emergency Power



- 1- Connect the emergency battery box.
- 2- Enter your passcode.
- 3- Turn the knob clockwise to unlock.

Image 6.1: An overview of the three secure access modes for the safe: Keypad Entry, Override Key, and Emergency Power.

Mode 1: Keypad Entry

1. Enter your 3-8 digit passcode.
2. Turn the knob clockwise within 5 seconds to unlock the safe.



Image 6.2: A close-up view demonstrating the keypad entry process for opening the safe.

Mode 2: Override Key

Use this mode if you forgot your passcode or if the batteries are completely drained.

1. Remove the keypad cover to reveal the emergency keyhole.
2. Insert an emergency key and turn it counter-clockwise.
3. While holding the key, turn the knob clockwise to unlock.



Image 6.3: A close-up view demonstrating the use of the override key to open the safe.

Mode 3: Emergency Power

Use this mode if the batteries are dead and you do not have the override key readily available, or prefer to use the keypad.

1. Connect the emergency battery box to the external power port on the keypad.
2. Enter your passcode on the keypad.
3. Turn the knob clockwise to unlock.



Image 6.4: A close-up view demonstrating how to connect the emergency battery box for temporary power.

6.3 Alarm System

The safe is equipped with a dual alarm system for enhanced security.

- **Incorrect Passcode Alarm:** If an incorrect passcode is entered 3 consecutive times, the alarm will sound for 60 seconds.
- **Vibration/Attack Alarm:** If the safe experiences violent shaking or an attempted attack, the alarm will sound for 60 seconds.

To silence the alarm, enter the correct passcode or use the emergency key to open the safe.

DUAL ALARM SYSTEM

The alarm will be triggered in case of 3 false passcode entry times or violent shaking.

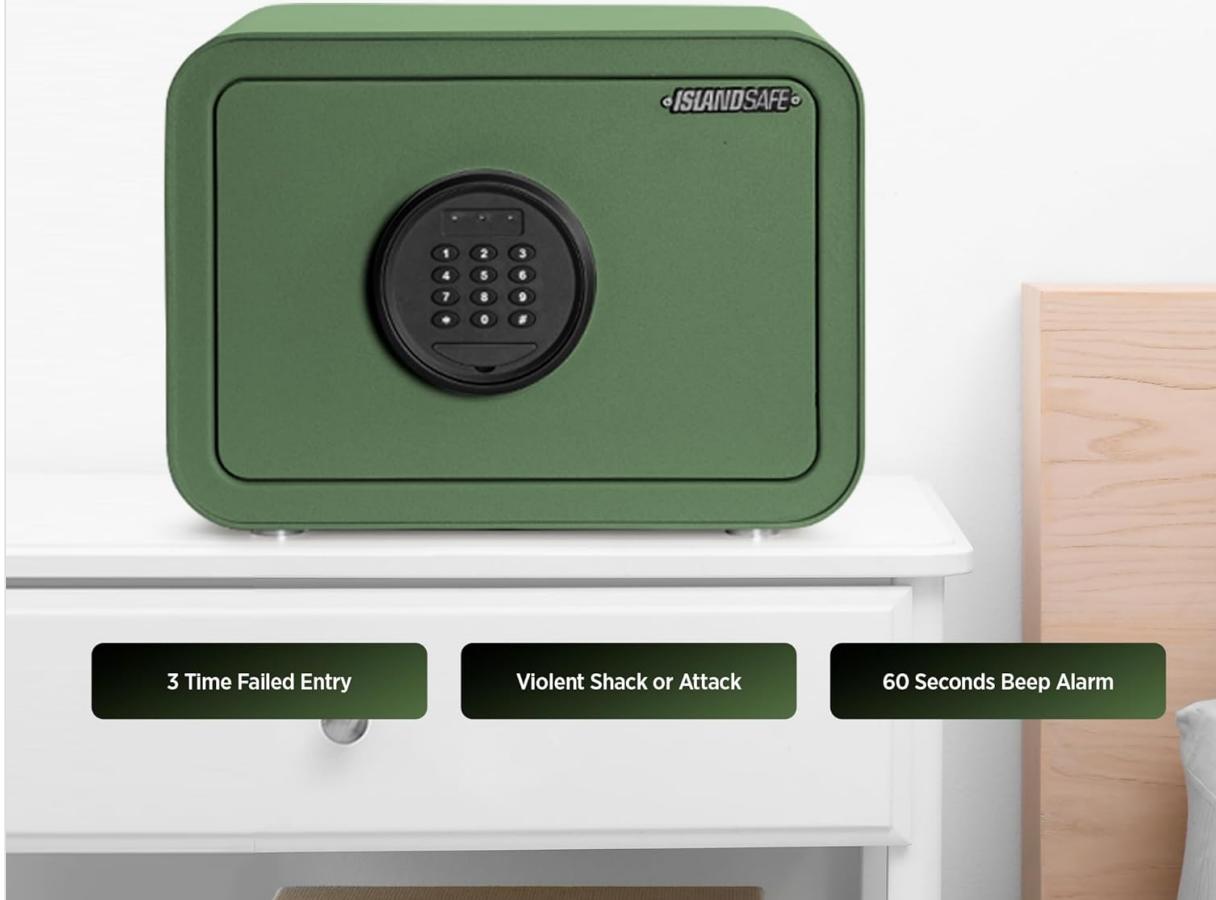


Image 6.5: An illustration detailing the dual alarm system, which is triggered by three failed passcode entries or violent shaking, resulting in a 60-second audible alarm.



Image 6.6: A close-up view of the alarm button located on the inside of the safe door.

7. MAINTENANCE


- **Battery Replacement:** Replace the 4 AA batteries when the low battery indicator light illuminates on the keypad. Always use new, high-quality batteries.
- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents.
- **Interior:** The interior lining can be gently vacuumed or wiped with a dry cloth to remove dust.

- **Keypad:** Keep the keypad clean and dry. Avoid pressing buttons with excessive force.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; Dead batteries; Knob not turned within 5 seconds.	Re-enter correct passcode; Replace batteries or use emergency battery box; Enter passcode and turn knob promptly.
Keypad is unresponsive.	Dead batteries.	Use emergency battery box or emergency key to open and replace batteries.
Alarm sounds unexpectedly.	3 incorrect passcode entries; Safe was shaken or impacted.	Enter correct passcode or use emergency key to disarm.
Door does not close properly.	Obstruction in the door frame; Locking bolts are extended.	Check for obstructions and remove; Ensure knob is turned counter-clockwise to retract bolts before closing.

9. SPECIFICATIONS

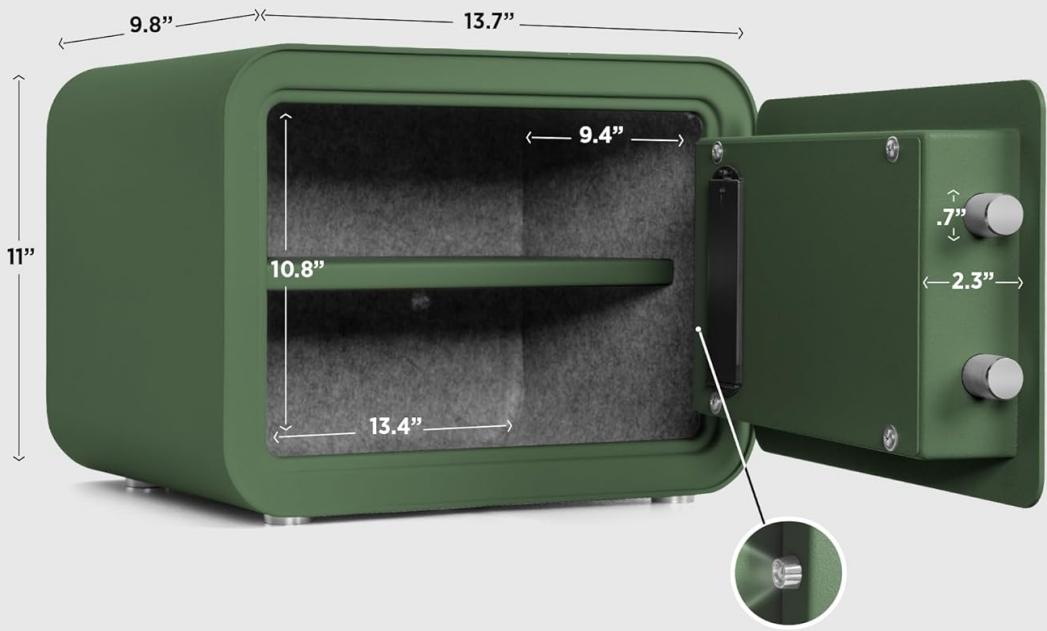

Door Opening: 90 degree

Locking Bolts: 2 Live Bolts (20mm)

Shelf: 1 Removable Shelf

Interior: Carpeted Wall

Exterior Dimensions: 9.8" x 13.7" x 11" (H x W x D)

Interior Dimensions: 9.4" x 13.4" x 10.8" (H x W x D)

Weight: 22.04 lb

Lighting: Built-in Interior LED Light

 
 

Image 9.1: A comprehensive diagram illustrating the exterior and interior dimensions, door opening angle, locking bolts, shelf, interior features, weight, and lighting of the safe.

- **Brand:** ISLANDSAFE
- **Model:** QT
- **Lock Type:** Electronic Combination Lock
- **Material:** Alloy Steel
- **Color:** Green
- **Capacity:** 0.9 Cubic Feet
- **Exterior Dimensions:** 9.8"D x 13.7"W x 11"H
- **Interior Dimensions:** 9.4"D x 13.4"W x 10.8"H
- **Item Weight:** 17.6 pounds (8 Kilograms)
- **Special Features:** Alarm System, Anti-Theft, Portable, Removable Shelf, Built-in LED Light
- **Mounting Type:** Wall Mount (pre-drilled holes)
- **Power Source:** 4 AA Batteries (not included)

10. WARRANTY AND SUPPORT

ISLANDSAFE products are designed for reliability and durability. For warranty information, technical support, or any questions regarding your product, please refer to the contact information provided with your purchase or visit the official ISLANDSAFE website. Please have your model number (QT) and purchase details ready when contacting support.

Related Documents - QT

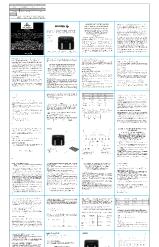	<p><u>IslandSafe Double-Head External Emergency Battery Box User Guide</u></p> <p>Instructions for installing and using the IslandSafe Double-Head External Emergency Battery Box, including battery replacement and contact information.</p>
	<p><u>ISLANDSAFE Flower Pot Safe: User Guide and Installation Instructions</u></p> <p>Learn how to use and install your ISLANDSAFE Flower Pot Safe. This guide covers setup, contents, and important usage tips for your discreet security solution.</p>
	<p><u>IslandSafe Double-Head External Emergency Battery Box User Guide</u></p> <p>Instructions for installing and using the IslandSafe Double-Head External Emergency Battery Box, including battery replacement and contact information.</p>
	<p><u>ISLANDSAFE Flower Pot Safe: User Guide and Installation Instructions</u></p> <p>Learn how to use and install your ISLANDSAFE Flower Pot Safe. This guide covers setup, contents, and important usage tips for your discreet security solution.</p>
 Smart Door Knob USER MANUAL DS02-QT-03	<p><u>Smart Door Knob User Manual - Model DS02-QT-03</u></p> <p>User manual for the Smart Door Knob DS02-QT-03, detailing installation, features, app integration with Tuya/Smart Life, functional settings, and FCC compliance. This guide provides comprehensive instructions for setting up and operating your smart lock.</p>
	<p><u>Holstein Housewares 9.5 qt. Dual Basket Digital Air Fryer Instruction Manual</u></p> <p>Detailed instructions and safety information for the Holstein Housewares 9.5 qt. Dual Basket Digital Air Fryer (Model HH-09202019B). Learn how to roast, bake, and grill with this versatile kitchen appliance.</p>