

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Eureka](#) /
- › [Eureka AK10 Pet Cordless Stick Vacuum Cleaner User Manual](#)

Eureka AK10

Eureka AK10 Pet Cordless Stick Vacuum Cleaner User Manual

Model: AK10

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Store the appliance indoors. Put away after use to prevent accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

2. PRODUCT OVERVIEW

The Eureka AK10 Pet Cordless Stick Vacuum Cleaner is designed for versatile and efficient cleaning. It features a powerful motor, long battery life, and a multi-stage filtration system to tackle various cleaning tasks.



Image: The Eureka AK10 Pet Cordless Stick Vacuum Cleaner, showcasing its sleek design and main components.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- Main Vacuum Body
- Extension Wand
- Motorized Floor Brush
- Removable Battery Pack
- Charger
- Wall Mount
- Crevice Tool
- 2-in-1 Upholstery Tool
- Mini Power Brush (for pet hair)
- Extension Hose
- User Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Eureka AK10 Pet vacuum cleaner:

1. **Attach the Extension Wand:** Insert the extension wand into the main vacuum body until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension wand. Ensure it clicks firmly.
3. **Install the Battery:** Slide the removable battery pack into the slot on the main vacuum body until it locks.
4. **Charge the Battery:** Before first use, fully charge the battery. Connect the charger to the battery pack or directly to the vacuum if the battery is installed. The LED display will indicate charging status.
5. **Wall Mount Installation (Optional):** Choose a suitable location near a power outlet. Mark and drill holes, then secure the wall mount using the provided screws and anchors. The vacuum can be stored on the wall mount.



Image: Left: Wall mount for convenient storage. Right: Detachable battery for flexible charging.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Suction Modes

Press the power button to turn on the vacuum. The LED display will show the current suction mode and battery level. Cycle through the three suction modes (Eco, Standard, Boost) using the mode selection button to suit your cleaning needs.

- **Eco Mode:** Up to 60 minutes runtime for daily light cleaning.
- **Standard Mode:** Approximately 30 minutes runtime for quick, general cleaning.
- **Boost Mode:** Up to 8 minutes runtime for deep cleaning heavily soiled areas.

26000Pa
Leistungsstarke
Saugkraft

60min
ECO
Tägliche Reinigung

30min
Standard
Schnelle Reinigung

8min
Boost
Reinigung von stark
verschmutzten Flächen

Image: The vacuum in use, illustrating the three power modes (Eco, Standard, Boost) and 26KPa suction power.

Flexible Bürste

LED-Beleuchtung - Saubere Ecken mit Leichtigkeit



Image: Close-up of the all-in-one LED display showing suction modes and battery status.

5.2 Using Attachments

The Eureka AK10 Pet comes with various attachments for different cleaning scenarios:

- **Motorized Floor Brush:** Ideal for hard floors, tiles, laminate, and carpets. Features LED headlights to illuminate dark areas.
- **Crevice Tool:** For narrow gaps, corners, and edges.
- **2-in-1 Upholstery Tool:** For cleaning furniture, curtains, and car interiors.
- **Mini Power Brush:** Specifically designed for removing pet hair from upholstery and small carpeted areas.
- **Extension Hose:** Provides extended reach for difficult-to-access areas.

5-stufiges Zyklon-Filterssystem

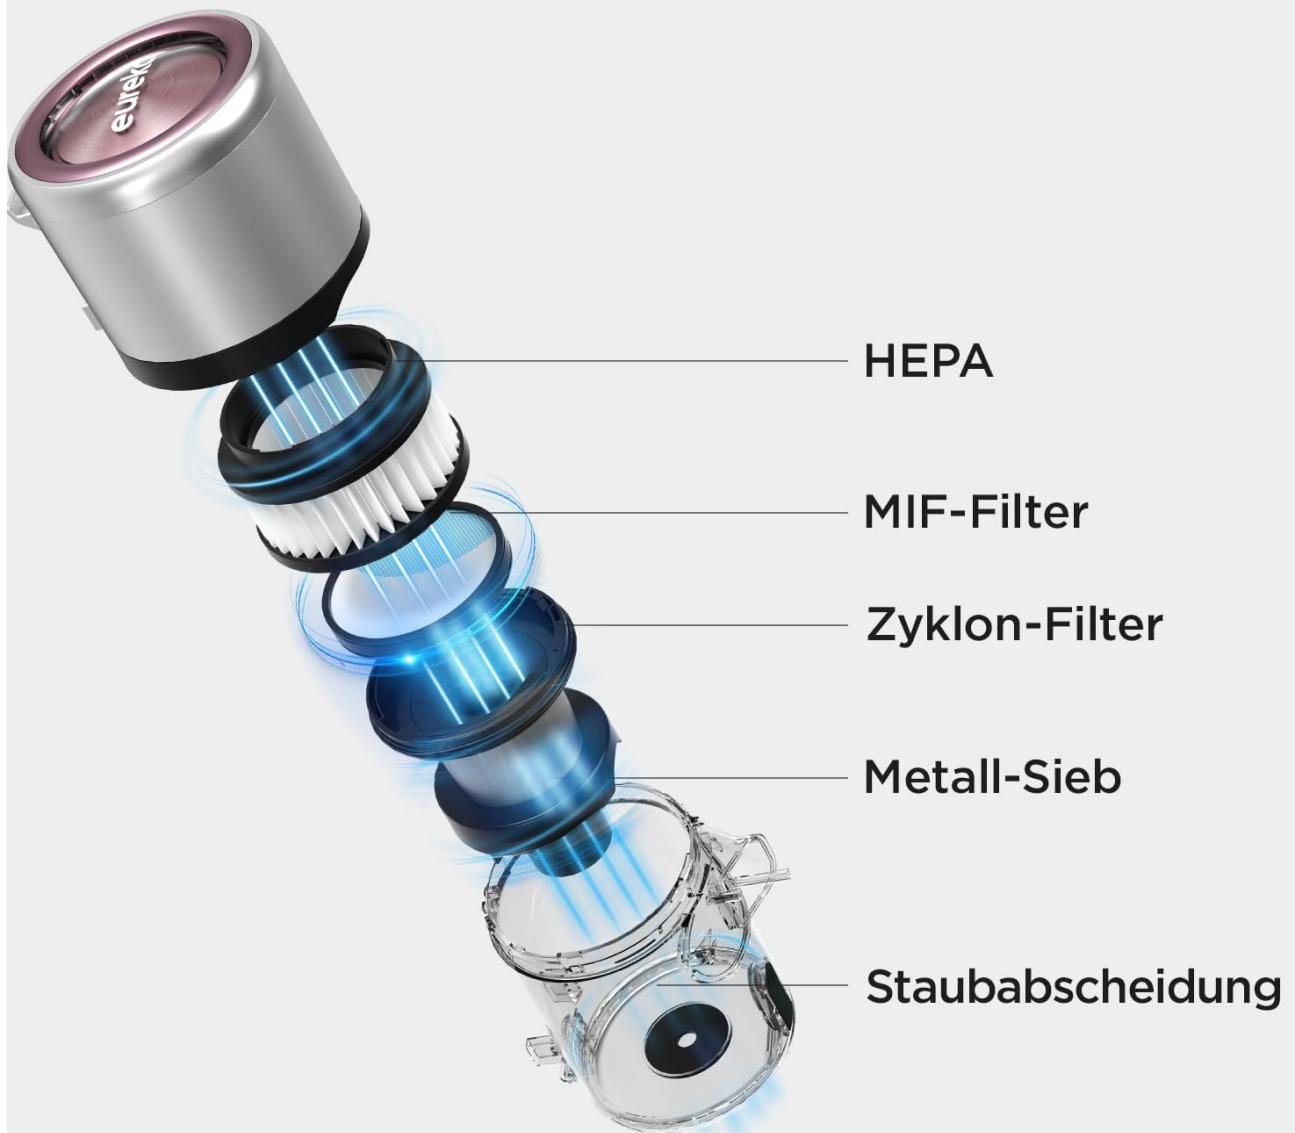


Image: The vacuum cleaning various floor types including hard floor, carpet, and tile.

Geeignet für alle Böden



Image: Demonstrates the versatility of the vacuum with different attachments for cleaning car interiors, sofas, and high surfaces.

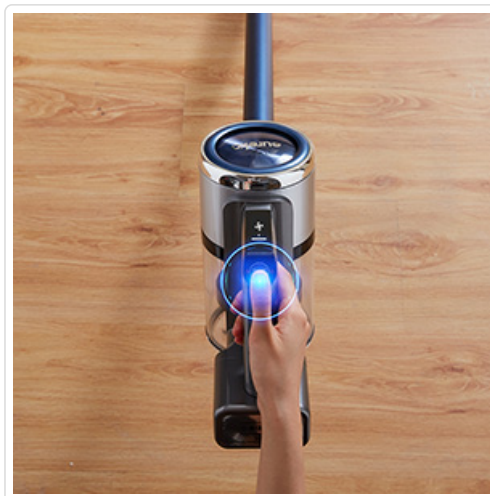


Image: Left: LED lights on the floor brush illuminating debris. Right: Hand operating the one-touch control panel.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Cup

Empty the dust cup after each use or when it reaches the MAX fill line. Press the dust cup release button to detach it from the main body, then open the bottom flap to empty contents into a trash bin.



Image: A person emptying the dust cup into a trash bin.

6.2 Cleaning Filters

The Eureka AK10 Pet features a 5-stage cyclonic filtration system with a HEPA filter. Clean the filters regularly to maintain suction power.

- **Pre-Motor Filters (MIF Filter, Cyclone Filter, Metal Mesh):** Remove these filters from the dust cup. Tap off loose dirt. Rinse under cold water until the water runs clear. Allow to air dry completely for at least 24 hours before reassembling.
- **HEPA Filter:** The HEPA filter should be cleaned periodically. Tap off loose dirt. If heavily soiled, it can be rinsed under cold water. Ensure it is completely dry before reinstallation.

It is recommended to clean the pre-motor filters monthly and the HEPA filter every 3-6 months, depending on usage.

ALL-in-One LED-Anzeige



Image: Diagram illustrating the 5-stage cyclonic filtration system, including HEPA, MIF, Cyclone, and Metal Mesh filters.



Image: A person rinsing the dust cup and filter under running water.

6.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. To clean, turn off the vacuum and remove the brush roll cover. Carefully cut

away any tangled hair or fibers using scissors. Reinstall the brush roll and cover securely.

7. TROUBLESHOOTING

If you encounter issues with your vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power	Dust cup full, filters clogged, or blockage in hose/brush roll.	Empty dust cup, clean filters, check for and remove blockages.
Brush roll not spinning	Brush roll tangled with hair/debris or obstructed.	Turn off vacuum, remove brush roll cover, clear any obstructions.
Short battery runtime	Battery not fully charged or operating in Boost mode.	Fully charge battery. Use Eco or Standard mode for longer runtime.

8. SPECIFICATIONS

Detailed technical specifications for the Eureka AK10 Pet Cordless Stick Vacuum Cleaner:

Feature	Specification
Model Number	AK10
Power	450 Watts
Voltage	29.6 Volts
Suction Power	26 KPa
Battery Type	Lithium-ion
Max Runtime	60 minutes (Eco mode)
Charge Time	3.5 hours
Filter Type	5-stage cyclonic with HEPA filter
Weight	3 Kilograms
Dimensions (L x W x H)	30 x 11 x 120 cm
Noise Level	82 Decibels
Recommended Surface	Hard floor, Carpet, Tile

9. WARRANTY AND SUPPORT

This Eureka AK10 Pet Cordless Stick Vacuum Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty duration and coverage details.

For technical support, replacement parts, or warranty claims, please contact Eureka customer service. Contact information can typically be found on the Eureka official website or on your product packaging.

