

[Manuals.plus](#) /

> [Aurabeam](#) /

> Aurabeam Replacement Remote Control User Manual for Telefunken TV Models

Aurabeam RC4318/RC4318P

Aurabeam Replacement Remote Control User Manual

MODEL: RC4318/RC4318P

Product Overview

This Aurabeam replacement remote control is specifically designed for use with a wide range of Telefunken television models. It requires no complex programming and is ready for immediate use upon battery insertion, providing a seamless replacement for your original remote.



Image: Front view of the Aurabeam replacement remote control, showcasing its button layout.

Key Features

- **No Programming Required:** Ready to use directly out of the box; simply insert batteries.

- **Direct Replacement:** Functions identically to the original remote control for compatible Telefunken TVs.
- **Infrared Technology:** Ensures reliable and responsive control of your television.
- **Wide Compatibility:** Supports numerous Telefunken TV models.
- **One-Year Warranty:** Provides assurance of product quality and reliability.

Setup

Battery Installation

The remote control operates on standard alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open it.
3. Insert two new alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control, highlighting the battery compartment.

Operating Instructions

Basic Operation

This remote control provides full functionality for your compatible Telefunken TV. For optimal performance, point the remote directly at the TV's infrared receiver.

Power Button (⏻): Turns the TV on or off.

Number Buttons (0-9): Directly select channels.

Volume Up/Down (+/-): Adjusts the sound level.

Channel Up/Down (P^/P^v): Changes the TV channel.

Navigation Buttons (Up, Down, Left, Right, OK): Navigate through menus and confirm selections.

Back Button: Returns to the previous menu or screen.

Exit Button: Exits the current menu or application.

Netflix/YouTube/Prime Video Buttons: Provide direct access to these streaming applications.

Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward): Control media playback functions.



Image: Angled view of the remote control, showing the layout of the navigation, media, and dedicated app buttons.

Compatibility

This Aurabeam remote control is compatible with a wide range of Telefunken TV models. The following is a comprehensive list of supported models:

D49U297N4CWH-CN, 22M302, 287M4CWI, 32DTH531, 32FTV660BK, 32M528, 40DTF531, 40U298N4CWH, 49DTU652, 49U700M4CWH, 55DTU652, 65UBS3, 97N4CWH, C40U446, C40U446A, C49U446A, C55U446A, C58U446A, D32F289M4CWII, D32F472R4CW, D32F500006R4CW, D32F545A, D32F550O1CW, D32F551R1CW, D32F553M1CW, D32F553R1CWW, D32F553R1CW-W, D32H287M4CWI, D32H289J4CW9M4CWD, D32H289N4CWD, D32H289N4CWI, D32H289W4CW, D32H470B4CWII, D32H472E4CW, D32H472E4CWW, D32H472E4CW-W, D32H472X4CWI, D32H502N4CW, D32H502X4CW, D32H550F4CW, D32H553E1CW, D32HXU43E512, D39F502N4CW, D39F506B4CW, D39F506M4, D39F506M4CW, D39F506R4CW, D39F550O1CW, D40F289R4CW, D40F502N4CW, D40U289O4CWH, D40U296W4CWH, D40U297M4CW, D40U297M4CWI, D40U298N4CWH, D40U502N4CWH, D40U551R1CW, D43F287N4CW, D43F287N4CWI, D43F289X4CW, D43F470N4CWI, D43F500M4CW, D43F550B1CW, D43CW, D43CW, D43CW, D43F550B1CW, D43CW, D43F551N1CW, D43F553E1CW, D43U2, D43U296E4CWH, D43U297B4CW, D43U297N4CWH, D43U550E4CWH, D43U551J1CW, D43U551N1CW, D43U55551CW, D43U551R1CW, D43U600M4CWII, D43U660B1CW, D43U700M4CWH, D43U700M4CWH, D43V800M4CWH, D43V900M4CWH, D49F470O4CW, D49U296E4CWH, D49U297N4CWH, D49U700M4CWH, D50U293N4CWH, D50U550B4CW, D50U550N4CWH, D50U550O1CW, D50U551N1CW, D50U551R1CW, D50U600M4CWII, D50V800M4CWH, D55U296E4CWH, D55U297N4CWHI, D55U297N4CWI, D55U446A, D55U500B4CWI, D55U5550B4CW, D4CW, D4CW, 55U5551N1CW, D55U551N4CWH, D55U700M4CWH, D55V800M4CWH, D58U446A, D58U551N4CWH, D58U551R1CW, D58U553M1CW, D65U400N4CW4CW4CWH, D65U700M4CWH, D65V800M4CWH, DF32H0119YRM, ED4903UHD, ED5503UHD, FIN32FTV660BK, H32V32A, H43V32, H43V32A, HF32J8000, JT32FBS200, JT-32FBS200, JT55UBS300, JT-55UBS300, JT65UBS300, JT-65UBS300, L24H472F4CWI, L24H472F4CWVWI, L24H472F4CWV-WI, L55U405N4CW4CW4CW4CWWW4CW4CWH, SOMNIA24ESTV, SOMNIA40DSTV, SOMNIA40DS TVTE, ST, STWEB, T40EX4519, T43EX4520, T50EX8520, TE, L32SWB172, TFL40UHD19B, TFL4901UHD18B, TFL49UHD19BC, TVF, TVF22M302STWEB, WEB, XF22G501VD, XF32G519D, XF32J511, XF39G511, XF40G511W, XF40G511-W, XF43G511, XF43G511W, XF43G511-W, XH24G501VD, XH32G111DW, XH32G111D-W, XH32G11S, XH32G11-S, XH32G111W, XH32G111-W, XH32G511, XH32G511D, XH32G511DW, XH32G511D-W, XH32G511W, XH32G511-W, XH32J511, XU40G521, XU43E512, XU43G521, XU43J521, XU49G521, XU50G521, XU50J521, XU55AJ600, XU55E512, XU55G521, XU55J521, XU55K521, XU58G521, XU65AJ600, XU65G529, XU65H529.

Troubleshooting

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the TV is powered on.
- **Limited range:**
 - Ensure there are no objects blocking the signal path between the remote and the TV.
 - Replace batteries if they are low, as weak batteries can reduce range.
- **Specific buttons not working:**
 - This remote is a direct replacement. If specific buttons are not functioning, ensure your TV model is fully compatible by checking the compatibility list.

Product Specifications

Brand	Aurabeam
Model Number	RC4318/RC4318P

Connectivity Technology	Infrared
Maximum Range	10 Meters
Controller Type	Button Control
Compatible Devices	Television
Battery Type	Alkaline (not included)
Special Feature	No programming required
UPC	723452831250

Warranty and Support

This Aurabeam remote control comes with a one-year warranty from the date of purchase. For warranty claims or technical support, please contact your retailer or refer to the contact information provided with your purchase. Please retain your proof of purchase for warranty validation.