

## Aurabeam RC4318/RC4318P

# Aurabeam Replacement Remote Control Instruction Manual

Model: RC4318/RC4318P

## INTRODUCTION

---

This manual provides instructions for the Aurabeam RC4318/RC4318P replacement remote control. This remote is designed to function as a direct replacement for your original Telefunken TV remote, requiring no programming. Simply insert batteries, and it is ready for use.

**Compatible Telefunken TV Models include:** D43U551N1CW, D43U551N1CW-CN, 00, 22M302, 287M4CWI, 32DTH531, 32FTV660BK, 32M528, 40DTF531, 40U298N4CWH, 49DTU652, 49U652, 700M4CWH, 55DTU652, 65UBS3, 97N4CWH, C40U446, C40U446A, C55U446A, C58U446A, D32F289M4CWII, D32F472R4CW, D32F506R4CW, D32F545A, D32F550O1CW, D32F551R1CW, D32F553M1CW, D32F553R1CWW, D32F553R1CW-W, D32H287M4CWI, D32H289J4CWM4CWD, D32H289N4CWD, D32H289N4CWI, D32H289W4CW, D32H470B4CWII, D32H472E4CW, D32H472E4CWW, D32H472E4CW-W, D32H472X4CWI, D32H502N4CW, D32H502X4CW, D32H550F4CW, D32H553E1CW, D32HXU43E512, D39F502N4CW, D39F506B4CW, D39F506M4, D39F506M4CW, D39F506R4CW, D39F550O1CW, D40F289R4CW, D40F502N4CW, D40U289O4CWH, D40U296W4CWH, D40U297M4CW, D40U297M4CWI, D40U2984CWH, D40U502N4CWH, D40U551R1CW, D43F287N4CW, D43F287N4CWI, D43F289X4CW, D43F470N4CWI, D43F500M4CW, D43F550B1CW, D43F550F1CW, D43F551N1CW, D43F553E1CW, D43U2, D43U296E4CWH, D43U297B4CW, D43U297N4CWH, D43U550E4CWH, D43U551J1CW, D43U551N1CW, D43U555R1R1CW, D43U600M4CWII, D43U660B1CW, D43U7000M4CWH, D43U700M4CWH, D43V800M4CWH, D43V900M4CWH, D49F470O4CW, D49U296E4CWWWWWH, D49U297N4CWH, D49U700M4CWH, D50U293N4CWH, D50U550B4CW, D50U550N4CWH, D50U550O1CW, D50U551N1CW, D50U551R1CW, D50U60U60U60U600M4CWII, D50V800M4CWH, D55U296E4CWH, D55U297N4CWH, D55U297N4CWHI, D55U297N4CWI, D55U446A, D55U500B4CWI, D55U5550B4CW, D50B4CW, D5555550B4CW, D50B4CW, D50B4CW, D55U551N1CW, D55U551N4CWH, D55U700M4CWH, D55V800M4CWH, D58U446A, D58U551N4CWH, D58U551R1CW, D58U553M1CW, D65U400N4CWH, D65U700M4CWH, D65V800M4CWH, DF32H0119YRM, ED4903UHD, ED5503UHD, FIN32FTV660BK, H32V32A, H43V32, H43V32A, HF32J8000, JT32FBS200, JT-32FBS200, JT55UBS300,

JT-55UBS300, JT65UBS300, JT-65UBS300, L24H472F4CWI, L24H472F4CWVWI, L24H472F4CWV-WI, L55U405N4CWH, SOMNIA24ESTV, SOMNIA40DSTV, SOMNIA40DSTVTE, ST, STWEB, T40EX4519, T43EX4520, T50EX8520, TE4, L32SWB172, TFL40UHD19B, TFL4901UHD18B, TFL49UHD19BC, TVF, TVF22M302STWEB, WEB, XF22G501VD, XF32G519D, XF32J511, XF39G511, XF40G511W, XF40G511-W, XF43G511, XF43G511W, XF43G511-W, XH24G501VD, XH32G111DW, XH32G111D-W, XH32G11S, XH32G11-S, XH32G111W, XH32G111-W, XH32G511, XH32G511D, XH32G511DW, XH32G511D-W, XH32G511W, XH32G511-W, XH32J511, XU40G521, XU43E512, XU43G521, XU43J521, XU49G521, XU50G521, XU50J521, XU55AJ600, XU55E512, XU55G521, XU55J521, XU55K521, XU58G521, XU65AJ600, XU65G529, XU65H529.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



*Image: Rear view of the remote control, highlighting the battery compartment cover.*

## **2. Initial Use**

This Aurabeam replacement remote control is pre-programmed for compatible Telefunken TV models. No additional setup or programming is required. Once batteries are installed, the remote is ready for immediate use with your television.

## **OPERATING INSTRUCTIONS**

---

The remote control features standard television functions and dedicated buttons for smart TV applications. Refer to the image below for button layout and descriptions.



*Image: Front view of the remote control, displaying all buttons and their labels.*

### **Button Functions:**

- **Power ( ):** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.

- **Volume Up/Down (V+/V-):** Adjusts the television volume.
- **Channel Up/Down (P+/P-):** Changes the television channel.
- **Mute ( ):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back:** Returns to the previous menu or screen.
- **Exit:** Exits the current menu or application.
- **Netflix:** Direct access to the Netflix application.
- **YouTube:** Direct access to the YouTube application.
- **Prime Video:** Direct access to the Amazon Prime Video application.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Record, Stop):** Controls media playback.
- **Source ( ):** Selects input sources (HDMI, AV, etc.).
- **Home (△):** Returns to the TV's home screen or smart hub.

## MAINTENANCE

---

### Cleaning the Remote Control

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Verify that the remote is pointed directly at the TV's IR sensor.
- **Some buttons not working:**
  - This may indicate low battery power. Try replacing the batteries.
  - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.
- **TV not responding to any remote commands:**
  - Ensure the TV is powered on and not in standby mode.
  - Try unplugging the TV from the power outlet for a few minutes, then plug it back in. This can sometimes reset the TV's IR receiver.
  - Confirm that your TV model is listed as compatible in the "Introduction" section.

## SPECIFICATIONS

---

Feature	Detail
Brand	Aurabeam
Model Number	RC4318/RC4318P
Connectivity Technology	Infrared (IR)
Compatible Devices	Telefunken Televisions (see Introduction for full list)
Controller Type	Button Control
Maximum Range	10 Meters
Batteries Required	2 x AAA (not included)
UPC	794207822670

## WARRANTY INFORMATION

---

This Aurabeam replacement remote control comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage. For warranty claims or further assistance, please contact your retailer or the manufacturer directly.

## CUSTOMER SUPPORT

---

If you encounter any issues not covered in the troubleshooting section or require further assistance, please refer to the contact information provided by your retailer or the Aurabeam official website for customer support.