

tectake 404549

TecTake® Rattan Garden Chairs User Manual

Model: TecTake 800332 (404549)

PRODUCT OVERVIEW

The TecTake® Set of 2 Rattan Garden Chairs provides a comfortable and stylish seating solution for outdoor spaces such as gardens, patios, and balconies. These chairs are constructed from durable, UV-resistant polyrattan and feature a sturdy steel frame. Designed for ease of use and maintenance, they include comfortable polyester seat cushions with water-repellent, removable covers, allowing for simple cleaning and seasonal storage. Their lightweight design facilitates easy transport and repositioning.

SETUP AND ASSEMBLY

The assembly process for your TecTake® Rattan Garden Chairs is designed to be quick and straightforward. Please ensure all components are present before beginning assembly.

Included Components:

- 2 x Rattan Garden Chairs (unassembled)
- 2 x Seat Cushions
- 4 x Cushion Covers (2 pre-installed, 2 additional)
- Assembly Materials (screws, bolts, tools if applicable)
- Assembly Instructions (this manual)

Assembly Steps:

1. Unpack all components and verify against the included components list.
2. Place the chair frame components on a clean, flat, and soft surface to prevent scratching.
3. Follow the step-by-step diagrams provided in the separate assembly instructions sheet (if applicable) to connect the chair back, seat, and armrest sections using the provided assembly materials. Ensure all connections are secure but do not overtighten until all parts are loosely fitted.
4. Once all parts are aligned, progressively tighten all screws and bolts until the chair frame is stable.
5. Place the seat cushions onto the assembled chairs. The water-repellent covers can be zipped onto the cushions.
6. Ensure the chairs are stable and do not wobble before use. Adjust leg caps if necessary.



This image displays a set of two black rattan garden chairs, each equipped with a light-colored seat cushion. In the foreground, two additional cushion covers in a slightly different shade are visible, indicating the availability of interchangeable covers. The chairs feature a woven polyrattan design and sturdy legs with metallic caps.

OPERATING INSTRUCTIONS

Your TecTake® Rattan Garden Chairs are designed for comfortable outdoor seating.

- **Placement:** Position the chairs on a flat, stable surface to ensure maximum stability and safety.
- **Cushion Use:** Place the provided seat cushions on the chair seats for enhanced comfort. The water-repellent surface helps protect against light spills and moisture.
- **Weight Limit:** Do not exceed the maximum load-bearing capacity of 120 kg (approximately 264 lbs) per chair.
- **Movement:** Due to their lightweight design, the chairs can be easily moved. Lift the chairs rather than dragging them to prevent damage to the legs or floor surfaces.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your rattan garden chairs.

Cleaning the Chairs:

- **Frame:** Wipe the polyrattan and steel frame with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly with clean water. Avoid abrasive cleaners or harsh chemicals.
- **Cushion Covers:** The cushion covers are removable and washable. Unzip the covers and follow the care instructions on the label, typically machine wash cold on a gentle cycle. Air dry or tumble dry on low heat. Ensure covers are completely dry before reattaching to cushions.
- **Cushions:** If the inner cushions become wet, allow them to air dry completely before storing or re-covering to prevent mildew.

Storage:

- During winter months or prolonged periods of non-use, it is recommended to store the chairs and cushions indoors or under a protective cover to prolong their lifespan and prevent weather damage.
- The chairs can be disassembled for more compact storage if needed.

TROUBLESHOOTING

If you encounter any issues with your TecTake® Rattan Garden Chairs, please refer to the following common solutions:

- **Chair Wobbles:**
 - Ensure all assembly screws and bolts are tightened evenly.
 - Verify the chair is placed on a flat and level surface.
 - Check if any of the plastic caps on the chair legs are damaged or missing. Replace if necessary.
- **Cushion Covers Not Fitting:**
 - Ensure the cushion is correctly oriented within the cover.
 - If covers have shrunk after washing, ensure they are fully dry and try stretching them gently while putting them on.
- **Rattan Weave Damage:**
 - Minor fraying can sometimes be trimmed carefully. For significant damage, contact the retailer or manufacturer for advice on repair or replacement parts.

SPECIFICATIONS

Brand	tectake
Model Name	TecTake 800332
Item Model Number	404549
Total Dimensions (WxDxH)	Approx. 59 x 57 x 85 cm (23.23 x 22.44 x 33.46 inches)
Seat Dimensions (WxD)	Approx. 45 x 44 cm (Seat Depth: 17.32 inches)
Height of Seat	38.5 cm
Cushion Thickness	5 cm
Height of Armrest	64 cm
Load-Bearing Capacity	120 kg (approx. 264 lbs)

Weight (each chair)	Approx. 6 kg (13.2 pounds)
Material	Powder-coated steel, polyethylene (polyrattan), 100% polyester (cushions)
Color	Black & Beige
Product Care Instructions	Wipe Clean

WARRANTY AND SUPPORT

For specific warranty information regarding your TecTake® Rattan Garden Chairs, please refer to the documentation provided at the time of purchase or contact the retailer directly. Warranty terms and conditions may vary. Should you require further assistance, have questions about assembly, or need to report a missing or damaged part, please contact the customer support of your retailer or the manufacturer, tectake. You can often find contact information on the retailer's website or by visiting the official tectake brand store online[Visit the tectake Store on Amazon](#)

