

## CubicFun MC271H

# CubicFun MC271H 3D Puzzle Instruction Manual

Model: MC271H

## INTRODUCTION

---

This manual provides instructions for assembling the CubicFun MC271H 3D Puzzle, featuring the Warsaw Cityline. This model is designed for enthusiasts and collectors, offering an engaging assembly experience without the need for additional tools.

## SAFETY INFORMATION

---

**Warning:**

- Not suitable for children under 3 years due to small parts which may present a choking hazard.
- Packaging is not a toy. Please store packaging as it contains important information.

## PACKAGE CONTENTS

---

Before beginning assembly, please ensure all components are present:

- 1 x CubicFun MC271H 3D Jigsaw Puzzle set (126 pieces)

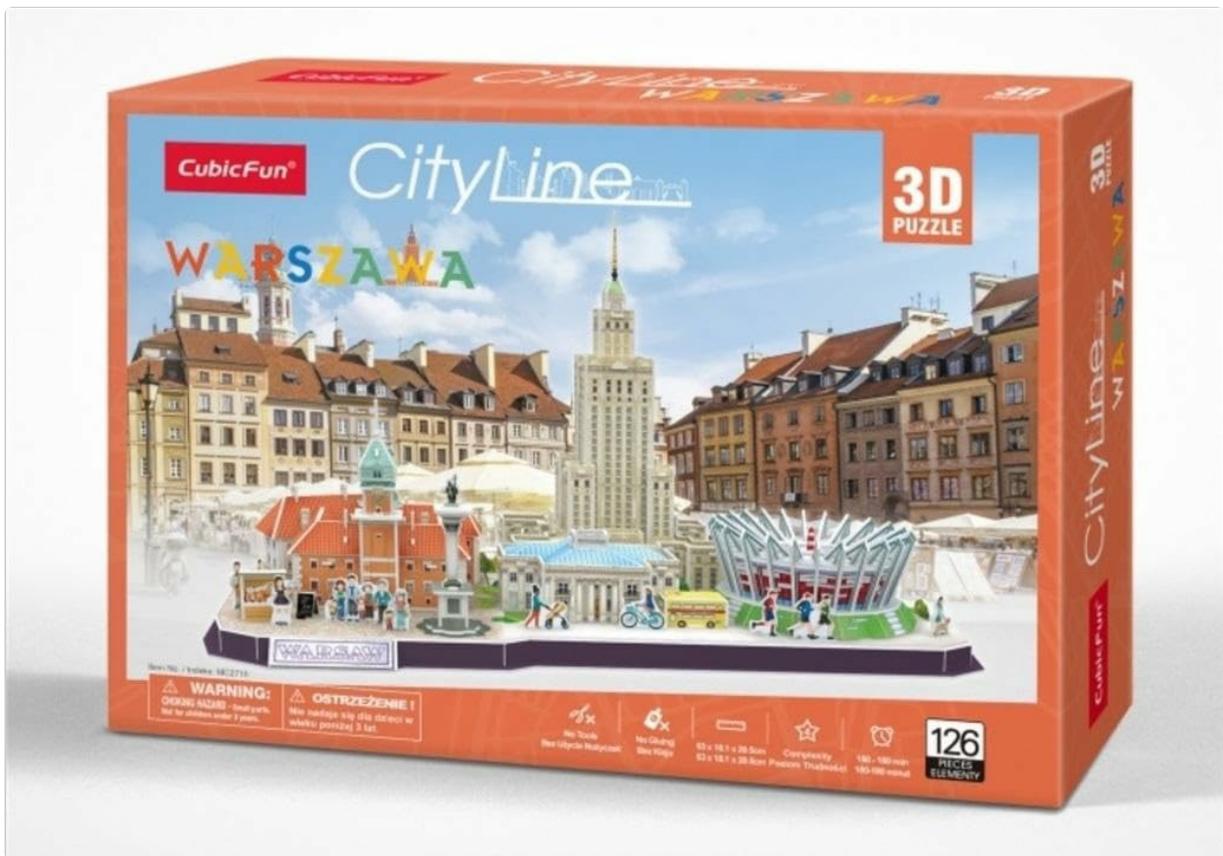


Image: The CubicFun MC271H 3D Puzzle box, displaying the completed Warsaw Cityline model on the front.

## SETUP AND ASSEMBLY

The CubicFun MC271H 3D Puzzle is designed for straightforward assembly without the need for glue or scissors. Each of the 126 puzzle pieces is numbered for easy identification and placement.

1. **Unpack Components:** Carefully remove all puzzle sheets from the packaging.
2. **Identify Pieces:** Locate the numbered pieces. It is recommended to start with pieces marked for the base or foundational structures.
3. **Assemble According to Numbers:** Follow the numerical sequence or the visual guide provided on the puzzle sheets (if applicable) to connect the pieces. The pieces are designed to interlock securely.
4. **Estimated Assembly Time:** The assembly process typically takes approximately 150-180 minutes to complete.

## OPERATING (COMPLETION GUIDE)

Once assembled, the CubicFun MC271H 3D Puzzle forms a detailed replica of the Warsaw Cityline. This completed model serves as a decorative item.

- **Display:** Place the finished model on a stable, flat surface away from direct sunlight or excessive moisture to preserve its condition.
- **Handling:** Handle the assembled model with care to avoid dislodging pieces.

## MAINTENANCE

To maintain the appearance and integrity of your CubicFun 3D Puzzle:

- **Cleaning:** Gently dust the model with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** If disassembling for storage, keep pieces organized to facilitate future reassembly. Store in a dry, cool place.

## TROUBLESHOOTING

---

Should you encounter any issues during assembly:

- **Missing Pieces:** Carefully check all packaging materials. If a piece is genuinely missing, contact CubicFun customer support.
- **Difficulty Connecting Pieces:** Ensure pieces are correctly oriented and aligned with their corresponding numbers. Do not force pieces together, as this may cause damage.

## SPECIFICATIONS

---

<b>Model Number</b>	MC271H
<b>Product Dimensions (Assembled)</b>	53 x 18.1 x 20.5 cm (20.87 x 7.13 x 8.07 inches)
<b>Product Dimensions (Packaging)</b>	11.81 x 2.36 x 8.66 inches
<b>Item Weight</b>	2.2 pounds
<b>Number of Pieces</b>	126
<b>Recommended Age</b>	7 years and up
<b>Manufacturer</b>	CubicFun

## WARRANTY AND SUPPORT

---

For warranty information, missing parts, or customer support, please refer to the contact details provided on the product packaging or visit the official CubicFun website. Keep your purchase receipt as proof of purchase.

Official CubicFun Store: [Visit Store](#)