

TXL LED ONE

TXL Digital Wall Clock Instruction Manual

Model: LED ONE

INTRODUCTION

Thank you for purchasing the TXL Digital Wall Clock. This extra-large LED clock is designed to provide clear time, date, day, and temperature displays, along with versatile timer and alarm functions. Its user-friendly design, including remote control operation and adjustable brightness, makes it suitable for various environments such as homes, offices, gyms, and classrooms. Please read this manual thoroughly before use to ensure proper setup and operation.

PRODUCT FEATURES

- **17.2" Extra Large LED Display:** High-definition screen clearly shows time, day, date, and temperature, ideal for easy viewing across a room, especially for seniors.
- **29-Hour Digital Timer:** Features a timing range of 00:00:00 to 29:59:59 with auto-save for the last set value. Includes a 10-second countdown voice announcement (can be turned on/off).
- **Adjustable Brightness:** Offers an auto-brightness mode and 4-level adjustable brightness via remote control, allowing customization for different lighting conditions. The display can also be turned off.
- **Easy Operation with Remote Control:** Set date, time, and use timer functions conveniently from up to 32 feet away, eliminating the need to remove the clock from the wall.
- **Multi-function Modes:** Supports Timer mode (count up/down), Clock mode, and Alarm clock mode to meet diverse needs.
- **Multi-language Day Display:** Days of the week are displayed in 3 characters and 8 languages: English, Italian, French, Dutch, Spanish, Danish, Russian, and German.
- **Versatile Placement:** Includes a bracket for desktop/shelf placement and two hanging holes for easy wall mounting.
- **Temperature Display:** Monitors and displays indoor temperature accurately in Fahrenheit (°F) or Celsius (°C).
- **Memory Battery:** Retains settings during power outages or when unplugged.

PACKAGE CONTENTS

- TXL Digital Wall Clock (Model: LED ONE)
- Remote Control
- 5V/2A Power Adapter
- 11.5 feet Power Cable Cord
- 2 AAA Batteries (for remote control)
- Instruction Manual (this document)

SETUP

1. Power Connection

The TXL Digital Wall Clock is **NOT** battery operated for its main display. It requires continuous power. Connect the provided 11.5-foot power cable to the clock and then plug the 5V/2A power adapter into a standard electrical outlet. The clock has an internal memory battery to retain settings during brief power interruptions.

2. Remote Control Setup

Insert the two included AAA batteries into the remote control, ensuring correct polarity.

3. Placement Options

- **Desktop/Shelf Placement:** Utilize the integrated bracket on the back of the clock to stand it upright on any flat surface.
- **Wall Mounting:** The clock features two hanging holes on the back for secure wall mounting. Ensure the mounting surface is stable and use appropriate hardware (not included, unless specified in package contents) for installation.

LARGE SCREEN. AND EASY TO READ FOR ALL AGES



Figure 1: Back of the clock illustrating the stable bracket for desktop use and the two hanging holes for wall mounting.

OPERATING INSTRUCTIONS

1. Initial Power On

Upon connecting to power, the clock will automatically turn on. It may display a default time or the time retained by its memory battery.

2. Setting Time and Date

Use the remote control for easy adjustment:

- Press the **"SET"** button on the remote. The display will flash, indicating it's in setting mode.
- Use the **"UP"** and **"DOWN"** arrows to adjust the values (e.g., hour, minute, year, month, day).
- Press **"SET"** again to move to the next setting parameter.
- Once all settings are complete, press **"SET"** to exit the setting mode.

3. Adjusting Brightness

The clock offers 4 levels of brightness and an auto-brightness mode. Use the remote control:

- Press the "**BRIGHTNESS**" button (often represented by a sun icon) to cycle through the brightness levels.
- The display can also be turned completely off if desired.



Figure 2: Remote control in use to adjust clock settings, highlighting the convenience of operation.

4. Using the Timer Function

The clock features a versatile timer for both count-up and count-down functions, with a maximum range of 29 hours, 59 minutes, and 59 seconds.

- Press the "**TIMER**" button on the remote to enter timer mode.
- Use the "**HR**", "**MIN**", and "**SEC**" buttons to set the desired countdown time.
- Press "**START/STOP**" to begin or pause the timer.
- To reset the timer, press the "**RESET**" button.

- The clock can save the last set timer value automatically.
- A 10-second countdown voice announcement can be toggled on/off via the remote.



Figure 3: The clock in timer mode, showing a countdown. This feature is useful for various activities like cooking or exercise.

5. Setting Alarms

The clock supports alarm functions.

- Press the "**ALARM**" button on the remote.
- Use the "**UP**" and "**DOWN**" arrows to set the desired alarm time.
- Press "**ALARM**" again to confirm and activate the alarm.
- To turn off a sounding alarm, press any button on the remote or the clock.

6. Temperature Display

The clock displays indoor temperature. To switch between Fahrenheit (°F) and Celsius (°C):

- Press the "**°F/°C**" button on the remote control.

7. 12/24 Hour Format

To switch between 12-hour and 24-hour time formats:

- Press the "**12/24HR**" button on the remote control.

8. Day of Week Language

The day of the week can be displayed in 8 different languages:

- Press the "**LANGUAGE**" button (or similar, refer to remote layout) to cycle through English, Italian, French, Dutch, Spanish, Danish, Russian, and German.

MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents that may damage the display or casing.
- **Power:** Ensure the clock remains connected to a stable 5V/2A power source for continuous operation.
- **Battery Replacement (Remote):** Replace AAA batteries in the remote control when its range or responsiveness decreases.
- **Storage:** If storing the clock for an extended period, disconnect it from power and remove batteries from the remote control.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is off or not lighting up.	No power connection; power adapter issue; display turned off.	Check power cable connection and outlet. Ensure power adapter is working. Press brightness button on remote to turn display back on.
Remote control not responding.	Dead batteries; remote not aimed correctly; obstruction.	Replace AAA batteries in the remote. Ensure remote is aimed directly at the clock's sensor. Remove any obstructions between remote and clock.
Time/Date is incorrect after power outage.	Extended power outage beyond memory battery capacity.	Manually reset the time and date using the remote control.
Temperature reading seems inaccurate.	Clock placed near heat source/vent; sensor obstruction.	Relocate the clock to an area with stable ambient temperature. Ensure nothing is blocking the temperature sensor.
Timer voice announcement not working.	Voice announcement feature is turned off.	Toggle the voice announcement setting on the remote control (refer to remote layout for specific button).

SPECIFICATIONS

- **Brand:** TXL

- **Model Number:** LED ONE
- **Display Type:** Multi_Display LED
- **Product Dimensions:** 16.5"W x 5.7"H
- **Power Source:** Corded Electric (5V/2A adapter included)
- **Battery (Remote):** 2 AAA batteries (included)
- **Mounting Type:** Wall Mount and Tabletop
- **Material:** Plastic
- **Item Weight:** 1.97 pounds
- **Special Features:** Date, Day of Week, Temperature, Count Up/Down Timer, Remote Control, Adjustable Brightness, Alarm Clock, 8 Languages.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact TXL customer service directly. Details regarding product protection plans may also be available from your retailer.