

[Manuals.plus](#) /

› [WORX](#) /

› WORX WG602 13 Amp Electric Pressure Washer Instruction Manual

WORX WG602

WORX WG602 13 Amp Electric Pressure Washer Instruction Manual

Model: WG602 | Brand: WORX

[Introduction](#)

[Safety Information](#)

[Package Contents](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

1. INTRODUCTION

The WORX WG602 Electric Pressure Washer is designed for effective cleaning of various outdoor surfaces. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your pressure washer.



Image 1.1: The WORX WG602 Electric Pressure Washer, a compact and powerful cleaning tool.

2. IMPORTANT SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Read all instructions carefully before operation.

- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not operate the pressure washer in wet conditions or near standing water.
- **Personal Safety:** Wear appropriate personal protective equipment, including safety glasses and gloves. Do not direct the spray at people, pets, or electrical components.
- **Water Supply:** Connect the pressure washer to a cold water supply only. Ensure the water supply hose is free from kinks and damage.
- **Chemicals:** Use only detergents approved for pressure washers. Follow detergent manufacturer's instructions for use and disposal.
- **Storage:** Disconnect from power and water supply after use. Store the unit in a dry, protected area, away from freezing temperatures.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- WORX WG602 Electric Pressure Washer Unit

- Spray Wand
- 20-ft. High-Pressure Hose
- Turbo Nozzle
- 40° Nozzle



WG602 PRESSURE WASHER WITH SPRAY WAND



TURBO NOZZLE



40° NOZZLE

WHAT'S INCLUDED

Image 3.1: The Turbo Nozzle and 40° Nozzle included with the WG602 pressure washer.

4. SETUP INSTRUCTIONS

1. **Positioning:** Place the pressure washer on a stable, level surface near a water source and a grounded electrical outlet.
2. **Connect Water Supply:** Attach a garden hose (not included) to the water inlet on the pressure washer. Ensure the connection is secure to prevent leaks.
3. **Connect High-Pressure Hose:** Connect the 20-ft. high-pressure hose to the outlet on the pressure washer and to the spray wand. Hand-tighten all connections.
4. **Attach Nozzle:** Select the desired nozzle (Turbo or 40°) and attach it to the quick-connect adapter on the spray wand. Pull back the collar on the quick-connect, insert the nozzle, and release the collar to lock it in place.

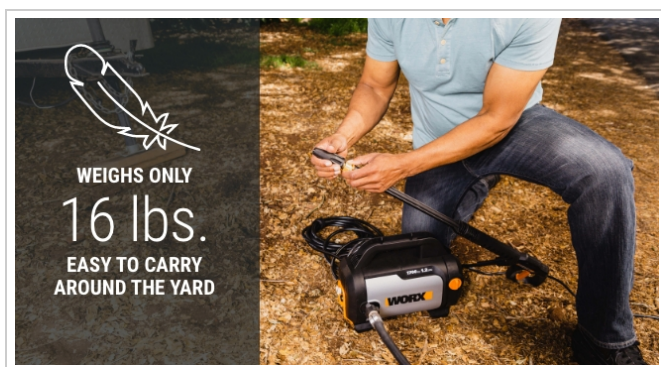


Image 4.1: Connecting the water supply hose to the pressure washer unit.



Image 4.2: Attaching a nozzle to the quick-connect spray wand.

5. OPERATING INSTRUCTIONS

1. **Turn on Water:** Fully open the water faucet to ensure a steady supply to the pressure washer.
2. **Purge Air:** Squeeze the trigger on the spray wand to release any air trapped in the system. Continue until a steady stream of water emerges.
3. **Connect Power:** Plug the pressure washer into a grounded electrical outlet.
4. **Start Cleaning:** Aim the nozzle at the surface to be cleaned, maintaining a safe distance. Squeeze the trigger to activate the high-pressure spray. Release the trigger to stop the flow.
5. **Nozzle Selection:**
 - **Turbo Nozzle:** Provides a concentrated, rotating stream for tough dirt and grime on durable surfaces like concrete or brick.
 - **40° Nozzle:** Offers a wider, fan-shaped spray for general cleaning, rinsing, and delicate surfaces.



Image 5.1: Cleaning a vehicle with the pressure washer.



Image 5.2: Cleaning a patio surface with the pressure washer.

6. MAINTENANCE

- **After Each Use:**
 - a. Turn off the pressure washer and disconnect it from the power supply.
 - b. Turn off the water supply.
 - c. Squeeze the trigger on the spray wand to release any remaining pressure.
 - d. Disconnect the garden hose and high-pressure hose.
 - e. Drain all water from the unit and hoses to prevent freezing damage.
- **Cleaning:** Wipe down the exterior of the unit with a damp cloth. Do not use harsh chemicals.

- **Storage:** Utilize the integrated cord wrap and onboard nozzle/wand storage for organized and compact storage. Store in a dry, frost-free location.



Image 6.1: The integrated cord wrap for tidy storage of the power cord.

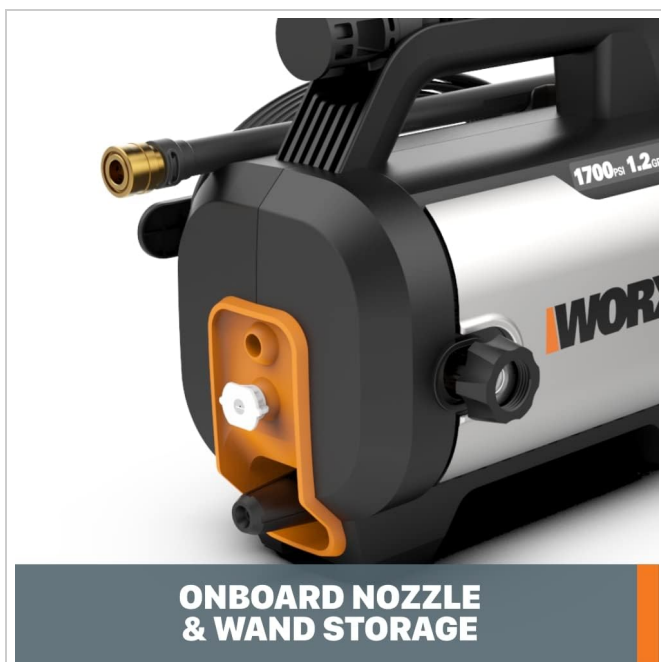


Image 6.2: Convenient onboard storage for nozzles and the spray wand.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not start	No power supply; tripped circuit breaker; power switch off.	Check power connection; reset circuit breaker; ensure power switch is ON.
Low pressure	Insufficient water supply; clogged nozzle; air in pump.	Ensure water faucet is fully open; clean nozzle; purge air from system by squeezing trigger without power.
Water leaks	Loose connections; damaged O-rings.	Tighten all connections; inspect and replace damaged O-rings.

8. TECHNICAL SPECIFICATIONS

- **Model:** WG602
- **Power Source:** AC (13 Amp Motor)
- **Maximum Pressure:** 1870 PSI (Max)
- **Rated Pressure:** 1700 PSI
- **Maximum Flow Rate:** 1.4 GPM (Max)
- **Rated Flow Rate:** 1.2 GPM
- **Hose Length:** 20 Feet
- **Product Dimensions (L x W x H):** 14.1" x 9.1" x 10.6"
- **Item Weight:** Approximately 0.01 Ounces (*Note: This weight appears to be a data entry error. Actual weight for similar pressure washers is typically 15-20 lbs.*)
- **Certification:** CSA
- **UPC:** 845534023633



Image 8.1: Dimensional overview of the WORX WG602 pressure washer.

9. WARRANTY INFORMATION

The WORX WG602 Electric Pressure Washer typically comes with a**3-year limited warranty for the tool**. Please refer to your product registration card or the official WORX website for complete warranty terms and conditions.



Image 9.1: Indication of a 3-year limited warranty for the tool.

10. CUSTOMER SUPPORT

For further assistance, technical support, or to purchase replacement parts, please visit the official WORX website or contact their customer service department.

Official WORX Store: [Visit the WORX Store on Amazon](#)

