

[Manuals.plus](#) /

› [BIGBIG WON](#) /

› BIGBIG WON Wireless Switch Pro Controller Instruction Manual

BIGBIG WON 8592

Instruction Manual for BIGBIG WON Wireless Switch Pro Controller

Model: 8592

INTRODUCTION

This instruction manual provides comprehensive guidance for the use and maintenance of your BIGBIG WON Wireless Switch Pro Controller. Designed for enhanced gaming, this controller is compatible with Nintendo Switch, Switch Lite, Switch OLED, and PC (Windows).



Image: Front view of the BIGBIG WON Wireless Switch Pro Controller, featuring blue and red grips with a black central body, analog sticks, D-pad, and action buttons.

PRO CONTROLLER FOR NINTENDO SWITCH



Bluetooth



6-Axis Gyro



Switch/Switch Lite/
Switch OLED



PC Windows



Dual Vibration



Screenshot



Wake Up Function



TURBO



Image: Graphic illustrating the controller's compatibility with Nintendo Switch, Switch Lite, Switch OLED, and PC Windows, highlighting features like Bluetooth, 6-Axis Gyro, Dual Vibration, Screenshot, Wake Up Function, and TURBO.

SETUP AND CONNECTION

Initial Charging

Upon receiving your controller, it is normal for it not to power on immediately. Before first use, fully charge the controller for 2-3 hours using the included USB cable. The built-in 600mAh rechargeable battery provides up to 10 hours of uninterrupted gaming on a full charge.

LONG BATTERY LIFE

Built-in 600mAh lithium battery, 8-10 hours of continuous play,
2-3 hours of charging.



8-10 hours
To play



2-3 hours
Charging



600 mAh
Lithium battery



Image: Illustration showing the controller's long battery life (8-10 hours play, 2-3 hours charging) and its 600mAh lithium battery, with a Type-C charging port visible on the top edge of the controller.

Connecting to Nintendo Switch/Switch Lite/Switch OLED (Wireless Bluetooth)

1. Ensure your Switch console is powered on and updated to the latest system version.
2. From the HOME Menu, select "Controllers" > "Change Grip/Order".
3. On the controller, press and hold the SYNC button (small circular button on the top edge, near the USB-C port) for a few seconds until the indicator lights begin to flash rapidly.
4. Once the controller is successfully paired, the player indicator lights on the bottom of the controller will illuminate solid.
5. The wireless control range is approximately 33 feet.

Connecting to PC (Wired USB)

- Connect the controller to your PC using the provided USB cable.
- The controller supports both X-input mode and D-input mode for PC games.

- Note: The controller only supports wired connection with PC games.

OPERATING INSTRUCTIONS

Wake-up Function

After initial pairing, you can easily wake up your Switch console by pressing the HOME button on the controller once. The controller will automatically reconnect to the console.



Image: Illustration showing the controller's HOME button being pressed to wake up a Nintendo Switch console, with blue waves indicating wireless signal.

TURBO Function

The TURBO function allows for continuous button pressing without holding down the button, which is useful in games requiring rapid inputs and helps extend button life.

TURBO FUNCTION

Turbo function allows you to play games to attack non-stop.



Image: A hand pressing the 'T' (Turbo) button on the controller, with a game scene in the background, illustrating the TURBO function for continuous attacks.



Image: Detailed graphic explaining the TURBO function with a visual representation of rapid firing (12/S) and the DOUBLE MOTOR VIBRATION feature with a color-coded scale from None to Strong.

Dual Vibration

The dual vibration feature provides precise feedback, enhancing immersion in games. There are 4 adjustable vibration levels: 100%, 70%, 30%, and 0% (off).

DUAL VIBRATION

Dual vibration function allows you to quickly get into the game character and immersive gaming experience. 4 vibration levels (100%/70%/30%/0%) can be adjusted according to your needs.



Image: Illustration of the controller's dual vibration function, showing vibration motors and a color-coded scale for four adjustable vibration levels: None, Weak, Middle, and Strong.

Accurate Motion Control (6-Axis Gyro)

The built-in 6-axis gyro sensor supports accurate motion control, significantly improving game immersion, especially for titles like The Legend of Zelda, Splatoon 2, and Mario Kart 8 Deluxe.

6-AXIS GYRO MOTION SENSORS

The built-in 6-axis gyroscope can help you improve the accuracy and speed of the game, making it easier for you to win various games.



Support movement



Directional control



Shift in vision



Image: Graphic illustrating the 6-axis gyro motion sensors, showing examples of "Support movement", "Directional control", and "Shift in vision" in various game scenarios.

PRECISE MOTION CONTROL

Integrate 6-axis gyro and trigger to detect subtle motion and quickly start/stop motion without lag. Significantly improve the gaming experience when playing motion games.



Image: Graphic highlighting precise motion control, showing the controller with glowing lines indicating integrated 6-axis gyro and trigger for detecting subtle motion without lag.

Screenshot Function

Capture your favorite in-game moments with the dedicated screenshot button.



The image displays a red and blue gaming controller with several features highlighted in callouts:

- 360 degree joysticks**: A close-up of the left joystick.
- A / B / Z / X buttons**: A close-up of the action buttons.
- Precise control pad**: A close-up of the directional pad.
- Non-slip handles**: A close-up of the grip area.
- Screenshot function**: A close-up of the screenshot button.
- Type-C charging port**: A close-up of the charging port.
- Fast reactions to attacks**: A close-up of the attack button.

ERGONOMIC DESIGN WITH EXCELLENT QUALITY

Image: Detailed view of the controller highlighting its ergonomic design and various features including 360-degree joysticks, A/B/Z/X buttons, precise control pad, non-slip handles, screenshot function, Type-C charging port, and fast reactions to attacks.

MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controller or subjecting it to strong impacts, as this may damage internal components.
- When not in use for extended periods, ensure the controller is fully charged before storage to preserve battery health.

TROUBLESHOOTING

Controller cannot be turned on after receiving:

Charge the controller for 2-3 hours with the USB cable included in the package before using it for the first time.

Controller cannot be used:

Try charging the wireless controller first. Ensure it is fully charged.

Big delay when pressing buttons:

This situation may arise from the Switch game console itself. Please restart the game console and reset the controller. To reset, locate the small reset hole on the back of the controller and use a thin object (like a paperclip) to press the button inside.

Controller not connecting to Switch:

Ensure the console is in "Change Grip/Order" mode. Press and hold the SYNC button on the controller until lights flash. If issues persist, try restarting both the console and controller.

No NFC function or infrared camera:

This controller does NOT have NFC function or an infrared camera. It is NOT suitable for games that require these specific functions.

HD Rumble not supported / Different vibration experience:

The controller does NOT support HD Rumble. In some games, the Bluetooth controllers may provide a different vibration experience compared to original Pro Controllers.

SPECIFICATIONS

Feature	Detail
Model Number	8592
Compatibility	Nintendo Switch, Switch Lite, Switch OLED, PC (Windows - wired only)
Connectivity	Wireless Bluetooth (Switch), Wired USB (PC)
Battery Capacity	600mAh rechargeable lithium battery
Play Time	Up to 10 hours (approx.)
Charging Time	2-3 hours (approx.)
Motion Control	Built-in 6-axis gyro sensor
Vibration	Dual Vibration with 4 adjustable levels (100%/70%/30%/0%)
Special Features	TURBO function, Screenshot function, Wake-up function
Weight	9.9 ounces
Dimensions	6.42 x 4.88 x 2.72 inches (Package Dimensions)

WARRANTY AND SUPPORT

We offer a 1-year warranty for our products. If you have any questions or encounter any problems with your BIGBIG WON Wireless Switch Pro Controller, please contact us immediately to receive assistance and a solution. Please note: This is a third-party product and is not manufactured by Nintendo.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question