



Manuals.plus /

› Deserthome /

› Deserthome 69-Holes Bubble Gun Instruction Manual

Deserthome P050 P051 P052

Deserthome 69-Holes Bubble Gun Instruction Manual

Model: P050 P051 P052

INTRODUCTION

Thank you for choosing the Deserthome 69-Holes Bubble Gun. This innovative bubble machine is designed to provide hours of fun, creating thousands of colorful bubbles with ease. Equipped with vibrant LED lights, it's perfect for outdoor play, parties, and special events. Please read this manual carefully before use to ensure proper setup, operation, and maintenance.



The Deserthome 69-Holes Bubble Gun creating a vibrant stream of bubbles.

WHAT'S IN THE BOX

Your Deserthome Bubble Gun package includes the following items:

- 1 x Bubble Gun Blaster
- 2 x Bubble Solution Bottles
- 1 x Rechargeable Battery (Lithium Ion)
- 1 x USB Charger Cable
- 1 x Bubble Solution Plate

SETUP INSTRUCTIONS

Follow these simple steps to get your bubble gun ready for use:

1. **Install the Battery:** Open the battery compartment located in the handle of the bubble gun. Insert the provided rechargeable Lithium Ion battery, ensuring correct polarity. Close the compartment securely.
2. **Prepare Bubble Solution:** Pour the bubble solution from the bottles into the included bubble solution plate. Do not overfill.
3. **Dip the Bubble Gun:** Dip the front nozzle of the bubble gun into the bubble solution plate, ensuring the 69 holes are fully submerged and coated with the liquid.
4. **Activate:** Once the nozzle is coated, remove it from the plate and press the trigger to start generating bubbles.



Visual guide for quick setup of the bubble gun.

OPERATING INSTRUCTIONS

Once set up, operating your Deserthome Bubble Gun is straightforward:

- Ensure the battery is charged and correctly installed.
- Pour bubble solution into the provided plate.
- Dip the front of the bubble gun into the solution, making sure all 69 holes are covered.
- Point the bubble gun away from faces and eyes.
- Press and hold the trigger to release a continuous stream of bubbles. The built-in LED lights will illuminate the bubbles as they are produced.
- Release the trigger to stop the bubble stream.
- Re-dip the nozzle into the solution as needed to maintain bubble production.



A bubble machine that lights up with colorful LEDs and shoots thousands of bubbles

The bubble gun in operation, creating numerous illuminated bubbles.

Official Product Videos

How fun this bubble gun

Your browser does not support the video tag.

This video demonstrates the fun and ease of use of the Deserthome bubble gun, showcasing its bubble-making capabilities.

Deserthome Bubble Maker with Lights for Kids

Your browser does not support the video tag.

This video highlights the Deserthome bubble maker, emphasizing its light features and suitability for children.

MAINTENANCE

Proper maintenance will extend the life of your bubble gun:

- **Cleaning:** After each use, especially if using non-standard bubble solutions, rinse the nozzle and the bubble solution plate with clean water to prevent clogging. Wipe the exterior of the gun with a damp cloth. Do not submerge the entire gun in water.
- **Storage:** Store the bubble gun in a cool, dry place away from direct sunlight when not in use. Remove the battery if storing for extended periods.
- **Battery Care:** Fully charge the battery before first use and whenever the performance diminishes. Avoid overcharging.

TROUBLESHOOTING

If you encounter any issues with your bubble gun, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No bubbles or weak bubbles	Low battery; Insufficient bubble solution; Clogged nozzle; Solution too thick/thin.	Charge the battery; Ensure enough solution in plate; Clean the nozzle; Use recommended bubble solution.
Gun not turning on	Battery not installed correctly; Battery drained.	Check battery orientation; Charge the battery.
Battery gets hot quickly	Overuse; Faulty battery/charger.	Allow gun to cool down between uses; Ensure using provided charger; If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.4 x 5.5 x 9.4 inches
Item Weight	1.91 pounds
Model Number	P050 P051 P052
Manufacturer Recommended Age	3 years and up
Battery Type	1 Lithium Ion battery (included)
Material	Non-toxic, high-quality ABS plastic



Product dimensions and included components.

SAFETY INFORMATION

The Deserthome Bubble Gun is designed with safety in mind. Please observe the following precautions:

- Made from non-toxic, high-quality ABS plastic, ensuring safety for children and pets.
- Recommended for ages 3 and up. Adult supervision is advised for younger children.
- Do not aim the bubble gun directly at eyes or faces.
- Do not ingest bubble solution. If swallowed, seek medical attention.
- Keep batteries away from small children.
- Use only the provided charger and battery.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Deserthome 69-Holes Bubble Gun, please

contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty claims.