

- Manuals.plus /
- › [Gvirtue](#) /
 - › Gvirtue UTV-1803LC Universal Remote Control Instruction Manual

Gvirtue UTV-1803LC

Gvirtue UTV-1803LC Universal Remote Control Instruction Manual

MODEL: UTV-1803LC

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Gvirtue UTV-1803LC Universal Remote Control. Please read thoroughly before use.

1. Introduction

The Gvirtue UTV-1803LC is a universal infrared remote control designed to operate various television brands and Roku streaming devices. It offers a user-friendly interface with dedicated quick access buttons for popular streaming services, aiming to simplify your entertainment experience.

2. Product Overview

Familiarize yourself with the layout and functions of the remote control buttons.



Image: Front view of the Gvirtue UTV-1803LC remote control, highlighting its various buttons including power, navigation, volume, channel, and dedicated app hotkeys.

Button Functions:

- **Power Button (●):** Turns the TV or Roku device on/off.
- **Input Button (●):** Switches video input sources.
- **Menu:** Accesses the device's main menu.
- *****: Star button, often used for options or settings within Roku.
- **Exit:** Exits current menu or application.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and content.
- **OK:** Confirms selections.
- **Home:** Returns to the Roku home screen.
- **Return:** Goes back to the previous screen.
- **Volume Up/Down (+VOL / -VOL):** Adjusts audio volume.
- **Mute:** Mutes/unmutes audio.

- **Channel Up/Down (+CH / -CH):** Changes TV channels.
- **APP1, APP2, APP3, APP4, APP5:** Customizable or pre-assigned application hotkeys.
- **Dedicated Hotkeys:** Netflix, Prime Video, Sling, Hulu, R-Channel, Disney+, ESPN+, YouTube, VUDU, Pandora, Spotify, Vue, Google Play, FandangoNOW, Oticket, CRACKLE, HBONOW, NOW. These buttons provide direct access to specified streaming applications.

3. Compatibility

The Gvirtue UTV-1803LC remote is designed for broad compatibility with various TV brands and Roku devices. It is important to note its specific compatibility:

Gvirtue New Remote Fit for Ro-ku Smart TV



UTV-1803LC
TV+BOX
Universal 2in1 Remote Control

LG
ONN
SANYO
HITACHI
PHILIPS
HISENSE
WESTINGHO

TCL
RCA
HAIER
SHARP
ELEMENT
INSIGNIA

}

RO-KU TV







Image: The Gvirtue UTV-1803LC remote shown alongside a list of compatible Roku Smart TV brands, including LG, ONN, SANYO, HITACHI, PHILIPS, HISENSE, WESTINGHO, TCL, RCA, HAIER, SHARP, ELEMENT, and INSIGNIA.

For All Ro-ku TV



For Ro-ku Player Box



Not For Ro-ku Stick



Image: Visual representation of the remote's compatibility, indicating it works with all Roku TVs and Roku Player Boxes, but is not compatible with Roku Streaming Sticks.

Supported Devices:

- **Roku Smart TVs:** Compatible with major brands such as TCL, Sharp, RCA, ONN, Insignia, HISENSE, HITACHI, HAIER, Philips, SANYO, LG, Element, and Westinghouse.
- **Roku Streaming Player Boxes:** Works with various Roku player box models.

Non-Supported Devices:

- **Roku Streaming Sticks:** This remote is not compatible with Roku Streaming Sticks.

4. Setup

4.1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two fresh AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: The back of the Gvirtue UTV-1803LC remote with the battery compartment open, illustrating the correct insertion of two AAA batteries according to polarity markings.

4.2. Initial Connection

For most compatible Roku Smart TVs and Roku Streaming Player Boxes, the Gvirtue UTV-1803LC remote control is designed to work immediately without any programming required. Simply insert the batteries, and it should function directly with your device.

Gvirtue New Remote Fit for Ro-ku Smart TV



Stable Performance

Upgraded Smart Chip

No Programming Required

Farther Transmitting Distance



Image: A graphic highlighting key features of the Gvirtue UTV-1803LC remote, emphasizing stable performance, an upgraded smart chip, no programming required, and farther transmitting distance.

If the remote does not respond, ensure the batteries are correctly installed and have sufficient charge. Point the remote directly at your TV or Roku device.

5. Operating Instructions

5.1. Basic TV and Roku Control

- **Power:** Press the **Power** button to turn your TV or Roku device on or off.
- **Volume Control:** Use the **+VOL** and **-VOL** buttons to adjust the sound level. Press **Mute** to silence the audio.
- **Channel Navigation:** Use the **+CH** and **-CH** buttons to change TV channels (if applicable to your TV setup).
- **Input Selection:** Press the **Input** button to cycle through available video input sources on your TV.

- **Roku Navigation:**

- Use the **Directional Pad** (Up, Down, Left, Right arrows) to move through menus and content.
- Press **OK** to select an item or confirm an action.
- Press the **Home** button to return to the Roku home screen at any time.
- Press the **Return** button to go back to the previous screen or menu.
- The **Menu** and * (**Star**) buttons provide access to additional options or settings within applications or the Roku interface.

5.2. Quick Access Hotkeys

The remote features dedicated buttons for popular streaming services, allowing for instant access:



Image: The Gvirtue UTV-1803LC remote displayed next to a list of its quick access hotkeys, including Netflix, Prime Video, Sling, Hulu, Disney+, YouTube, and others, designed for direct application launch.

- Simply press the desired hotkey (e.g., **Netflix**, **Hulu**, **Prime Video**) to launch the corresponding application directly on your Roku device or Smart TV.
- Ensure the application is installed and you are logged in on your device for the hotkey to function correctly.

5.3. Customizing Hotkeys (Learning Function)

The Gvirtue UTV-1803LC remote may feature a learning function, allowing you to program certain unassigned app buttons (APP1-APP5) to control functions or launch applications from another remote. While this feature is present, specific programming steps are typically detailed in the original product packaging or a supplementary guide. Please refer to those resources for detailed instructions on utilizing the learning function.

6. Maintenance

6.1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always use fresh AAA batteries and dispose of old batteries responsibly according to local regulations.

6.2. Cleaning

To clean the remote, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, abrasive cleaners, or immerse the remote in water.

7. Troubleshooting

- **Remote not responding:**
 - Ensure batteries are correctly inserted and not depleted. Replace if necessary.
 - Check for any obstructions between the remote and the TV/Roku device.
 - Ensure you are within the effective operating range and pointing the remote directly at the device's infrared receiver.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the unresponsive button, to remove any debris.
 - If it's a quick access hotkey, ensure the corresponding application is installed and updated on your Roku device/TV.
- **Remote does not control TV/Roku after battery change:**
 - The remote is designed for immediate use with compatible Roku devices. If it stops working, try removing and reinserting the batteries. If issues persist, ensure your device's firmware is up to date.

8. Specifications

Feature	Detail
Model	UTV-1803LC
Brand	Gvirtue
Compatible Devices	Roku Smart TVs, Roku Streaming Player Boxes
Special Features	Universal, Infrared, Quick Access Hotkeys, Learning Function (for APP buttons)
Power Source	2 x AAA Batteries (not included)
Color	Purple (as per product listing, though main image shows black)
Dimensions	Approximately 19 x 5.7 x 2.2 cm (7.48 x 2.24 x 0.87 inches)
Weight	Approximately 60 g (0.13 lbs)



Image: Front, side, and back views of the Gvirtue UTV-1803LC remote control, illustrating its physical dimensions, including a height measurement of 2.91 inches (likely a typo in the image, should be 7.48 inches or 19cm as per product specs).

9. Warranty and Support

For warranty information, technical support, or further assistance, please refer to the contact details provided with your product packaging or visit the official Gvirtue website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I set up the Gvirtue UTV-1803LC universal remote to work with my TV?

For most compatible devices, the Gvirtue UTV-1803LC is designed to work immediately without any programming. Follow these steps to get it working with your TV: Install Batteries: Open the compartment on the back and...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B09YTWQYP9>

More documents and user manuals: <https://manuals.plus/>