

Giecy G600AA-VTL

Giecy Wireless Voice Amplifier G600AA-VTL Instruction Manual

Model: G600AA-VTL

Brand: Giecy

1. INTRODUCTION

Thank you for choosing the Giecy Wireless Voice Amplifier G600AA-VTL. This portable 20W megaphone is designed to provide clear and powerful sound amplification for various indoor and outdoor activities. Please read this manual thoroughly before use to ensure proper operation and to maximize the product's performance and lifespan.

This device features UHF wireless transmission technology, supporting both wired and wireless microphones, and offers multiple audio playback options including AUX, USB, and TF card. Its compact and lightweight design ensures comfort during extended use.

2. PRODUCT OVERVIEW AND FEATURES

2.1 Key Features

- **Superior Sound Quality:** 20W output with low distortion for clear sound, suitable for indoor spaces accommodating 50-100 people.
- **UHF Wireless Technology:** Stable transmission up to 50 meters, avoiding Wi-Fi interference. Ensures clear and loud sound without howling.
- **Multi-functional Playback:** Supports MP3 audio playback, AUX music playback, TF (Micro-SD) card playback, and USB flash drive playback. Includes loop playback and track switching.
- **Recording Function:** Capable of recording and playing back recorded audio.
- **Compact and Lightweight Design:** Palm-sized and weighing approximately 510g, designed for comfortable, long-term wear.
- **Long Battery Life:** Built-in 2600mAh lithium battery provides 14-18 hours of continuous use after 3-5 hours of charging.
- **Versatile Wearing Options:** Includes an adjustable belt and hook, allowing for shoulder, neck, waist, or pants attachment.

2.2 Product Views

便利拡声器



The Giecy Wireless Voice Amplifier, showcasing its compact size when held in a hand.

20W大電力

サウンドのリアルリストア
部屋全体を簡単にカバー



Internal diagram illustrating the 20W speaker for powerful and clear sound output.

ノイズのない高出力拡声器



The amplifier delivering noise-free, high-output sound, covering up to 300 square meters.

実用的な多機能拡声器



Icons depicting the multi-functional capabilities: clear voice, wired/wireless mic, AUX, USB, TF card, echo

function, and 2600mAh battery.



The amplifier in various settings: meeting rooms, supermarkets, gyms, dance rooms, subway stations, and street performances.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Giecy Voice Amplifier x 1
- Wired Headset Microphone x 1
- Wireless Microphone x 1
- AC-DC Charger x 1
- Adjustable Waist Strap x 1
- Instruction Manual x 1

4. SETUP

4.1 Charging the Amplifier

Before first use, fully charge the amplifier. Connect the AC-DC charger to the 5V charging port on the amplifier and plug it into a power outlet. The charging indicator will show the charging status. A full charge typically takes 3-5 hours.

4.2 Connecting the Microphones



Detailed diagram showing the wireless microphone, receiver, and their respective power and charging ports.



A user demonstrating the use of the wireless UHF headset microphone with the amplifier, highlighting stable signal transmission.

- **Wired Headset Microphone:** Insert the 3.5mm jack of the wired headset microphone into the MIC jack on the amplifier.
- **Wireless Microphone:**
 - a. Charge the wireless microphone receiver by connecting it to a USB power source.
 - b. Turn on the power for both the wireless microphone and its receiver.
 - c. Insert the receiver into the MIC jack of the amplifier. The system should automatically pair.
 - d. Adjust the microphone volume using the controls on the wireless microphone or the amplifier.

4.3 Wearing the Amplifier

The amplifier can be worn in several ways using the adjustable waist strap and hook:

- Over the shoulder
- Around the neck
- Around the waist
- Attached to pants
- Placed on a surface (when using the wireless microphone)

5. OPERATING INSTRUCTIONS

5.1 Basic Operation



Detailed view of the amplifier's controls, including power, volume, mode selection, and various input ports.

- **Power On/Off:** Rotate the ON/OFF knob to turn the amplifier on or off.
- **Volume Adjustment:** Rotate the volume knob to increase or decrease the output volume.
- **Mode Selection:** Press the 'M' (Mode) button to switch between different input modes (e.g., Microphone, AUX, USB, TF Card).

5.2 Audio Playback



Visual representation of the multiple playback modes supported: TF card, USB, and AUX.

- **TF Card/USB Playback:** Insert a TF (Micro-SD) card or USB flash drive into the corresponding slot. The amplifier will automatically switch to the correct mode and begin playing audio files. Use the 'Previous Track' and 'Next Track' buttons to navigate.
- **AUX Playback:** Connect an external audio device (e.g., smartphone, MP3 player) to the AUX jack using a 3.5mm audio cable. Switch the amplifier to AUX mode.
- **Pause/Play:** Press the 'Play/Pause' button to pause or resume audio playback.

5.3 Recording Function

To record, ensure a TF card or USB drive is inserted. While in microphone mode, press and hold the record button (refer to the device diagram for exact button). Press again to stop recording. Recorded files can be played back in TF card/USB mode.

5.4 Echo Function

The amplifier may include an echo function. If not required, this function can be turned off (refer to the device controls for specific button or setting).

6. MAINTENANCE

- Keep the amplifier and accessories dry. Do not expose to rain or moisture.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Avoid dropping or subjecting the device to strong impacts.
- Store the amplifier in a cool, dry place when not in use.
- Charge the battery regularly, even if not in frequent use, to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from amplifier	Amplifier is off; Volume is too low; Microphone not connected or powered; Incorrect mode selected.	Turn on amplifier; Increase volume; Ensure microphone is connected and powered; Select correct input mode.
Wireless microphone not working	Microphone or receiver not powered; Not paired; Out of range.	Ensure both microphone and receiver are charged and powered on; Re-pair if necessary; Stay within 50m range.
Sound distortion or howling	Microphone too close to amplifier; Volume too high; Echo function enabled (if not desired).	Increase distance between microphone and amplifier; Reduce volume; Turn off echo function.
Cannot play from USB/TF card	Card/drive not inserted correctly; Incorrect file format; Incorrect mode selected.	Reinsert card/drive; Ensure files are in compatible format (e.g., MP3); Switch to USB/TF card mode.
Short battery life	Battery not fully charged; Old battery.	Ensure full charge (3-5 hours); Contact support if battery life significantly degrades.

8. SPECIFICATIONS



Visual representation of battery life: 6-7 hours in wireless mic mode, 6-8 hours in music mode, 3-5 hours for amplifier charging, 2-5 hours for wireless mic charging.

Feature	Specification
Model Number	G600AA-VTL
Brand	Giecy
Output Power	20W
Battery Capacity	2600mAh Lithium Battery
Charging Time (Amplifier)	3-5 hours
Continuous Use Time	14-18 hours (Voice Amplification)
Wireless Transmission Range	Up to 50 meters (UHF)
Audio Input	MIC, AUX, USB, TF Card

Feature	Specification
Product Dimensions (LxWxH)	8.7 x 3.5 x 10.7 cm
Product Weight	510 g
Mounting Type	Portable

9. WARRANTY AND SUPPORT

Giecy provides a one-year warranty period for this product from the date of purchase. If you encounter any issues or have questions during use, please do not hesitate to contact our customer support. We are committed to providing assistance and ensuring your satisfaction.

For warranty claims or technical support, please refer to the contact information provided on the product packaging or our official website.

© 2026 Giecy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question