

manuals.plus /

> **OUBANG** /

> **OUBANG Ares Elite PS4 Controller Instruction Manual**

OUBANG Ares

OUBANG Ares Elite PS4 Controller Instruction Manual

Model: Ares

1. PRODUCT OVERVIEW

The OUBANG Ares Elite PS4 Controller is a versatile wireless gamepad designed for an enhanced gaming experience across multiple platforms. It features advanced functionalities such as a Turbo function, programmable back paddles, dual motor vibration, and motion sensing.

DUAL MOTOR VIBRATION & MOTION SENSOR

Enhanced your realistic game feeling



Immersive Gaming Experience



Image: Front view of the OUBANG Ares Elite PS4 Controller, highlighting its ergonomic design and button layout.

2. COMPATIBILITY

This controller is compatible with a wide range of gaming platforms, including:

- PlayStation 4 (PS4, PS4 Slim, PS4 Pro)
- PlayStation 5 (PS5 - for PS4 games only)
- PC (Windows 7/8/10)
- Steam
- iOS
- Android



	UPGRADE Elite Version	Normal Version
Turbo Function	4 Speeds of Turbo achieve button bursts with one click	No Turbo
Programmeable Paddle	Custom programmed to duplicate any of the 12 primary buttons	No Paddle
Hardware Platform	PS4/PS4 Slim/PS4 Pro/PC/IOS/Android	PS4/PS4 Slim/PS4 Pro
Touch Pad	Clickable multitouch pad	Single touch pad
Analog Sticks	Accurate control No deadzone and drift	Deadzone and drift
Playing Time	10-12 Hours	6-8 Hours
Battery Capacity	1200 mAh	800-1000 mAh
Bluetooth Connection	Stable connection Wireless distance 32ft	Disconnects randomly Wireless distance 26ft
Charging Port	TYPE-C Interface	Android Interface

Image: Visual representation of the OUBANG Ares controller's compatibility with PS4, PS5, iOS/Android, PC/Windows, and Steam platforms.

3. SETUP AND CONNECTION

3.1 Initial Connection

To connect the OUBANG Ares controller wirelessly via Bluetooth:

1. Ensure the controller is charged.
2. Turn on your gaming console or device.
3. Press and hold the PS button and Share button simultaneously on the controller until the light bar flashes.
4. On your device, navigate to Bluetooth settings and select "Wireless Controller" to pair.

3.2 Charging the Controller

The controller features a 1200mAh battery and charges via a Type-C interface. Connect the provided Type-C cable to the controller and a power source (e.g., console, PC, USB wall adapter). The LED indicator will show charging status.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The OUBANG Ares controller features standard PlayStation button layouts, including action buttons (Triangle, Circle, Cross, Square), D-pad, L1/R1 bumpers, L2/R2 triggers, and dual analog sticks. It also includes a clickable multitouch touchpad and a 3.5mm audio jack for headsets.



Image: Close-up view of the OUBANG Ares controller's face buttons, home button, and turbo button, with callouts for Action Buttons, Home, and Kombat (Turbo).



Image: Detailed diagram of the controller's features including Touchpad + LED Indicator, LB & LT, Turbo button, Programmable Paddles, Audio Jack, and overall size dimensions.

4.2 Turbo Function

The Turbo function allows for rapid, continuous input of a selected button. This can be set to various speeds for tactical advantages in games.

1. **Setting Turbo:** Long press the "Turbo" button and the target function button (e.g., X, O, Square, Triangle) together for over 2 seconds. The RGB light will flash white 8 times to indicate successful setting.
2. **Adjusting Turbo Speed:** While Turbo is active, press the "Turbo" button and a D-pad direction button simultaneously to cycle through speeds:
 - Turbo + D-pad Up: 50Hz (Fastest Speed) - RGB flashes blue.
 - Turbo + D-pad Right: 25Hz - RGB flashes green.
 - Turbo + D-pad Down: 12.5Hz - RGB flashes red.
 - Turbo + D-pad Left: 7Hz (Slowest Speed) - RGB flashes white.

Note: Ensure the Turbo function is open before adjusting speed.

3. **Canceling Turbo:** Repeat the "Setting Turbo" steps. Long press the "Turbo" button and the target function button together for over 2 seconds. The Turbo function will be canceled.

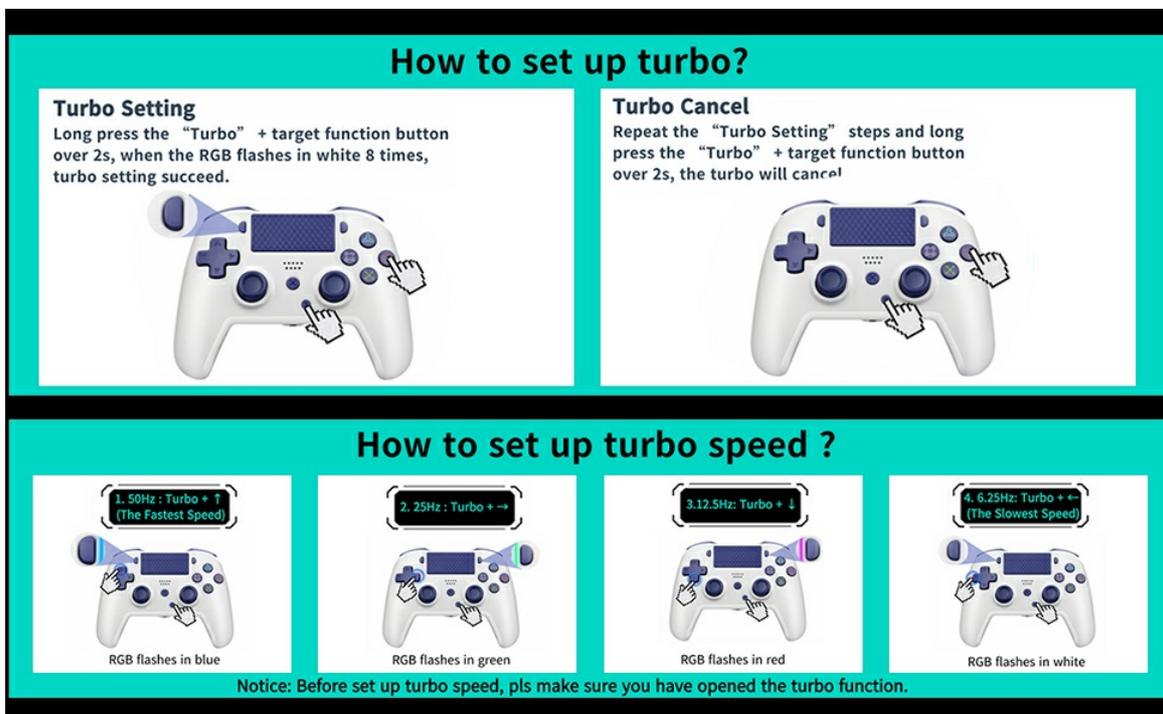


Image: Visual guide on setting and canceling the Turbo function, and adjusting its speed using the D-pad combinations.

Your browser does not support the video tag.

Video: Demonstrates how to set and adjust the Turbo function on the OUBANG Ares PS4 controller.

4.3 Programmable Back Paddles (M1/M2)

The controller features two multifunctional mappable back paddles (M1 and M2) that can be programmed to duplicate any of the 12 primary buttons (Triangle, Circle, Cross, Square, L1, R1, L2, R2, L3, R3, D-pad Up, D-pad Down, D-pad Left, D-pad Right).

1. **Entering Mapping Mode:** Press and hold the "Turbo" button and the M1 or M2 paddle simultaneously for 2 seconds. The RGB light will turn green, indicating the controller is ready for mapping.
2. **Assigning a Button:** While in mapping mode (RGB green), press the desired primary button

you wish to map (e.g., X button). Then, press the "Turbo" button to confirm. The RGB light will turn red, indicating successful mapping.

3. **Canceling Mapping:** To clear a mapped paddle, press and hold the "Turbo" button and the M1 or M2 paddle simultaneously for 2 seconds. The RGB light will flash green, then red, confirming the mapping has been canceled.

EXTRA BUTTONS FOR ADVANCED CONTROL

Two multifunctional mappable buttons that can be programmed to duplicate any of the 12 primary buttons.



Image: Underside view of the OUBANG Ares controller, highlighting the two programmable back paddles (M1 and M2) and the buttons that can be mapped to them.

Your browser does not support the video tag.

Video: Instructions on how to set and cancel the mapping mode for the back paddles on the OUBANG Ares PS4 controller.

5. FEATURES AND ENHANCEMENTS

- **Dual Motor Vibration:** Provides realistic haptic feedback for an immersive gaming experience.
- **Motion Sensor:** Supports motion-sensing gameplay in compatible titles.
- **360° Analogue Sticks:** Designed for accurate and precise control without dead zones or drift.
- **Refined Triggers:** Enhanced L2/R2 triggers for responsive input.

- **Clickable Touchpad:** A fully functional multitouch touchpad for navigation and interaction.



Image: Illustrates the dual motor vibration and motion sensor features, enhancing realistic game feeling.



Image: Highlights the accurate joystick for precise aiming and control in games.

6. SPECIFICATIONS

Feature	Detail
Brand	OUBANG
Model Number	Ares

Connectivity Technology	Bluetooth
Compatible Devices	Android, iOS, PC, PlayStation 4, Windows
Controller Type	Gamepad
Special Features	Ergonomic, Wireless, Turbo Function, Programmable Paddles, Dual Vibration, Motion Sensor, Touchpad
Item Weight	11.3 ounces
Battery Capacity	1200 mAh
Charging Port	Type-C
Playing Time	10-12 Hours (approx.)



Image: Comparison table highlighting the upgraded features of the Elite Version (Ares) versus a normal version, including Turbo Function, Programmable Paddles, Touch Pad, Analog Sticks, Playing Time, Battery Capacity, Bluetooth Connection, and Charging Port.

7. MAINTENANCE

To ensure the longevity and optimal performance of your OUBANG Ares controller:

- Keep the controller clean by wiping it with a soft, dry cloth.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Store the controller in a safe place to prevent physical damage.
- Do not attempt to disassemble the controller, as this may void the warranty.

8. TROUBLESHOOTING

If you encounter issues with your OUBANG Ares controller, try the following steps:

- **Controller not connecting:** Ensure the controller is charged. Try re-pairing the controller via your device's Bluetooth settings.
- **Input lag or disconnection:** Ensure there are no obstructions between the controller and the device. Move closer to the device. Check for interference from other wireless devices.
- **Buttons not responding:** Ensure the controller is properly connected. Try resetting the controller (if a reset button is available, typically a small pinhole on the back).
- **Turbo/Mapping issues:** Review the specific instructions in sections 4.2 and 4.3 to ensure correct setup procedures.

For further assistance, please contact OUBANG customer support.

9. WARRANTY AND SUPPORT

OUBANG products come with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, warranty claims, or any other inquiries, please contact OUBANG Customer Service.

Customer Service Email: gamepad@oubang.com

OUBANG Official Website: [Visit OUBANG Store on Amazon](#)