

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Zanussi](#) /
- › [Zanussi ZFP216S Retractable Cooker Hood User Manual](#)

Zanussi ZFP216S

Zanussi ZFP216S Retractable Cooker Hood User Manual

Model: ZFP216S | Brand: Zanussi

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Zanussi ZFP216S retractable cooker hood. Please read these instructions carefully before installation and operation, and retain them for future reference.



Figure 1: Zanussi ZFP216S retractable cooker hood in stainless steel, installed under a kitchen cabinet. This image shows the Zanussi ZFP216S retractable cooker hood in its installed position, partially extended, with its stainless steel finish and integrated LED lights visible.

2. SAFETY INFORMATION

For your safety and to ensure correct operation, please observe the following precautions:

- Ensure the appliance is disconnected from the power supply before any maintenance or cleaning.
- Installation must be carried out by a qualified technician in accordance with local regulations.
- Do not flambé under the cooker hood.
- Regularly clean the grease filters to prevent fire hazards.
- The air extracted must not be discharged into a flue used for exhausting fumes from appliances burning gas or other fuels.
- Maintain a minimum distance between the hob and the lower part of the cooker hood as specified in the installation section.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. WHAT'S IN THE BOX

Upon unpacking, please verify that all components are present:

- Zanussi ZFP216S Cooker Hood Unit
- Instruction Manual
- Mounting Hardware (if applicable, check packaging)

4. INSTALLATION

The Zanussi ZFP216S is designed for integrated mounting. Professional installation is recommended to ensure proper function and safety.

4.1. Mounting Requirements

- **Minimum Clearance:**
 - From electric hob: **420 mm**
 - From gas hob: **650 mm**
- **Electrical Connection:** The appliance requires a 220-240V, 50Hz power supply. Ensure the electrical installation complies with local regulations.
- **Ducting:** If operating in extraction mode, ensure proper ducting is installed to vent air outdoors.

4.2. Dimensions

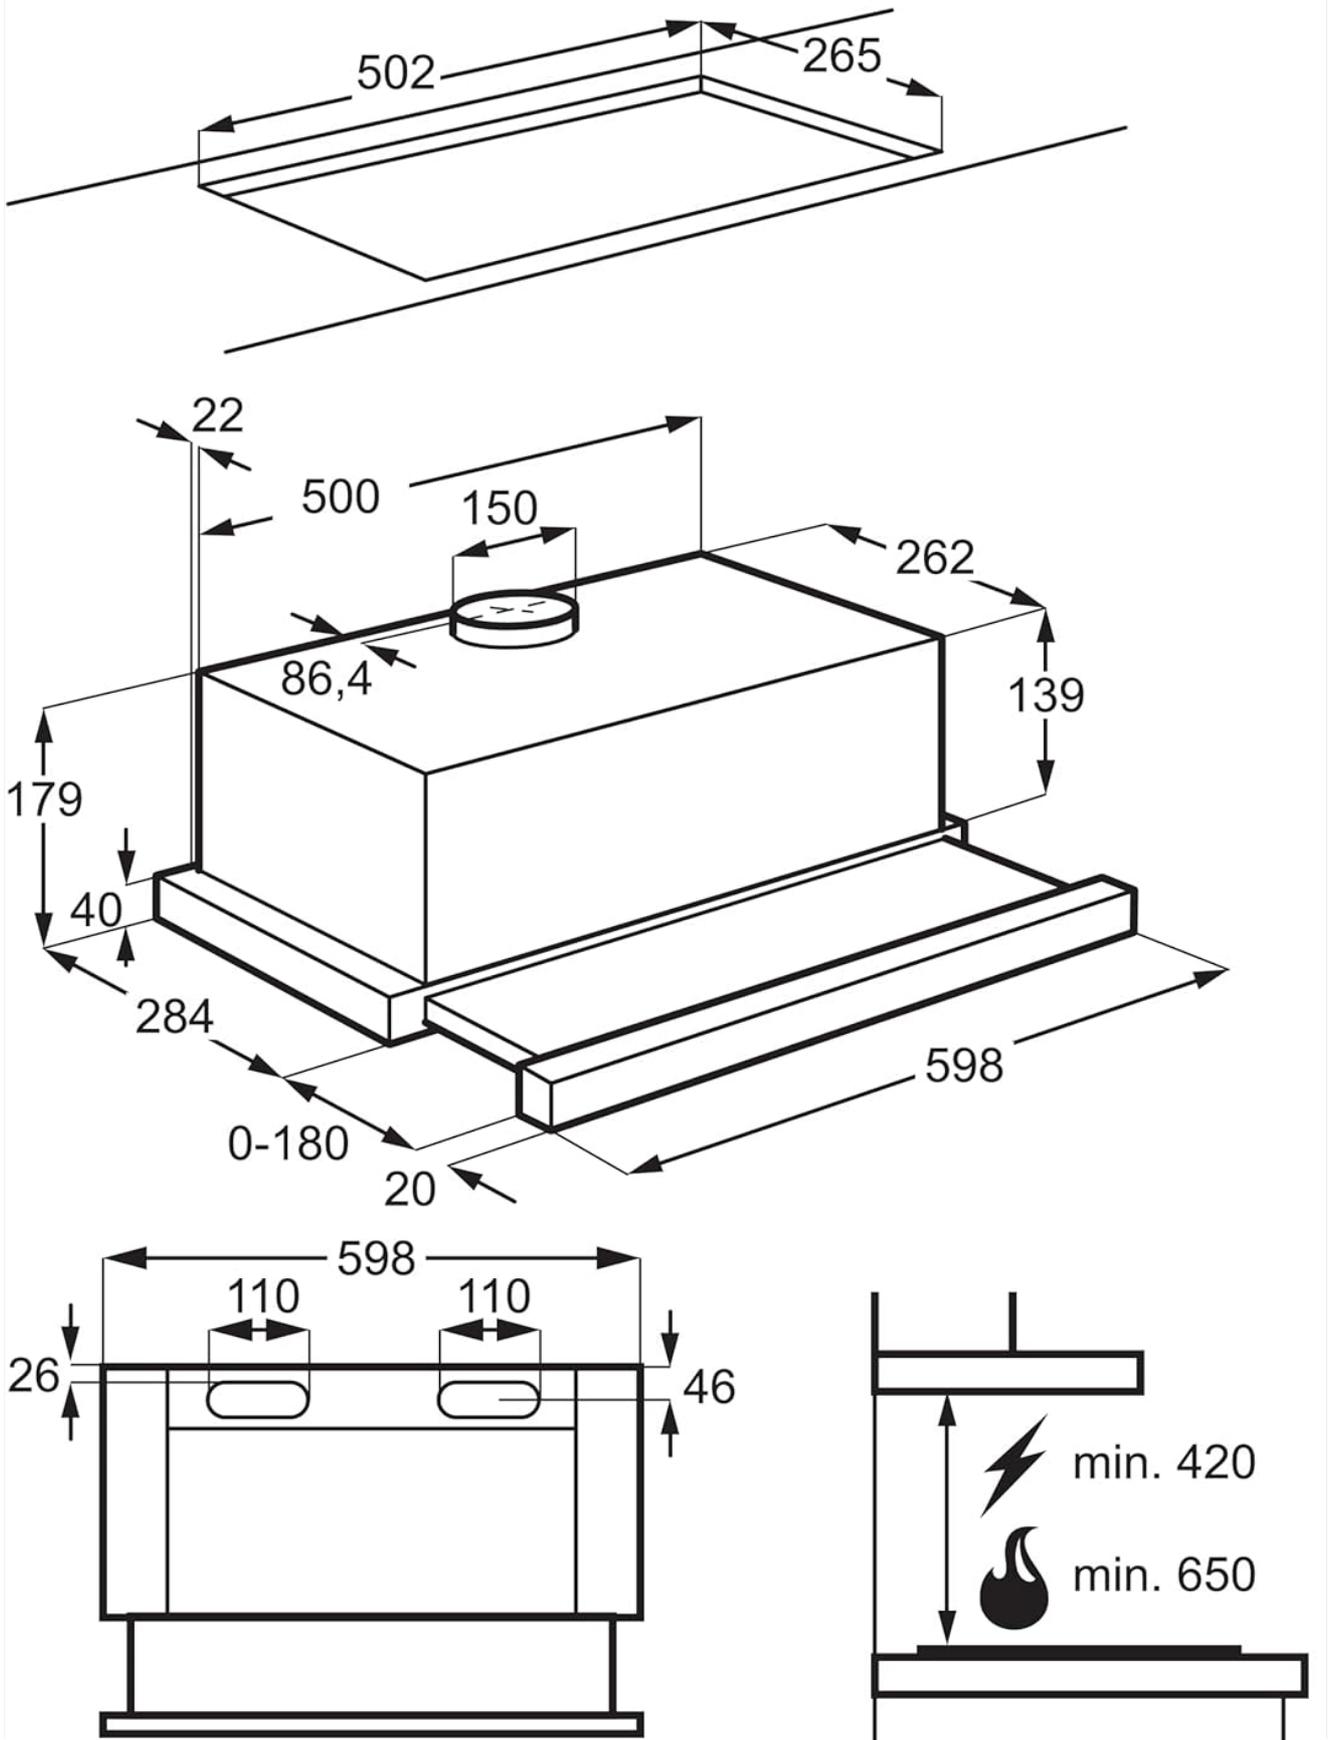


Figure 2: Technical drawing illustrating the dimensions and installation clearances. A schematic diagram illustrating the precise dimensions of the Zanussi ZFP216S cooker hood and critical installation clearances, including minimum distances from electric (420mm) and gas (650mm) hobs.

Refer to Figure 2 for detailed dimensions and mounting points. The overall dimensions of the unit are approximately 179 mm (Height) x 598 mm (Width) x 284 mm (Depth).

5. OPERATION

The Zanussi ZFP216S cooker hood features intuitive controls for easy operation.

5.1. Extending and Retracting the Hood

To activate the hood, gently pull the front panel outwards. To retract it, push the panel back into its housing. The hood will automatically turn off when fully retracted.

5.2. Control Panel



Figure 3: Control panel. The control panel features clearly marked buttons for selecting extraction speeds (1, 2, 3) and activating the LED lighting (0|1 for power, light icon for illumination).

The front control panel allows you to adjust the extraction speed and lighting:

- **Speed Buttons (1, 2, 3):** Press the corresponding button to select the desired extraction speed.
 - **Speed 1:** Low extraction, suitable for light cooking.
 - **Speed 2:** Medium extraction, for general cooking.
 - **Speed 3:** High extraction, for intense cooking or strong odors.
- **Power Button (0|1):** This button typically controls the main power to the fan. Press '1' to turn on, '0' to turn off.
- **Light Button (Light Icon):** Press this button to turn the LED lights on or off.

5.3. LED Lighting



Figure 4: Integrated LED light. This image highlights one of the energy-efficient LED lights integrated into the cooker hood, providing illumination for the cooking area.

The integrated LED lights provide efficient illumination for your cooking surface. They can be operated independently of the extraction fan.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your cooker hood.

6.1. Cleaning the Grease Filters



Figure 5: Aluminum grease filter. A detailed view of the removable aluminum grease filter, designed for easy cleaning and maintenance, located on the underside of the cooker hood.

The aluminum grease filters capture airborne grease particles. They should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to maintain extraction efficiency and prevent fire hazards.

1. Disconnect the appliance from the main power supply.
2. Locate the filter release clips and carefully remove the aluminum filters.
3. The filters are dishwasher-safe. Alternatively, wash them by hand using hot water and a mild detergent. Ensure they are completely dry before re-installing.
4. Re-install the filters, ensuring they are securely clipped into place.

6.2. Cleaning the Exterior

Clean the stainless steel exterior with a soft cloth and a non-abrasive cleaner specifically designed for stainless steel. Avoid harsh chemicals or abrasive pads that could scratch the surface.

6.3. LED Light Replacement

LED lights are designed for long life and are generally not user-replaceable. If an LED light fails, contact qualified service personnel for assistance.

7. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply; hood not fully extended; power button not pressed.	Check power connection; ensure hood is fully extended; press the power button (0 1).
Poor extraction performance.	Grease filters are clogged; incorrect speed setting; ducting obstruction.	Clean or replace grease filters; select a higher speed setting; check ducting for blockages.
Lights not working.	Light button not pressed; LED failure.	Press the light button; if still not working, contact service.
Excessive noise.	Loose filters; foreign object in fan; improper installation.	Ensure filters are secure; check for obstructions; contact installer if noise persists.

8. TECHNICAL SPECIFICATIONS

Model	ZFP216S
Brand	Zanussi
Type	Retractable Cooker Hood
Material	Stainless Steel
Dimensions (H x W x D)	179 mm x 598 mm x 284 mm
Weight	7 kg
Maximum Extraction Capacity	330 m ³ /h
Number of Speeds	3
Motor Power	125 W
Noise Level	64 dB(A)
Lighting Type	LED
Controls	Touch (Buttons)
Voltage	220-240 V
Frequency	50 Hz
Mounting Type	Integrated

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Zanussi website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Zanussi customer service through their official channels. [Visit the Zanussi Store on Amazon](#) for more product information.

