

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOVO](#) /

› [GOVO GOSURROUND 900 2.1 Channel Soundbar System User Manual](#)

GOVO GOSURROUND 900

GOVO GOSURROUND 900 2.1 Channel Soundbar System User Manual

Model: GOSURROUND 900

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your GOVO GOSURROUND 900 2.1 Channel Soundbar System. Please read these instructions carefully before using the product and retain them for future reference.



Image 1.1: The GOVO GOSURROUND 900 Soundbar and its accompanying wired subwoofer, presented in a platinum black finish.

2. WHAT'S IN THE Box

Carefully unpack your GOVO GOSURROUND 900 system and ensure all items are present:

- 1 x Soundbar
- 1 x Subwoofer
- 1 x AUX Cable
- 1 x Audio Cable
- 1 x User Manual
- 1 x Remote Control
- 1 x Warranty Card

3. PRODUCT OVERVIEW

The GOVO GOSURROUND 900 is a 2.1 channel soundbar system designed to enhance your audio experience. It features a soundbar with multiple drivers and a dedicated subwoofer for deep bass.

3.1 Key Features

- **2.1 Channel Audio:** Features 4 x 2.25" speakers in the soundbar for clear audio output.
- **200 Watt Peak Output:** Provides powerful sound for an immersive experience.
- **6.5" Subwoofer:** Delivers deep and impactful bass.
- **Dynamic LED Lights:** Integrated LED lighting on the soundbar.
- **4 Equalizer Modes:** Pre-set audio modes for various content types.
- **Multiple Connectivity Options:** Supports Bluetooth v5.3, HDMI (ARC), AUX, and USB.
- **Sleek Remote Control:** Allows for convenient adjustment of settings.
- **Integrated Controls:** Buttons on the soundbar for basic control.
- **LED Display:** Shows the current status and settings of the soundbar.



2.1 Channel
with Wired 6.5" Subwoofer

Image 3.1: The soundbar and subwoofer, illustrating the 2.1 channel configuration with the wired 6.5-inch subwoofer.



Image 3.2: An illustration showing the four 2.25-inch drivers within the soundbar and the powerful 6.5-inch subwoofer.

4. SETUP

4.1 Placement

Position the soundbar centrally below your television. The subwoofer can be placed on the floor near the soundbar, ideally in a corner for enhanced bass response.



Image 4.1: Example placement of the soundbar on a TV stand and the subwoofer beside it.

4.2 Connections

1. **Subwoofer Connection:** Connect the wired subwoofer to the soundbar using the dedicated subwoofer cable.
2. **Power Connection:** Connect the power adapter to the soundbar and then plug it into a power outlet.
3. **Audio Source Connection:** Choose one of the following methods to connect your audio source (TV, smartphone, etc.):
 - **HDMI (ARC):** Connect an HDMI cable from the soundbar's HDMI ARC port to your TV's HDMI ARC port.
 - **AUX:** Connect the AUX cable from the soundbar's AUX input to the audio output of your device.
 - **USB:** Insert a USB drive containing audio files into the soundbar's USB port.
 - **Bluetooth:** Refer to the 'Bluetooth Connectivity' section for pairing instructions.

4.3 Mounting Options

The soundbar can be placed on a tabletop or mounted on a wall. Ensure proper wall mounting hardware (not included) is used if choosing wall installation.

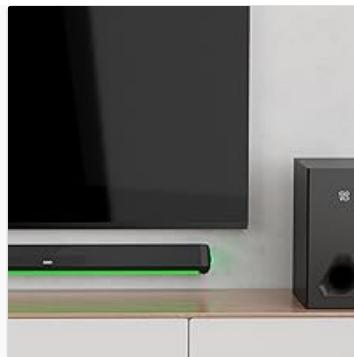


Image 4.2: The soundbar mounted on a wall beneath a television, with the subwoofer placed on a nearby shelf.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button on the soundbar or the remote control to turn the system on or off.

5.2 Source Selection

Use the 'Input' button on the remote or the soundbar's integrated controls to cycle through available input sources: Bluetooth, HDMI (ARC), AUX, USB.

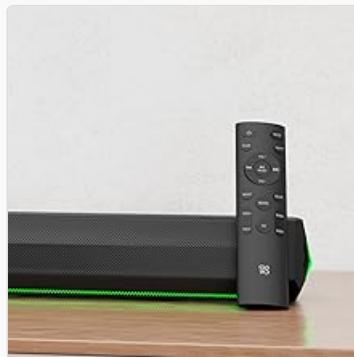


Image 5.1: The soundbar and its remote control, used for adjusting settings and selecting input sources.

5.3 Volume Control

Adjust the master volume using the 'VOL+' and 'VOL-' buttons on the remote or the soundbar. Bass and treble levels can also be adjusted via the remote control.

5.4 Equalizer Modes

The soundbar features 4 pre-set equalizer modes to optimize audio for different content:

- **Movie Mode:** Enhances dialogue and cinematic effects.
- **News Mode:** Optimizes vocal clarity.
- **Music Mode:** Provides balanced audio for music playback.
- **3D Mode:** Creates a wider soundstage effect.

Select these modes using the dedicated buttons on the remote control.

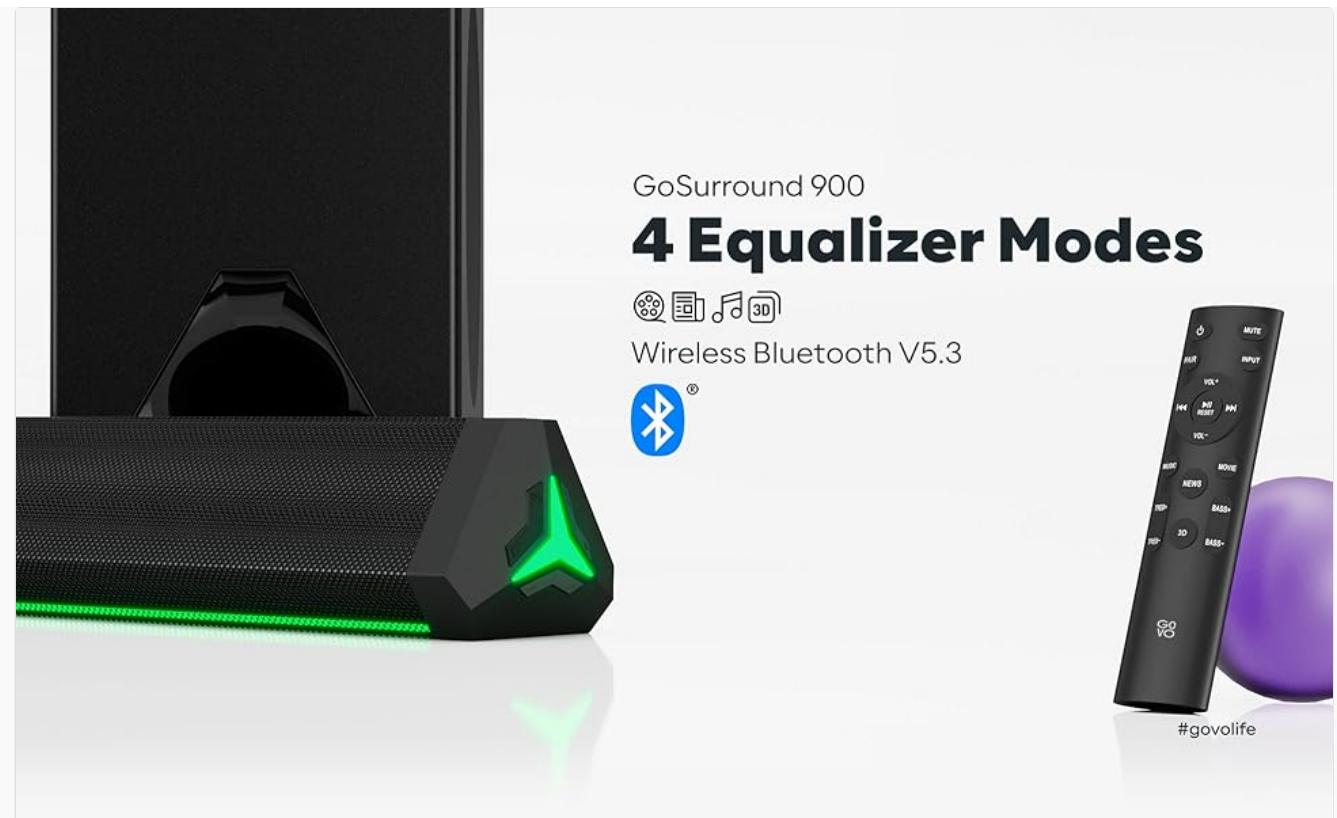


Image 5.2: The soundbar system with its remote, illustrating the availability of four equalizer modes and Bluetooth v5.3 connectivity.

5.5 Dynamic LED Lights

The soundbar features dynamic LED lighting. Control or disable these lights using the remote control if desired.



Image 5.3: A close-up view of the soundbar's end, showcasing its integrated green LED lighting.

6. CONNECTIVITY

6.1 Bluetooth v5.3

To pair your device via Bluetooth:

1. Turn on the soundbar and select Bluetooth mode. The LED display will indicate 'BT'.
2. Enable Bluetooth on your mobile device and search for 'GOSURROUND 900'.
3. Select the soundbar to pair. Once connected, the soundbar will confirm.

6.2 HDMI (ARC)

Connect an HDMI cable from the soundbar's HDMI ARC port to your TV's HDMI ARC port. Ensure your TV's HDMI ARC function is enabled in its settings.

6.3 AUX Input

Use the provided AUX cable to connect the soundbar to any device with a 3.5mm audio output jack.

6.4 USB Playback

Insert a USB flash drive (FAT32 format) containing MP3 audio files into the USB port. The soundbar will automatically switch to USB mode and begin playback.



Integrated controls

Multiple Connectivity
Bluetooth V5.3 & (HDMI, USB, AUX)

Image 6.1: A detailed view of the soundbar's integrated control panel and various connectivity ports, including HDMI, USB, and AUX.

7. MAINTENANCE

To ensure the longevity and optimal performance of your soundbar system:

- Keep the soundbar and subwoofer away from direct sunlight, heat sources, and moisture.
- Clean the surfaces with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure proper ventilation around the units.

- Avoid placing heavy objects on the soundbar or subwoofer.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **No Power:**

- Check if the power cable is securely connected to the soundbar and the power outlet.
- Ensure the power outlet is functioning.

- **No Sound:**

- Verify the correct input source is selected (Bluetooth, HDMI, AUX, USB).
- Increase the volume on both the soundbar and the connected device.
- Check all audio cables for secure connections.
- If using HDMI ARC, ensure ARC is enabled on your TV and the correct HDMI port is used.

- **Bluetooth Pairing Issues:**

- Ensure the soundbar is in Bluetooth pairing mode.
- Disable and re-enable Bluetooth on your device.
- Move your device closer to the soundbar.
- Clear previous Bluetooth connections on your device and try pairing again.

- **Remote Control Not Working:**

- Check and replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the soundbar's sensor.

9. SPECIFICATIONS

Feature	Specification
Model Name	GOSURROUND 900
Speaker Type	Soundbar with Subwoofer
Surround Sound Channel Configuration	2.1
Speaker Maximum Output Power	200 Watts
Subwoofer Diameter	6.5 Inches
Connectivity Technology	Bluetooth v5.3, HDMI (ARC), AUX, USB
Bluetooth Range	33 Feet (approx. 10 meters)
Control Method	Remote Control, Integrated Controls
Mounting Type	Tabletop or Wall Mount
Product Dimensions (Soundbar)	9D x 90W x 7.9H Centimeters

Feature	Specification
Item Weight	5.9 kg
Material	Plastic
Color	Midnight Black
Country of Origin	China

10. WARRANTY AND SUPPORT

Your GOVO GOSURROUND 900 Soundbar System comes with a **1 Year Manufacturer's Warranty**. Please retain your purchase receipt for warranty claims.

For technical support, service, or further inquiries, please refer to the contact information provided on your warranty card or visit the official GOVO support website.

© 2023 GOVO. All rights reserved.
This manual is subject to change without notice.