

Spigen AMP04529

Spigen AquaShield Floating Universal Waterproof Phone Pouch

Model: AMP04529

INTRODUCTION

The Spigen AquaShield Floating Universal Waterproof Phone Pouch is designed to protect your mobile device from water, dust, and sand, allowing you to use your phone safely in various environments. Its IPX8 certification ensures water resistance up to 30 meters (100 feet), and the floatable design prevents loss in water. This manual provides essential information for the proper use and maintenance of your waterproof pouch.

SAFETY INFORMATION

- **Perform a Waterproof Test:** Before first use, and periodically thereafter, place a dry tissue inside the pouch, seal it completely, and submerge it in water for at least 30 minutes. Check the tissue for any moisture. **Do not use the pouch if the tissue is wet.**
- **Ensure Proper Sealing:** Always ensure the lock system is fully closed and secured before exposing the pouch to water.
- **Avoid Sharp Objects:** Keep the pouch away from sharp objects that could puncture or damage the material, compromising its waterproof integrity.
- **Temperature Limits:** Avoid exposing the pouch to extreme temperatures, as this may affect its material and sealing capabilities.
- **Face ID/Fingerprint Sensors:** Face ID is generally not compatible underwater. Fingerprint sensors may also be unreliable through the pouch material.
- **Touch Sensitivity:** While the pouch allows for touch screen use, sensitivity may be reduced, especially underwater.

PACKAGE CONTENTS

Your Spigen AquaShield Floating Universal Waterproof Phone Pouch package includes:

- 1 x Spigen AquaShield Floating Universal Waterproof Phone Pouch
- 1 x Adjustable Neck Strap

SETUP

1. **Initial Waterproof Test:** As mentioned in the Safety Information, perform a waterproof test with a dry tissue before placing your device inside.
2. **Open the Pouch:** Gently pull open the two clips at the top of the pouch. This will release the secure lock mechanism.
3. **Insert Your Device:** Carefully slide your mobile phone into the pouch. Ensure it is centered to allow for optimal touch screen access and camera use. The pouch is designed to accommodate devices up to 6.9 inches.
4. **Secure the Lock System:** Align the top edges of the pouch and firmly push down the two clips until they click into place. Verify that both clips are fully closed and there are no gaps.
5. **Attach the Neck Strap:** Thread the adjustable neck strap through the designated loops on the top of the pouch. Adjust the strap length for comfortable and secure carrying.



Secure **L**ck System.

Effortlessly pop device in and out.

Completely sealed to protect your phone underwater.

Figure 1: Steps for opening, inserting a phone, and locking the pouch.

OPERATING INSTRUCTIONS

- **Touch Screen Operation:** The soft TPU material allows for sensitive touch screen interaction. For best results, ensure the screen is clean and dry before placing it in the pouch.
- **Taking Photos/Videos:** The transparent design on both sides allows for clear photos and videos. Align your phone's

camera with the clear window for optimal results. Note that image quality may be slightly affected underwater due to light refraction.

- **Floating Feature:** The integrated air pocket provides buoyancy, allowing the pouch to float on water if accidentally dropped. This helps prevent loss of your device.
- **Universal Compatibility:** The pouch is designed to fit most smartphones up to 6.9 inches, including various iPhone, Pixel, and Galaxy series models.



Crystal Clear View.

Transparent view on both sides makes it perfect for taking **quality photos** and operating **touch screen** functions easily.

Figure 2: Using the touch screen and camera through the pouch.



Floatable Waterproof Case.

Less likely to get lost, even if you drop it in the water.
Air Pocket protects device from impact.

Figure 3: The floatable feature of the waterproof pouch.

MAINTENANCE

- **Cleaning:** After each use, especially in saltwater, rinse the pouch with fresh water and wipe it dry with a soft cloth. Do not use abrasive cleaners or solvents.
- **Inspection:** Regularly inspect the pouch for any signs of wear, tears, or damage to the material or the sealing mechanism. Discontinue use if any damage is found.
- **Storage:** Store the pouch in a cool, dry place away from direct sunlight and sharp objects. Avoid folding or creasing the pouch excessively, as this may weaken the material over time.

TROUBLESHOOTING

Issue: Water inside the pouch after use.

Solution: Immediately remove your device. Perform a waterproof test with a dry tissue. If the tissue gets wet, the pouch may be damaged or was not sealed correctly. Inspect the pouch for punctures or tears. If damaged, replace the pouch. Always ensure the lock system is fully engaged before use.

Issue: Touch screen is unresponsive or difficult to use.

Solution: Ensure your phone screen and the inside of the pouch are dry. Water between the screen and the pouch can interfere with touch sensitivity. For underwater use, physical buttons (e.g., volume buttons for camera shutter) may be more reliable than the touch screen.

Issue: Pouch fogs up inside.

Solution: Fogging can occur due to temperature differences and humidity. Ensure your phone and the inside of the pouch are completely dry before sealing. Opening the pouch in a dry environment and allowing it to air out can help.

SPECIFICATIONS

Brand	Spigen
Model Number	AMP04529
Material	Thermoplastic Polyurethane (TPU)
Water Resistance Level	IPX8 Certified (Waterproof up to 30 meters / 100 feet)
Item Dimensions	8.66 x 4.92 x 0.55 inches (22 x 12.5 x 1.4 cm)
Item Weight	80 g
Compatibility	Universal, fits phones up to 6.9 inches (e.g., iPhone, Pixel, Galaxy S/Z Fold/Flip Series)



Universal Compatibility.

Suitable for almost all mobile devices up to
Galaxy S22 Ultra(6.9 inch).

Figure 4: Universal compatibility and extra space for essentials.



IPX8 Certified Waterproof Rating.

Safe to use in water up to **30 meters (100ft)**.

Figure 5: IPX8 Certified Waterproof Rating, safe up to 30 meters (100ft).

WARRANTY AND SUPPORT

Spigen products are designed for quality and durability. For specific warranty information and customer support, please refer to the official Spigen website or contact their customer service directly. Keep your purchase receipt for warranty claims. You can visit the official Spigen store for more information: [Spigen Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question