

## BLAUPUNKT PB10DB

# Blaupunkt PB10DB Bluetooth Karaoke Speaker User Manual

Model: PB10DB

## 1. INTRODUCTION

---

Thank you for purchasing the Blaupunkt PB10DB Bluetooth Karaoke Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and keep it for future reference. The PB10DB is a portable party speaker designed for high-quality audio playback and karaoke, featuring Bluetooth connectivity, USB, and AUX inputs.

## 2. SAFETY INFORMATION

---

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Keep the speaker away from water and other liquids. The product is indicated as waterproof, but avoid submerging it.
- Do not attempt to disassemble or modify the speaker. Repairs should only be performed by qualified personnel.
- Use only the specified charging accessories.
- Ensure proper ventilation around the speaker during use.
- Avoid listening at excessively high volumes for prolonged periods to prevent hearing damage.

## 3. PACKAGE CONTENTS

---

Please check that all items are present in the package:

- Blaupunkt PB10DB Bluetooth Karaoke Speaker
- Power Adapter/Charging Cable
- User Manual (this document)
- Microphone (if included in your specific package)

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the various parts of your Blaupunkt PB10DB speaker.



**Figure 1:** Front view of the Blaupunkt PB10DB speaker, showcasing the dual speaker grilles and dynamic LED lighting. The top panel features a display and control buttons.



**Figure 2:** Angled view of the Blaupunkt PB10DB speaker, highlighting its portable design and the side profile.

### Controls and Ports (Typical Layout)

- **Power Button:** Turns the speaker on/off.
- **Mode Button:** Switches between Bluetooth, USB, AUX, and FM radio modes.
- **Volume Control:** Adjusts the master volume.
- **Play/Pause Button:** Controls media playback.
- **Previous/Next Track Buttons:** Navigates through tracks.
- **Microphone Input (MIC IN):** For connecting a wired microphone for karaoke.
- **USB Port:** For playing music from a USB drive or charging external devices.
- **AUX Input (3.5mm):** For connecting external audio devices via an audio cable.
- **Charging Port:** For connecting the power adapter to charge the speaker.

## 5. SETUP

---

### 5.1 Charging the Speaker

1. Connect the provided power adapter to the charging port on the speaker.
2. Plug the adapter into a suitable power outlet.
3. The charging indicator light will illuminate (color may vary) to show that the speaker is charging.
4. Once fully charged, the indicator light may change color or turn off. Disconnect the charger.

A full charge typically takes several hours and provides approximately 8 hours of playback time.

## 5.2 Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until the display lights up and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button again for a few seconds until the display turns off and you hear an audible prompt.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode button until "Bluetooth" or a similar indicator appears on the display. The speaker will enter pairing mode, indicated by a flashing Bluetooth icon or LED.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Blaupunkt PB10DB" from the list of found devices.
4. Once paired, the speaker will emit an audible confirmation, and the Bluetooth indicator will stop flashing.
5. You can now play audio from your device through the speaker.

The speaker will automatically attempt to reconnect to the last paired device when powered on.

### 6.2 Karaoke Function

1. Connect a wired microphone (not always included) to the MIC IN port on the speaker.
2. Ensure the microphone is switched on (if it has a power switch).
3. Play your desired karaoke track via Bluetooth, USB, or AUX.
4. Adjust the microphone volume and echo effects (if available on the speaker) using the dedicated controls.

### 6.3 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port.
2. Press the Mode button to switch to USB mode. The speaker will automatically begin playing music from the USB drive.
3. Use the Play/Pause and Previous/Next Track buttons to control playback.

### 6.4 AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the speaker.
2. Connect the other end of the cable to the headphone jack or audio output of your external audio device.
3. Press the Mode button to switch to AUX mode.
4. Control playback and volume from your external audio device.

## 7. MAINTENANCE

---

### 7.1 Cleaning

- Always power off the speaker and disconnect it from the power source before cleaning.
- Use a soft, dry cloth to wipe the exterior of the speaker.
- Do not use abrasive cleaners, waxes, or solvents, as these may damage the finish.

### 7.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically (e.g., every 3 months) to maintain battery

health.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided power adapter.
No sound from speaker.	Volume is too low or muted. Incorrect input mode.	Increase volume. Press the Mode button to select the correct input (Bluetooth, USB, AUX).
Bluetooth pairing fails.	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker. Turn off other Bluetooth devices.
Microphone not working.	Microphone not connected properly or switched off. Microphone volume too low.	Check microphone connection. Ensure microphone is powered on. Adjust microphone volume.
USB playback not working.	USB drive not formatted correctly or unsupported file types.	Ensure USB drive is formatted to FAT32 and contains MP3 files. Try a different USB drive.

## 9. SPECIFICATIONS

<b>Model Name:</b>	PB10DB
<b>Brand:</b>	BLAUPUNKT
<b>Connectivity Technology:</b>	Auxiliary, Bluetooth, USB
<b>Maximum Speaker Output Power:</b>	1000 Watts
<b>Audio Output Mode:</b>	Stereo
<b>Mounting Type:</b>	Table Mount
<b>Material:</b>	Metal and Plastic
<b>Speaker Type:</b>	Tweeter
<b>Special Feature:</b>	Music
<b>Recommended Uses:</b>	For music player
<b>Color:</b>	Blue
<b>Waterproof:</b>	True
<b>Control Method:</b>	Touch
<b>Tweeter Diameter:</b>	4 Centimeters
<b>Average Battery Life:</b>	8 hours

<b>Compatible Devices:</b>	Laptop, Smartphone
<b>Power Source:</b>	Battery Powered
<b>Item Weight:</b>	105 Grams
<b>Product Dimensions (L x W x H):</b>	24 x 69 x 2.5 cm

## 10. WARRANTY AND SUPPORT

---

Blaupunkt products are designed and manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official Blaupunkt website. For technical support, troubleshooting assistance, or service inquiries, please contact Blaupunkt customer support through their official channels.

- **Official Website:** [www.blaupunkt.com](http://www.blaupunkt.com)
- **Customer Service:** Refer to your regional Blaupunkt website for contact details.