

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LEGO](#) /

> [LEGO Marvel Spider-Man Building Toy, Fully Articulated Action Figure, Superhero Movie Set with Web Elements, Gift for Grandchildren, Collectible Model for Boys, Girls and Kids Ages 8 and Up, 76226](#)

LEGO 6378963

LEGO Marvel Spider-Man Figure 76226 Instruction Manual

Model: 76226 | Brand: LEGO

PRODUCT OVERVIEW

The LEGO Marvel Spider-Man Figure (76226) is a fully articulated, buildable action figure designed for fans aged 8 and over. This set allows you to construct a detailed Spider-Man figure, bringing the Marvel Universe to life. Standing approximately 9.5 inches (24 cm) tall, the figure is highly poseable, enabling dynamic action poses and imaginative play scenarios. It includes web accessories to enhance play and display.



Image: The LEGO Marvel Spider-Man Figure 76226, shown both in its product packaging and as a fully assembled, poseable figure with web accessories.

ASSEMBLY AND SETUP

This LEGO set contains 258 pieces. Assembly is required. Follow the step-by-step instructions provided in the box. For an enhanced building experience, you can utilize the free LEGO Building Instructions app.

Using the LEGO Builder App

The LEGO Builder App offers digital building instructions, allowing you to view, zoom, and rotate the model in 3D as you build. This can provide an immersive and interactive construction process. The app also allows you to save your building progress and pick up where you left off.

Your browser does not support the video tag.

Video: An overview of the LEGO Builder App, demonstrating its features for digital building instructions, including 3D model viewing, zooming, rotating, and saving progress.

Assembly Steps Overview

1. **Unpack Components:** Carefully open the box and sort the LEGO pieces. It is recommended to organize pieces by color or type to facilitate assembly.
2. **Follow Instructions:** Refer to the included physical instruction booklet or the LEGO Builder App for detailed, step-by-step assembly guidance.
3. **Connect Joints:** Pay close attention to the articulation points (joints) during assembly to ensure the figure's full poseability.
4. **Attach Accessories:** Once the main figure is complete, attach the web elements and any other accessories as instructed.



Image: A child's hands are shown assembling a part of the LEGO Spider-Man figure, with various pieces and web accessories laid out on a table.

OPERATING THE FIGURE

The LEGO Marvel Spider-Man Figure is designed for dynamic play and display. Its fully jointed limbs allow for a wide range of motion and posing.

- **Posing:** Gently bend, twist, and turn the figure's arms, legs, and head at the joints to achieve desired poses. The figure is designed to be flexible and durable for action-packed play.
- **Web Elements:** Utilize the included web accessories by attaching them to Spider-Man's hands to simulate web-slinging action.
- **Display:** When not in play, the figure can be posed and displayed as a collectible model. Its stable base allows for various standing positions.



A FULLY JOINTED, BUILDABLE SPIDER-MAN LEGO® FIGURE

Image: A fully assembled LEGO Spider-Man figure is shown in a dynamic, action-oriented pose on a simulated rooftop, highlighting its articulation.

Your browser does not support the video tag.

Video: A demonstration of the LEGO Marvel Spider-Man Figure 76226, showcasing its articulation and how it can be posed for play and display.

MAINTENANCE

To ensure the longevity and appearance of your LEGO Marvel Spider-Man Figure, follow these simple maintenance guidelines:

- **Cleaning:** Dust the figure regularly with a soft, dry cloth. For deeper cleaning, use a mild soap solution and a soft brush, then rinse thoroughly with clean water and air dry. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the figure in a clean, dry environment away from direct sunlight and extreme temperatures to prevent discoloration or damage to the plastic.
- **Handling:** While durable, avoid excessive force when posing or playing with the figure to prevent stress on the joints or breakage of smaller pieces.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Figure parts detach easily.	Pieces may not be fully pressed together during assembly, or excessive force is being applied during play.	Ensure all connections are firmly pressed until they click into place. Reduce excessive force when posing. Refer to the instruction manual or app for correct assembly.
Figure does not stand stably.	Incorrect leg or foot positioning.	Adjust the figure's leg and foot joints to find a balanced stance. Ensure the feet are flat on the surface.
Missing or damaged pieces.	Manufacturing error or accidental loss.	Contact LEGO Customer Service for replacement parts. Keep your purchase receipt handy.

SPECIFICATIONS

- **Model Number:** 76226
- **Item Model Number:** 6378963
- **Number of Pieces:** 258
- **Assembled Height:** Approximately 9.5 inches (24 cm)
- **Product Dimensions:** 7.52 x 10.32 x 2.4 inches (packaging)
- **Item Weight:** 11.7 ounces
- **Recommended Age:** 8 years and up
- **Manufacturer:** LEGO
- **Release Date:** September 1, 2022

WARRANTY AND SUPPORT

LEGO products are manufactured to high-quality standards. For any issues with missing or defective parts, or for further assistance with assembly, please contact LEGO Customer Service directly. Information on how to contact LEGO support can typically be found on the LEGO website or within the product packaging.

The LEGO Builder App ([link to LEGO Builder App](#)) provides comprehensive digital instructions and support for building your LEGO sets.



