

ASTGMI C3

ASTGMI C3 Kids Digital Camera Instruction Manual

Model: C3

INTRODUCTION

Thank you for purchasing the ASTGMI C3 Kids Digital Camera. This manual provides essential information for the safe and effective use of your new camera. Please read it thoroughly before use and keep it for future reference.

SETUP

1. What's in the Box

Before you begin, please check the package contents:

- 1 x ASTGMI C3 Kids Digital Camera
- 1 x 32GB Micro SD Card
- 1 x USB Charging Cable
- 1 x Camera Lanyard
- 1 x User Manual



PRODUCT INCLUDED:



1*Kids Camera



1*Memory Card



1*User Manual



1*Camera Lanyard



1*USB Charging Cable



Image: The product package contents, including the camera, 32GB memory card, user manual, lanyard, and USB charging cable.

2. Charging the Camera

The camera has a built-in 650mAh rechargeable battery. For optimal performance, fully charge the camera before first use.

1. Connect the small end of the included USB charging cable to the camera's charging port.
2. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged (approximately 4 hours), the light will change or turn off.

A full charge provides approximately 4 hours of continuous use. The camera features an automatic shutdown function (3-5 minutes) to preserve battery life.

3. Inserting the Micro SD Card

The camera comes with a 32GB Micro SD card for storing photos and videos.

1. Locate the Micro SD card slot on the side of the camera.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove the card, push it gently inward until it clicks, then release, and it will spring out.



Image: A detailed view of the camera's side, highlighting the USB charging port and the Micro SD card slot. The image also shows the camera's button layout.

OPERATING INSTRUCTIONS

1. Camera Overview and Controls

Familiarize yourself with the camera's buttons and their functions:

- **Power/Back Button:** Turns the camera on/off, or returns to the previous menu.
- **Video/Photo/Confirm Button:** Switches between photo and video modes, or confirms selections in menus.
- **Up/Delete Button:** Navigates up in menus, or deletes selected items.
- **Right Button:** Navigates right in menus.
- **Left Button:** Navigates left in menus.

- **Down/Frame Change Button:** Navigates down in menus, or changes photo frames.



Image: The ASTGMI C3 camera displaying icons for its key features: 12MP Photo, 1080P Video, Playback, Games, Portable design, Time-lapse, Burst Shooting, 2-inch IPS Screen, USB Charging, and Multi-Functions.

2. Taking Photos

The camera captures 8-megapixel photos.

1. Press the **Power Button** to turn on the camera.
2. Ensure the camera is in photo mode (indicated by a camera icon on the screen). If not, press the **Video/Photo/Confirm Button** to switch.
3. Frame your shot using the 2.0-inch IPS screen.
4. Press the **Video/Photo/Confirm Button** to take a picture.

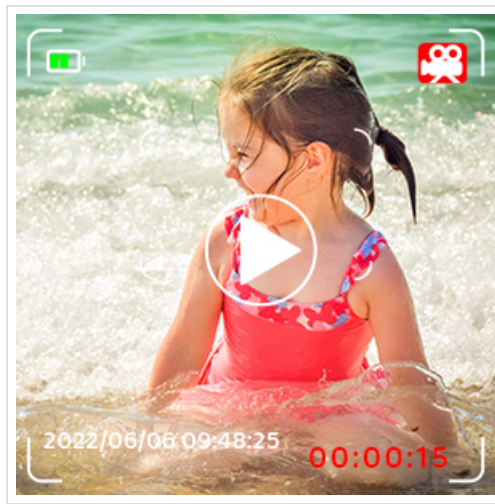


Image: The camera's screen showing a captured image with a date and time stamp, demonstrating the playback interface.

3. Recording Videos

The camera records videos in 1080P HD resolution.

1. Turn on the camera.
2. Press the **Video/Photo/Confirm Button** to switch to video recording mode (indicated by a video camera icon).
3. Press the **Video/Photo/Confirm Button** again to start recording. A red 'REC' indicator will appear.
4. Press the **Video/Photo/Confirm Button** once more to stop recording.

VIDEO RECORD FUNCTION

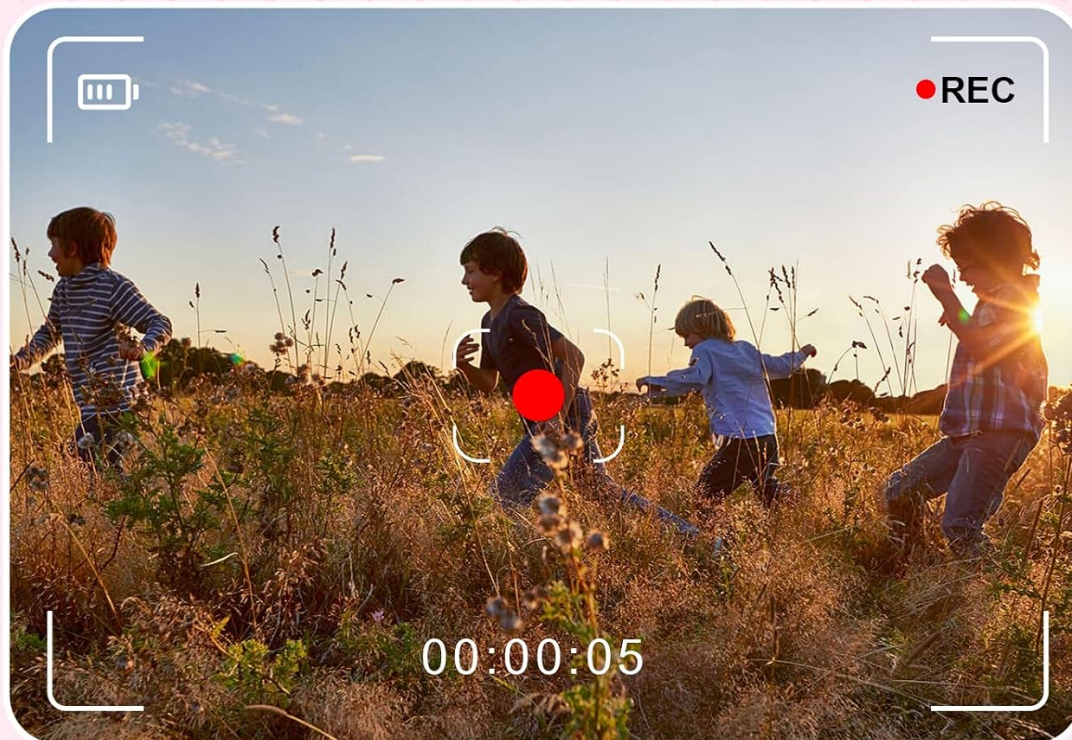


Image: The camera's screen displaying a video recording in progress, with a 'REC' indicator and a timer.

4. Special Features

The ASTGMI C3 camera includes several fun and creative features:

- **Photo Frames:** Choose from 15 cute cartoon frames to add to your photos. Use the **Down/Frame Change Button** to cycle through frames in photo mode.
- **Filters:** Apply 6 different filter effects (e.g., Red, Green, Contrast, Normal, B&W, Yellow, Blue) to customize your pictures.
- **Time-lapse:** Set a delay (2s/5s/10s) before taking a photo.
- **Burst Shooting:** Capture multiple photos in quick succession.
- **Games:** Enjoy 5 built-in puzzle games (Snaker, Tetris, Sokoban, etc.) for entertainment. Access them through the camera's menu.



15

CUTE FRAMES

Make taking pictures more fun
Help to develop kids' creativity



7

COLORFUL FILTERS

Red, Green, Contrast color,
Normal, B&W, Yellow, Blue



Image: The camera showcasing examples of the 15 cute photo frames and 7 colorful filters that can be applied to images.



Image: A child's hands holding the camera, with the screen displaying one of the 5 built-in fun games.



Image: A close-up of the camera screen showing an example of a unicorn-themed photo frame applied to an image.

5. Connecting to a Computer

You can transfer photos and videos to a computer using the USB cable.

1. Connect the camera to your computer using the USB cable.
2. The camera will appear as a removable disk drive on your computer.
3. Open the drive to access and transfer your files.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Do not use abrasive materials or harsh chemicals.
- Keep the camera away from dust and sand.

2. Battery Care

- Avoid fully discharging the battery frequently.
- Charge the camera regularly, even if not in use, to maintain battery health.
- Do not expose the camera to extreme temperatures.

3. Storage

- Store the camera in a cool, dry place when not in use.
- Remove the Micro SD card if storing for extended periods.

TROUBLESHOOTING

Common Issues and Solutions

- **Camera won't turn on:**
Ensure the battery is charged. Connect the camera to a power source using the USB cable and try again.
- **Cannot take photos/videos:**
Check if the Micro SD card is inserted correctly and has sufficient free space. The camera may also need to be reset if it's unresponsive.
- **Poor image/video quality:**
Ensure the lens is clean. Take photos in well-lit environments. Note that this is a children's toy camera and its performance should not be compared to professional cameras.
- **Camera freezes:**
Press and hold the Power button for 10 seconds to force a shutdown, then restart the camera.
- **Files not transferring to computer:**
Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port or cable.

SPECIFICATIONS

Feature	Specification
Model Name	C3
Brand	ASTGMI
Rear Webcam Resolution	12 Megapixels
Effective Still Resolution	8 Megapixels
Video Capture Resolution	1080p Full HD
Optical Zoom	4x
Digital Zoom	4x
Screen Size	2.0 inches
Display Type	LCD
Image Stabilization	Digital
Supported File Formats	JPEG, MP4
Connectivity Technology	USB
Memory Card Type	Micro SD (32GB included)
Battery Capacity	650 mAh
Item Weight	2.8 Ounces
Age Range Description	3 - 10 Years
Country of Origin	China

WARRANTY AND SUPPORT

1. Warranty Information

The ASTGMI C3 Kids Digital Camera comes with a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

2. Customer Support

If you encounter any issues or have questions regarding your ASTGMI C3 Kids Digital Camera, please contact our customer support team. Refer to the contact information provided on the product packaging or the official ASTGMI website for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question