

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [ecozy](#) /

> [ecozy DW-CT200A Portable Countertop Dishwasher User Manual](#)

ecozy DW-CT200A

ecozy DW-CT200A Portable Countertop Dishwasher User Manual

Model: DW-CT200A

1. INTRODUCTION

Thank you for choosing the ecozy DW-CT200A Portable Countertop Dishwasher. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before use and retain it for future reference. This compact dishwasher is designed for convenience in various settings, including apartments, RVs, boats, and camping environments.



Image 1.1: The ecozy DW-CT200A Dishwasher, designed for convenience without permanent hookups.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please adhere to the following safety guidelines:

- Always connect the dishwasher to a properly grounded electrical outlet.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the dishwasher during operation.
- Use only detergents specifically designed for automatic dishwashers.
- Do not open the door during a wash cycle, as hot water may spray out.

- Ensure the drainage hose is securely placed to prevent water spillage.
- Unplug the dishwasher before cleaning or performing any maintenance.
- This appliance is factory tested, and trace quantities of leftover water may be present. This is normal and does not indicate a defect.

3. PRODUCT OVERVIEW

3.1 Components

The ecozy DW-CT200A includes the main dishwasher unit, dish racks, a cutlery basket, a water pitcher for manual filling, and a drainage hose.

3.2 Key Features

- **Compact Design:** Measuring 16.85 × 16.73 × 18.03 inches, it is suitable for small living spaces and portable use.
- **Dual Water Supply:** Supports both manual filling via a built-in 5L water tank and direct connection to a faucet.
- **Five Washing Programs:** Offers Normal, Quick, ECO, Heavy/Babycare, and Rinse/Fruit cycles to suit various cleaning needs.
- **High-Temperature Cleaning:** The Heavy/Babycare mode provides extra cleaning power with water temperatures up to 167°F (75°C).
- **Extra Dry Function:** Features heating elements for hot air drying and automatic ventilation for up to 72 hours to ensure dishes are warm, dry, and odor-free.
- **User-Friendly Controls:** Tilted electronic touch control panel with an LED display for easy operation.
- **Visible Washing Process:** A transparent door and internal LEDs allow you to monitor the cleaning progress.
- **Efficient Cleaning:** Equipped with higher and lower rotating spray arms for comprehensive, corner-to-corner coverage.
- **Low Noise Operation:** Operates at approximately 48 dB, comparable to a refrigerator.



Image 3.1: The ecozy DW-CT200A Dishwasher with its transparent door and internal lighting.

Mini but Great



Note: If you choose to add water manually, please leave a 10" spacing.

Image 3.2: Dimensions and capacity illustration of the ecozy DW-CT200A Dishwasher.

Powerful But Quiet



Image 3.3: Noise level comparison of the ecozy DW-CT200A Dishwasher.

4. SETUP

4.1 Unpacking and Placement

1. Carefully remove the dishwasher from its packaging. Inspect for any damage.
2. Place the dishwasher on a stable, level surface. Ensure there is adequate space around the unit for ventilation and access. The compact design allows it to fit under most standard cabinets or in a corner.
3. If you plan to manually add water, ensure at least 10 inches of spacing above the unit for pouring.



Image 4.1: Example placement of the ecozy DW-CT200A Dishwasher in a kitchen.

4.2 Water Supply

The dishwasher offers two methods for water supply:

- **Manual Water Tank Filling:** Use the provided pitcher to pour water directly into the designated opening on top of the dishwasher. The built-in 5L tank eliminates the need for a permanent water hookup.
- **Faucet Connection:** Connect the dishwasher directly to your faucet using a water hose (provided). Note that a faucet adapter is not included and may be required depending on your faucet type.

Dual Water Filling Modes



Image 4.2: Illustration of dual water filling modes.

4.3 Drainage

Connect the drainage hose to the appropriate outlet on the dishwasher and direct the other end into a sink or suitable drain. The hose comes with a suction cup, but it is recommended to secure the hose with a weighted object to prevent it from dislodging during the drainage cycle.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The dishwasher features a tilted electronic touch control panel with an LED display. The panel includes buttons for power, mode selection, start/pause, and the Extra Dry function. The LED display shows the remaining cycle time and selected settings.



Image 5.1: Detailed view of the control panel.

5.2 Loading Dishes

Arrange dishes in the racks, ensuring they do not block the spray arms. The dishwasher can accommodate plates up to 11 inches if angled correctly, but 10-inch plates are optimal for maximizing space. Place cups and bowls upside down. Utilize the cutlery basket for forks, spoons, and knives.



Image 5.2: Illustration of dish loading capacity.

5.3 Adding Detergent

The ecozy dishwasher is compatible with dishwasher pods, powder, and gel detergents. For optimal cleaning, use approximately 8g of detergent for standard cycles or 16g for the Heavy cycle. Place the detergent in the designated dispenser.

5.4 Selecting a Washing Program

Press the 'Mode' button to cycle through the available programs:

- **Normal:** 69 minutes, 154°F (68°C)
- **Quick:** 29 minutes, 144°F (62°C)
- **ECO:** 59 minutes, 154°F (68°C)
- **Heavy/Babycare:** 89 minutes, 167°F (75°C) - Ideal for heavily soiled items or baby bottles requiring high-temperature sanitization.
- **Rinse/Fruit:** 19 minutes - For rinsing dishes or washing fruits and vegetables.

5 Washing Modes

				
Normal	Quick	ECO	Heavy Babycare	Rinse/Fruit
—	—	—	—	—
69 mins	29 mins	59 mins	89 mins	19 mins
—	—	—	—	—
154°F(68°C)	144°F(62°C)	154°F(68°C)	167°F(75°C)	/



Image 5.3: Overview of the five washing programs.

Image 5.4: The Rinse/Fruit cycle for washing produce.

5.5 Starting a Cycle

After loading dishes, adding detergent, and selecting a program, press the 'S/P' (Start/Pause) button to begin the wash cycle. The LED display will show the remaining time.

5.6 Extra Dry Function

Activate the 'Extra Dry' function for enhanced drying performance. This mode uses hot air drying for 60 minutes, followed by 72 hours of automatic ventilation to prevent moisture and odors.

Extra Dry Mode

60 Minutes Hot Air Drying

72 Hours Ventilated Storage



Antibacterial



Dry



Odorless



Image 5.5: Extra Dry Mode features.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Filter Cleaning:** Regularly clean the filter system located at the bottom of the dishwasher. Remove food particles and rinse under running water.
- **Interior Cleaning:** Wipe down the interior with a damp cloth after each use to prevent food buildup. For deeper cleaning, run an empty cycle with a dishwasher cleaner.
- **Exterior Cleaning:** Clean the exterior with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.
- **Spray Arm Maintenance:** Periodically check the spray arms for clogged nozzles and clear any blockages.

7. TROUBLESHOOTING

If you encounter issues with your ecozy DW-CT200A dishwasher, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord unplugged, door not fully closed, no water supply.	Ensure power cord is securely plugged in. Close the door firmly. Check water supply (tank filled or faucet connected).
Dishes are not clean	Improper loading, insufficient detergent, clogged spray arms, incorrect program selected.	Reload dishes correctly. Use appropriate amount of detergent. Clean spray arm nozzles. Select a more intensive wash program.
Water leakage	Drainage hose not secured, door seal damaged, excessive detergent.	Ensure drainage hose is properly secured. Check door seal for damage. Use recommended detergent amount.
Dishes are not dry	Extra Dry function not activated, improper loading.	Activate the Extra Dry function. Ensure dishes are loaded to allow proper air circulation.

If the problem persists after attempting these solutions, please contact customer support for assistance.

8. SPECIFICATIONS

Specification	Value
Brand	ecozy
Model Name	DW-CT200A
Installation Type	Countertop
Product Dimensions (D x W x H)	42.8D x 42.5W x 45.8H Centimetres (16.85 x 16.73 x 18.03 inches)
Item Weight	12.02 kg (26.5 Pounds)
Capacity	5 Liters (Water Tank)
Voltage	120 Volts
Number of Settings	5 (Washing Programs)
Cycle Options	Heated Dry
Special Feature	Extra-Drying Function
Color	White
Controls Type	Touch
Material	Stainless Steel
Noise Level	48 Decibels

Specification	Value
Display Type	LED
Included Components	Adapter, Dishwasher

9. WARRANTY AND SUPPORT

Your ecozy DW-CT200A Portable Countertop Dishwasher comes with a manufacturer's warranty. For specific warranty details, registration, or to contact customer support for any questions or issues, please refer to the warranty card included with your product or visit the official ecozy website. Customer support is available to assist with troubleshooting and service requests.