

ABC TKB1248

ABC Compatible Toner Cartridge for Kyocera TK-1248 Ecosys MA2001 MA2001w PA2001 PA2001w User Manual

This manual provides essential instructions for the installation, operation, and maintenance of your ABC Compatible Toner Cartridge.

INTRODUCTION

Thank you for choosing the ABC Compatible Toner Cartridge. This product is designed to provide reliable printing performance with your compatible Kyocera Ecosys printers. Please read this manual carefully before installation and use to ensure optimal results and to prevent damage to the cartridge or your printer.

SAFETY INFORMATION

- Keep toner cartridges out of reach of children.
- Do not incinerate used toner cartridges. Toner dust can ignite.
- Avoid inhaling toner dust. If toner is spilled, use a damp cloth for cleaning. Do not use a vacuum cleaner, as the fine toner particles may cause an explosion or fire.
- Store cartridges in a cool, dry place away from direct sunlight and extreme temperatures.

SETUP AND INSTALLATION

Follow these steps to properly install your new toner cartridge:

1. **Unpack the Cartridge:** Carefully remove the new toner cartridge from its packaging. Avoid touching the drum surface or electrical contacts.
2. **Gently Shake:** Gently rock the cartridge horizontally several times to distribute the toner evenly inside.
3. **Remove Protective Seals:** Remove any protective tape, seals, or covers from the cartridge as indicated by the packaging. Refer to the image below for typical protective elements.
4. **Open Printer Cover:** Open the front cover of your Kyocera Ecosys printer.
5. **Remove Old Cartridge:** Carefully pull out the used toner cartridge from the printer.

6. **Insert New Cartridge:** Align the new toner cartridge with the guides inside the printer and push it firmly until it clicks into place.
7. **Close Printer Cover:** Close the front cover of the printer. The printer will typically perform a self-test or calibration.



Image 1: The ABC Compatible Toner Cartridge. This image displays the full toner cartridge, highlighting its black casing and the label with product information. Ensure all protective seals are removed before installation.

OPERATING INSTRUCTIONS

Once the toner cartridge is installed, your printer is ready for use. The cartridge is designed for standard printing tasks.

- **Printing:** Initiate print jobs from your computer as usual. The printer will automatically detect the new toner cartridge.
- **Page Yield:** This cartridge provides an estimated yield of **1500 pages** based on 5% coverage on A4 paper. Actual yield may vary significantly based on content of printed pages, print settings, and other factors.
- **Toner Level Monitoring:** Monitor toner levels through your printer's software utility or control panel. Replace the cartridge when the printer indicates low toner or print quality degrades significantly.

MAINTENANCE AND STORAGE

- **Storage:** Store unused toner cartridges in their original sealed packaging in a cool, dry environment, away from direct sunlight and extreme temperatures.
- **Handling:** Always handle the toner cartridge by its designated handles or edges. Avoid touching the imaging drum or electrical contacts.
- **Disposal:** Dispose of used toner cartridges responsibly according to local environmental regulations. Many manufacturers and retailers offer recycling programs.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not recognize cartridge.	Cartridge not installed correctly; protective seals not removed; dirty electrical contacts.	Reinstall the cartridge, ensuring it clicks into place. Check for and remove all protective seals. Gently clean electrical contacts on the cartridge and in the printer with a lint-free cloth.
Poor print quality (faded, streaks, spots).	Low toner; uneven toner distribution; damaged drum; printer settings.	Gently rock the cartridge to redistribute toner. Check toner levels. If issues persist, the cartridge may need replacement. Verify printer settings for print quality.
Toner leakage.	Damaged cartridge; improper handling.	Remove the cartridge carefully. Clean any spilled toner with a damp cloth. If the cartridge is damaged, replace it.

SPECIFICATIONS

Feature	Detail
Brand	ABC
Model Number	TKB1248
Compatible with Kyocera Models	Kyocera TK-1248, ECOSYS MA 2001, ECOSYS MA 2001w, ECOSYS PA 2001, ECOSYS PA 2001w
Page Yield	Approximately 1500 pages (at 5% A4 coverage)
Toner Color	Black
Cartridge Type	Compatible
Components Included	1 Toner Cartridge

WARRANTY INFORMATION

Specific warranty details for this ABC Compatible Toner Cartridge may vary. Please refer to the product packaging or contact your retailer for information regarding warranty coverage and terms.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact the retailer or the manufacturer's customer support for assistance. Provide your product model number (TKB1248) and purchase details when seeking support.

© 2024 ABC. All rights reserved. Kyocera, Ecosys, and TK-1248 are trademarks of Kyocera Corporation. This product is a compatible replacement and not an original Kyocera product.