

[Manuals.plus](#) /

› [ist computers](#) /

› Lenovo ThinkPad E16 Business Laptop User Manual

ist computers ThinkPad E16

Lenovo ThinkPad E16 Business Laptop User Manual

Model: ThinkPad E16 | Brand: ist computers

1. INTRODUCTION AND OVERVIEW

The Lenovo ThinkPad E16 Business Laptop is engineered for powerful performance and reliable operation, designed to meet the demands of various professional and personal tasks. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



Figure 1.1: Lenovo ThinkPad E16 Business Laptop

This laptop is compliant with US Department of Defense's MIL-STD 810H standards, ensuring an optimal balance of durability and reliability for handling heavy workloads, data processing, design tasks, and content review.

2. KEY FEATURES

- **Powerful Performance:** Equipped with an AMD Ryzen 7 7730U processor (8 cores, 16 threads, up to 4.5GHz boost, 16MB cache), 40GB DDR4 RAM, and a 1TB PCIe NVMe SSD for blazing-fast multitasking and rapid load times.
- **Crisp Display & Privacy:** Features a 16" WUXGA (1920x1200) IPS 300 nits anti-glare display with AMD Radeon Graphics. Includes an FHD 1080p webcam with privacy shutter.
- **Versatile Connectivity:** Offers 2x USB-C (Power Delivery 3.0/DisplayPort 1.4), 2x USB-A 3.2 Gen 1, HDMI 1.4b, Ethernet (RJ-45), and a combo audio jack. Supports Wi-Fi 6 and Bluetooth 5.1.
- **Enhanced Security:** Includes a backlit keyboard and fingerprint reader for secure and efficient workflows.
- **Operating System:** Pre-installed with Windows 11 Professional 64-bit, featuring AI-powered Copilot for intelligent assistance.

16:10
1920 x 1200

91%
screen-to-body

IPS
Anti-Glare



Figure 2.1: Display Features (16:10, 91% Screen-to-Body, IPS Anti-Glare)

Large Capacity Battery



Quick charge
Up to 80% in 60 minutes

Figure 2.2: Large Capacity Battery with Quick Charge Capability

MIL-STD-810H military test passed

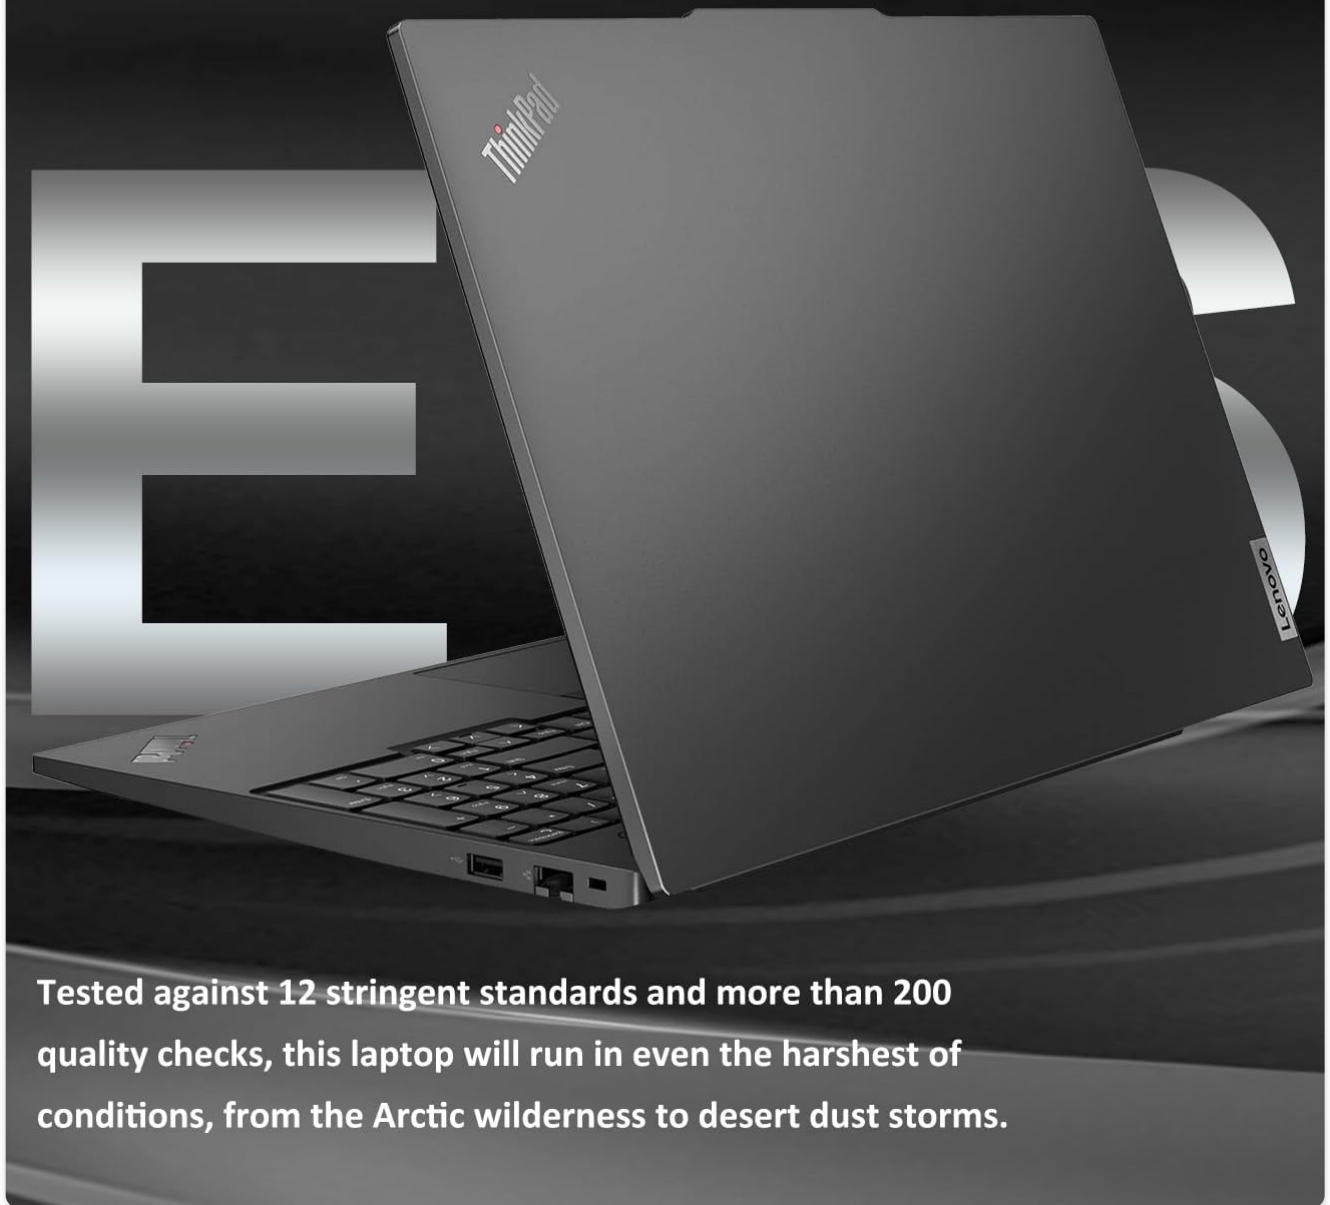


Figure 2.3: MIL-STD-810H Military Standard Durability



Figure 2.4: AMD Ryzen 7 Processor and Radeon Graphics

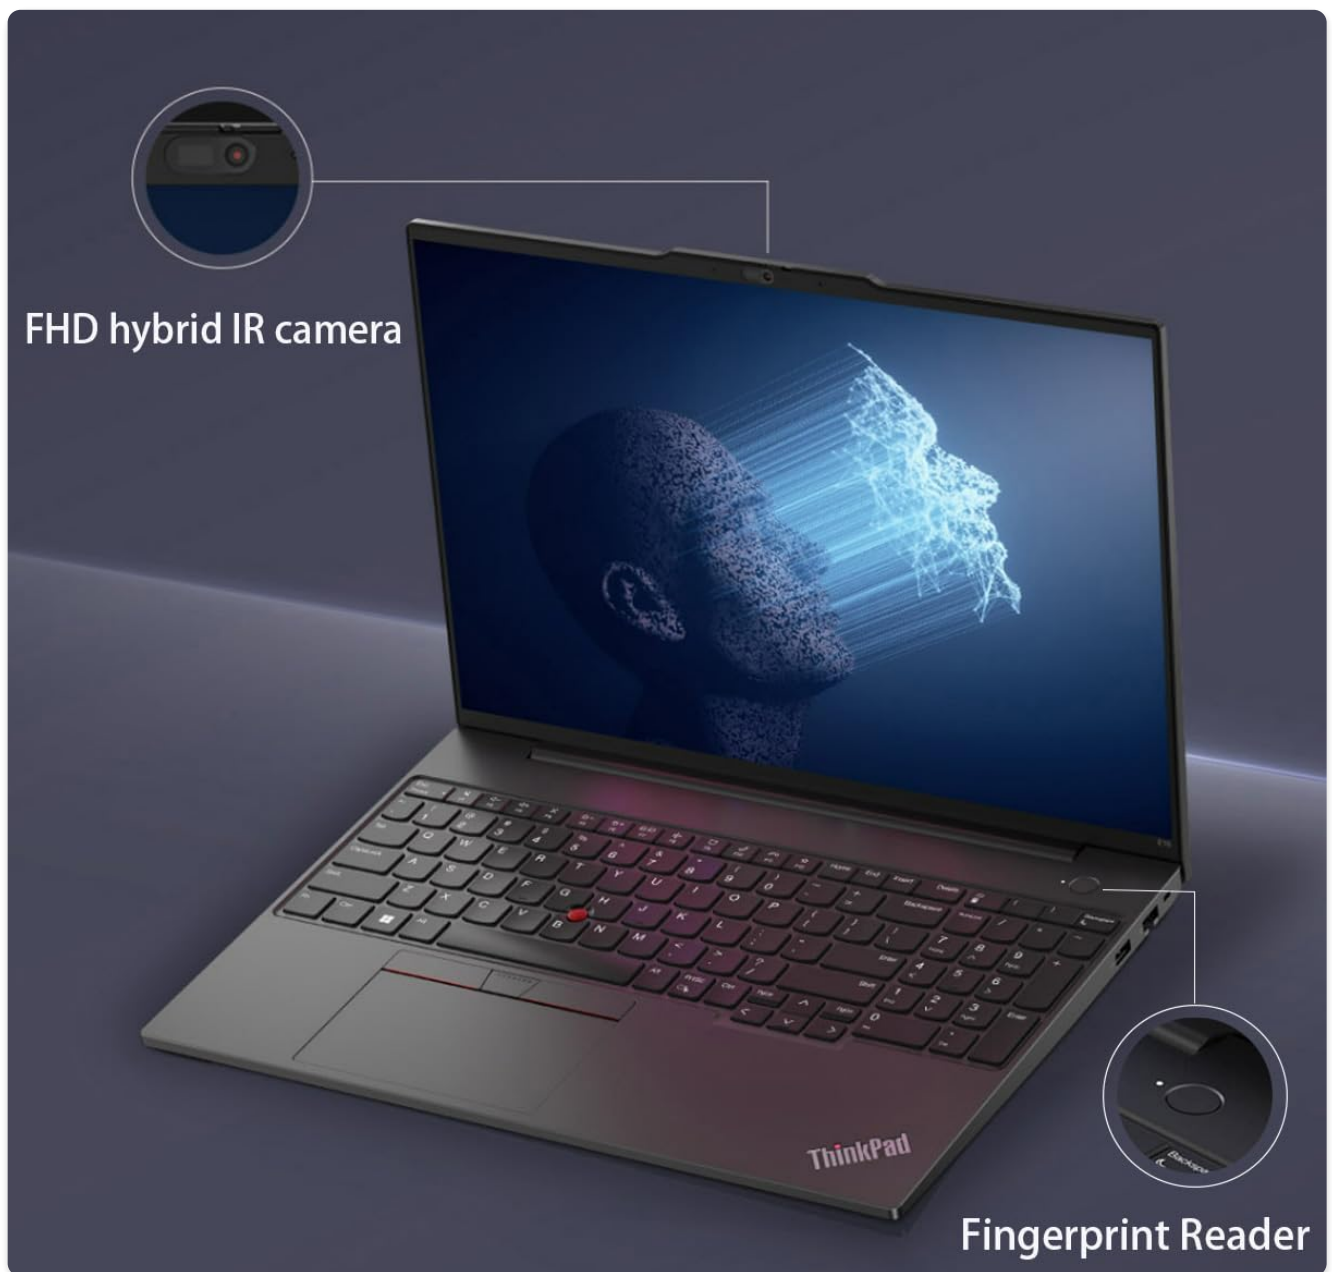


Figure 2.5: FHD Hybrid IR Camera and Fingerprint Reader

Get connected & stay connected

The ThinkPad E16 comes with all the ports needed for peripherals and better collaboration, including USB-C 3.2, USB-A 3.2 and 2.0, to name a few.



Figure 2.6: Versatile Connectivity Ports

3. SETUP GUIDE

3.1 Unboxing and Initial Inspection

1. Carefully remove the laptop and all accessories from the packaging.
2. Verify that all components listed in the 'What's in the Box' section are present: Lenovo ThinkPad E16 Gen 1 Laptop, 65W AC Adapter with Power Cord, User Manual.
3. Inspect the laptop for any physical damage. If damage is found, contact customer support immediately.

3.2 Connecting to Power

1. Connect the power cord to the 65W AC Adapter.
2. Plug the AC Adapter into a wall outlet.
3. Connect the adapter's output plug to the USB-C power input port on the laptop.
4. Allow the battery to charge for at least 30 minutes before initial use, or until the battery indicator shows sufficient charge.

3.3 Initial Boot and Windows Setup

1. Open the laptop lid and press the power button (located on the top right of the keyboard).
2. Follow the on-screen prompts to complete the Windows 11 Pro setup process. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.
3. It is recommended to connect to the internet during setup to ensure the latest updates are installed.

4. OPERATING INSTRUCTIONS

4.1 Keyboard and Touchpad Usage

- The keyboard features a comfortable layout with a numeric keypad.
- To activate the backlit keyboard, use the appropriate function key combination (refer to keyboard icons).
- The touchpad supports multi-touch gestures for navigation. The TrackPoint (red dot in the center of the keyboard) provides an alternative precise pointing method.

4.2 Connecting Peripherals

- **USB Devices:** Connect USB-A devices to the USB 3.2 Gen 1 ports. Use the USB-C ports for compatible USB-C devices, including power delivery and DisplayPort functionality.
- **External Displays:** Connect external monitors via the HDMI 1.4b port or a USB-C port (with DisplayPort 1.4 support). The laptop supports up to 3 external monitors at 4K (3840x2160) @60Hz.
- **Network:** Use the RJ-45 Ethernet port for wired network connections. For wireless, connect to Wi-Fi networks via Wi-Fi 6.
- **Audio:** Use the combo audio jack for headphones or external microphones.

4.3 Using the Webcam and Microphone

- The integrated FHD 1080p webcam is located at the top of the display.
- Utilize the physical privacy shutter to cover the webcam when not in use for enhanced security.
- The built-in microphone array is suitable for video calls and voice commands.



Figure 4.1: Laptop in use for video conferencing

5. MAINTENANCE

5.1 Cleaning Your Laptop

- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to clean the display.
- For the keyboard and chassis, use a soft cloth. Avoid harsh chemicals or abrasive materials.
- Ensure the laptop is powered off and unplugged before cleaning.

5.2 Software Updates

- Regularly check for Windows updates through the Settings app to ensure optimal performance and security.
- Keep drivers updated, especially for graphics and chipset, by checking the manufacturer's support website.

5.3 Battery Care

- To prolong battery life, avoid extreme temperatures.
- Do not leave the laptop constantly plugged in at 100% charge for extended periods.
- For long-term storage, charge the battery to about 50% and store the laptop in a cool, dry place.

5.4 Storage Management

- Regularly delete unnecessary files and empty the recycle bin to free up storage space.
- Consider using cloud storage for large files to reduce local disk usage.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

- **Laptop not turning on:** Ensure the AC adapter is securely connected and the battery has sufficient charge. Try holding the power button for 10-15 seconds for a hard reset.
- **Display problems (no image, flickering):** Check external monitor connections. Try adjusting brightness settings. If using an external monitor, ensure it's powered on and correctly selected as the output.
- **Wi-Fi connectivity issues:** Verify Wi-Fi is enabled in Windows settings. Restart your router and the laptop. Ensure drivers are up to date.
- **Slow performance:** Close unnecessary applications. Check for background processes. Ensure sufficient free storage space. Run a virus scan.
- **Keyboard or Touchpad unresponsive:** Restart the laptop. Check for driver updates in Device Manager.

6.2 Seeking Further Assistance

If you encounter issues not covered in this manual or require advanced technical support, please refer to the Warranty and Support section for contact information.

7. SPECIFICATIONS

Feature	Detail
Standing screen display size	16 Inches
Screen Resolution	1920 x 1200 pixels
Max Screen Resolution	1920x1200 Pixels
Processor	2 GHz ryzen_7 (AMD Ryzen 7 7730U)
RAM	40 GB DDR4
Memory Speed	3200 MHz
Hard Drive	1 TB SSD (PCIe NVMe)
Graphics Coprocessor	Integrated AMD Radeon
Chipset Brand	AMD
Card Description	Integrated
Graphics Card Ram Size	16 GB
Wireless Type	802.11ax, Bluetooth 5.1
Operating System	Windows 11 Pro
Item Weight	3.99 pounds
Product Dimensions	14.02 x 9.75 x 0.78 inches

Feature	Detail
Color	Black
Power Source	AC & Battery

8. WARRANTY AND SUPPORT

The Lenovo ThinkPad E16 Business Laptop comes with specific warranty coverage:

- **Upgraded Components Warranty:** A three-year warranty from Issaquah Highlands Tech covers the upgraded RAM (Memory) and SSD (Storage).
- **Manufacturer Warranty:** A one-year warranty from the original manufacturer covers the remaining components of the laptop.

For technical support or warranty claims, please contact Issaquah Highlands Tech for issues related to RAM/SSD upgrades, or refer to Lenovo's official support channels for other hardware components.

What's in the Box:

- Lenovo ThinkPad E16 Gen 1 Laptop
- 65W AC Adapter with Power Cord
- User Manual