

[Manuals.plus](#) /

› [Macook](#) /

› Macook Mini Rice Cooker MCUS-81273 User Manual

Macook MCUS-81273

Macook Mini Rice Cooker MCUS-81273 User Manual

Model: MCUS-81273

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Macook Mini Rice Cooker, model MCUS-81273. Please read all instructions carefully before first use and retain this manual for future reference. This compact appliance is designed for cooking rice and other grains, featuring a 3-cup uncooked capacity, automatic keep-warm function, and a non-stick inner pot.

SAFETY PRECAUTIONS

- Always ensure the rice cooker is placed on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep out of reach of children.
- Unplug from the outlet when not in use and before cleaning.
- Avoid touching hot surfaces. Use handles or oven mitts. The outer lip of the cooker can become hot during operation.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Ensure proper ventilation around the appliance during use.

PRODUCT COMPONENTS



6 CUPS OF COOKED RICE

SUITABLE FOR 2-4 PERSONS



x3
cups

=



x6
bowls of rice



Main Unit: The Macook Mini Rice Cooker with its lid, showing the 'COOK' and 'WARM' indicators.



Non-stick Inner Pot: Removable pot for cooking rice and other foods.



Measuring Cup and Rice Spoon: Included accessories for precise measurement and serving.

Your Macook Mini Rice Cooker package includes:

- 1x Rice Cooker Main Unit
- 1x Non-stick Inner Pot
- 1x Tempered Glass Lid
- 1x Rice Measuring Cup
- 1x Rice Spoon
- 1x User Manual (this document)

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the inner pot, tempered glass lid, measuring cup, and rice spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a dry, level, and heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
4. **Initial Operation (Optional):** For the first use, a slight "burning plastic" smell may be noticeable. This is normal and typically dissipates after the first cycle. You may run a cycle with just water to help eliminate this.

OPERATING INSTRUCTIONS

Cooking Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. The cooker has a maximum capacity of 3 cups of uncooked rice, yielding approximately 6 cups of cooked rice.
2. **Rinse Rice:** Rinse the rice thoroughly under cold water until the water runs clear. This helps remove excess starch.
3. **Add Water:** Place the rinsed rice into the non-stick inner pot. Add the appropriate amount of water. A common ratio for white rice is 1:1.5 (1 cup rice to 1.5 cups water). Adjust water quantity based on rice type and desired consistency.
4. **Place Pot:** Insert the inner pot into the main unit and ensure it is seated correctly.
5. **Close Lid:** Place the tempered glass lid securely on the cooker.
6. **Plug In:** Connect the power cord to a suitable electrical outlet.
7. **Start Cooking:** Press the "COOK" switch down. The "COOK" indicator light will illuminate.

8. **Automatic Keep Warm:** Once the rice is cooked, the cooker will automatically switch to "WARM" mode, and the "WARM" indicator light will illuminate. This function keeps the rice warm until serving.

9. **Serve:** Use the provided rice spoon to fluff and serve the rice.

Note: Cooking time for 3 cups of rice can be approximately 40 minutes. For optimal results, allow the rice to rest in "WARM" mode for 10-15 minutes after cooking before serving.



Image: The Macook Mini Rice Cooker illustrating its capacity of 6 cups of cooked rice, suitable for 2-4 persons.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and performance of your rice cooker.

1. **Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot and Accessories:** The non-stick inner pot, tempered glass lid, measuring cup, and rice spoon are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.

3. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water.
4. **Non-stick Care:** To preserve the non-stick coating, avoid using metal utensils in the inner pot. Use only the provided plastic rice spoon or other non-scratch utensils.



Image: The inner pot and other accessories are designed to be dishwasher safe for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Insufficient water; rice not soaked (for some types).	Ensure correct water-to-rice ratio. Add a small amount of hot water and switch to COOK mode for a few minutes, then let it rest.
Rice is too soft or mushy.	Too much water.	Reduce water slightly in future cooking cycles.
"Burning plastic" smell during first use.	New appliance odor.	This is normal. The smell should dissipate after the first few uses. Ensure good ventilation.
Brown mark on the bottom of the rice.	Rice left on "WARM" for too long.	Serve rice promptly after cooking or transfer to another container if keeping warm for extended periods.
Outer surface of cooker is hot.	Normal operation.	This is expected. Always use caution and avoid direct contact with hot surfaces during and immediately after cooking.

SPECIFICATIONS

- **Brand:** Macook
- **Model Name:** MCUS-81273
- **Capacity:** 1.5 liters (3 cups uncooked rice)
- **Color:** Aqua
- **Special Features:** Automatic Keep Warm, Non-Stick Inner Pot, Portable Design
- **Wattage:** 300 watts
- **Voltage:** 120 volts
- **Material:** Aluminum (body), Tempered Glass (lid)

- **Product Care:** Dishwasher Safe (inner pot, lid, accessories)
- **Included Components:** Rice measuring cup, Rice pot, Rice spoon, Tempered glass lid, User manual

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Macook customer service. Refer to the product packaging or the official Macook website for the most current contact details.

Website: [Visit the Macook Store on Amazon](#)

