

## KODAK RDPF-700V

# KODAK RDPF-700V 7-inch HD IPS Digital Photo Frame User Manual

Model: RDPF-700V

## 1. INTRODUCTION

Thank you for choosing the KODAK RDPF-700V 7-inch HD IPS Digital Photo Frame. This device allows you to display your cherished photos and videos with vibrant clarity. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance and enjoyment of your digital photo frame.



Image 1.1: KODAK RDPF-700V Digital Photo Frame displaying a family photo, with the remote control.

## 2. SAFETY INFORMATION

Please read and follow these safety guidelines to prevent damage to the device or personal injury:

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight for extended periods.
- Use only the provided power adapter.
- Keep the device away from children and pets.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel for assistance.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- KODAK RDPF-700V Digital Photo Frame
- Remote Control
- Power Adapter (DC-Adapter)
- User Manual

## 4. PRODUCT OVERVIEW

The KODAK RDPF-700V features a 7-inch HD IPS display with a resolution of 1024 x 600, offering clear and vibrant image quality with a wide viewing angle. It includes 4GB of internal memory and supports external storage via USB drives and SD cards.

### 4.1. Physical Components



Image 4.1: Rear view of the digital photo frame highlighting dimensions, USB port, SD card slot, DC power interface, and the stand.

- **Display:** 7-inch HD IPS screen (1024x600 resolution).
- **USB Port:** For connecting USB drives.
- **SD Card Slot:** For inserting SD/SDHC memory cards.
- **DC Power Interface:** For connecting the power adapter.
- **Stand:** Detachable and 360° rotatable for flexible placement.
- **Control Buttons:** Located on the back for basic navigation.

## 5. SETUP

### 5.1. Powering On

1. Connect the power adapter to the DC Power Interface on the back of the frame.

2. Plug the power adapter into a wall outlet.
3. The frame will automatically power on. Follow the on-screen instructions for initial setup, including language selection and time zone.

## 5.2. Inserting Memory Cards or USB Drives

To display photos and videos from external storage:

- **SD Card:** Insert an SD or SDHC memory card (up to 64GB, not included) into the SD Card Slot with the metal contacts facing down.
- **USB Drive:** Insert a USB flash drive (up to 64GB, not included) into the USB Port.

The frame will automatically detect the inserted storage and prompt you to view its contents.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Displaying Photos and Videos

The frame supports common image formats like JPG, PNG, and BMP. Videos can also be played.

- Navigate through your stored media using the remote control or the buttons on the back of the frame.
- Select a photo or video to display it individually.
- Initiate a slideshow to automatically cycle through your media.

### 6.2. Remote Control Functions

# Multi Functions



Remote control



Multi language system



Picture



Clock



Calendar



Image 6.1: The digital photo frame highlighting its multi-functional capabilities, including remote control operation. The included remote control provides convenient access to all frame functions:

- **Navigation:** Use arrow keys to browse menus and media.
- **OK/Enter:** Confirm selections.
- **Menu:** Access main settings.
- **Exit:** Return to the previous screen.
- **Slideshow:** Start or pause a photo slideshow.
- **Volume:** Adjust audio for videos.
- **Power:** Turn the frame on or off.

## 6.3. Automatic Rotation



## Auto-Rotate Function and Wall Mount

Automatically adjust the orientation of your photo to display it perfectly



Image 6.2: The frame's automatic rotation feature, adapting to both portrait and landscape orientations, and its wall-mounting option.

The frame automatically adjusts the orientation of your photos (portrait or landscape) based on the frame's physical position. The detachable stand allows for easy adjustment between orientations.

### 6.4. Clock and Calendar Functions

The frame includes integrated clock and calendar features. These can be accessed and configured through the main menu using the remote control.

### 6.5. Wide Viewing Angle

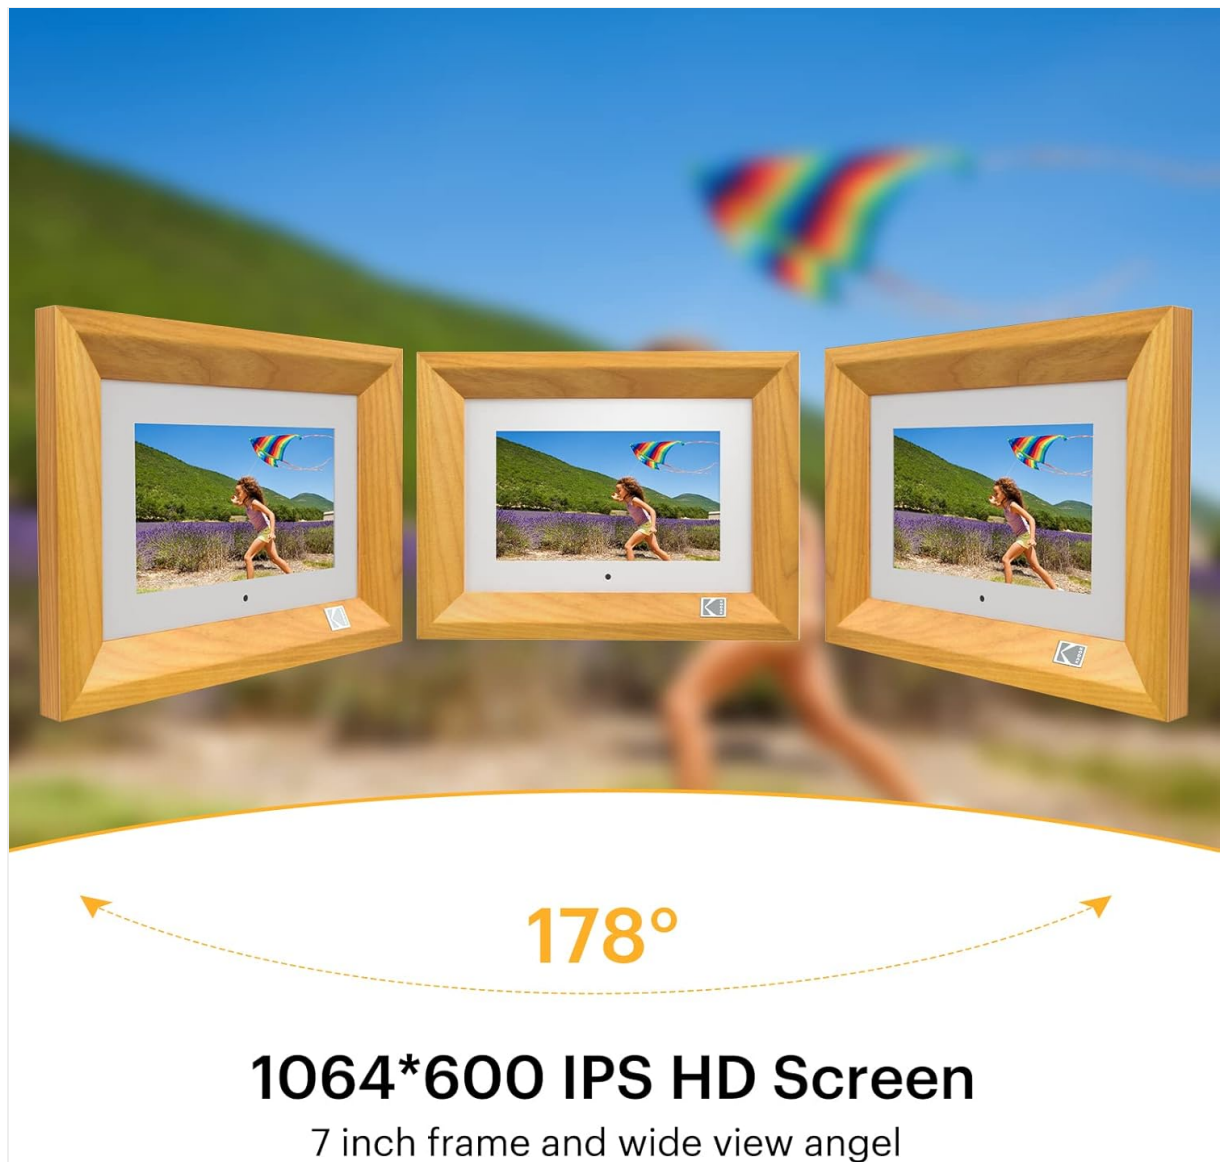


Image 6.3: The 178-degree wide viewing angle of the frame's HD IPS screen, ensuring clear visibility from various positions.

The IPS technology provides a 178-degree wide viewing angle, ensuring that images remain clear and vibrant even when viewed from the side.

## 7. MEMORY MANAGEMENT

The frame comes with 4GB of built-in memory. This can be expanded up to 64GB using a USB drive or an SD card.



## Big Storage Room

Built-in 4GB Memory can storage photo

Image 7.1: The frame's storage capabilities, including its built-in 4GB memory.

- **Internal Memory:** Store your favorite photos and videos directly on the frame's internal 4GB storage.
- **External Storage:** Easily transfer files from a computer to a USB drive or SD card, then insert them into the frame.
- **File Transfer:** Use the frame's menu to copy files between internal and external storage, if supported.

## 8. TROUBLESHOOTING

If you encounter issues with your digital photo frame, refer to the following common solutions:

- **Frame does not power on:** Ensure the power adapter is securely connected to both the frame and a working power outlet.
- **No image displayed:** Check if a memory card or USB drive is inserted correctly, or if photos are loaded onto the internal memory. Verify the image format is supported (JPG/PNG/BMP).
- **Remote control not working:** Ensure there are no obstructions between the remote and the frame. Replace the remote control battery if necessary.
- **Images are distorted or blurry:** Ensure the image resolution is appropriate for the frame's display (1024x600).
- **Automatic rotation not functioning:** Check if the frame is placed on a stable, flat surface. Ensure the auto-rotate feature is enabled in the settings.



## 9. SPECIFICATIONS

Feature	Specification
Model Number	RDPF-700V
Screen Size	7 Inch
Resolution	1024 x 600
Display Type	HD IPS
Internal Memory	4 GB
External Memory Support	USB Drive, SD Card (up to 64 GB)
Connectivity Technology	USB
Power Source	Electric Corded
Human Interface Input	Buttons, Remote Control
Frame Material	Wood
Product Dimensions	31 x 23.6 x 2.51 cm; 1.12 kg
Manufacturer	Maxtalent Industrial Limited

## 10. APP-BASED PHOTO SHARING (FRAMEO)




This digital photo frame is compatible with the Frameo app, allowing for easy photo and video sharing from your smartphone to the frame. The app enables multiple users to send media to the frame from anywhere in the world.

Your browser does not support the video tag.

Video 10.1: This video demonstrates the features of the Frameo app, including sharing photos and videos from a smartphone to a digital photo frame, adding captions, managing multiple users, and utilizing cloud backup. It also highlights new features like viewing frame photos directly in the app, hiding or deleting media, sending up to 100 photos at once, sending videos up to 2 minutes long, and Google Cast compatibility for displaying photos on a TV.

## 11. WARRANTY AND SUPPORT

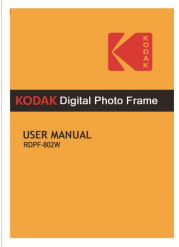For warranty information and technical support, please refer to the contact details provided with your purchase documentation or visit the official KODAK support website. Keep your proof of purchase for warranty claims.

	<p><a href="#">Kodak Digital Photo Frame RDPF-802W User Manual</a></p> <p>User manual for the Kodak Digital Photo Frame RDPF-802W. This guide provides instructions on setup, operation, features, and troubleshooting for the digital photo frame.</p>
	<p><a href="#">Kodak RDPF-1020W Digital Photo Frame User Manual</a></p> <p>Comprehensive user manual for the Kodak RDPF-1020W Digital Photo Frame, detailing setup, operation, features, specifications, and troubleshooting for viewing photos, music, and videos.</p>
	<p><a href="#">Ръководство за употреба KODAK RDPF-1028C Дигитална Фоторамка</a></p> <p>Подробно ръководство за употреба на дигиталната фоторамка KODAK RDPF-1028C. Научете за функции, настройки, безопасност и управление на файлове.</p>
	<p><a href="#">KODAK Classic Photo Frame RCF-1013W/RCF-8013W User Manual</a></p> <p>User manual for the KODAK Classic Photo Frame with WiFi connectivity, model RCF-1013W and RCF-8013W. Learn about installation, features, specifications, and technical support.</p>
	<p><a href="#">KODAK Classic Photo Frame / WiFi Enabled User Manual</a></p> <p>User manual for the KODAK Classic Photo Frame with WiFi connectivity. This guide covers setup, features, app usage, and technical specifications for models RCF-1013W and RCF-8013W.</p>
	<p><a href="#">KODAK WI-FI Photo Frame User Manual - Setup, Features, and Troubleshooting</a></p> <p>Comprehensive user manual for the KODAK WI-FI Photo Frame, covering setup, app usage, features like album, music, video, calendar, clock, weather, and troubleshooting common issues.</p>