

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Broonel](#) /
- › [Broonel Rechargeable Fine Tip Digital Stylus User Manual](#)

Broonel Rechargeable Fine Tip Digital Stylus (Compatible with Lenovo Tab M8 8")

Broonel Rechargeable Fine Tip Digital Stylus User Manual

Model: Rechargeable Fine Tip Digital Stylus (Compatible with Lenovo Tab M8 8")

Brand: Broonel

1. INTRODUCTION

Thank you for choosing the Broonel Rechargeable Fine Tip Digital Stylus. This stylus is designed to provide a precise and natural writing and drawing experience on your compatible Lenovo Tab M8 8" tablet. With its fine tip and rechargeable battery, it offers convenience and accuracy for all your digital tasks. Please read this manual carefully to ensure proper use and maintenance of your stylus.



Image: The Broonel Rechargeable Fine Tip Digital Stylus, showcasing its sleek grey design and fine tip.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Broonel Rechargeable Fine Tip Digital Stylus
- 1 x Micro USB Charging Cable
- 1 x Magnetic Charging Nub (if applicable, for specific charging methods)



Image: The complete stylus package contents, including the stylus, a Micro USB charging cable, and a magnetic charging nub.

3. SETUP

3.1 Charging the Stylus

Before first use, fully charge the stylus. The stylus features a rechargeable battery for extended use.

1. Locate the charging port on the stylus. This is typically covered by a small cap or integrated into the design.
2. Connect the Micro USB charging cable to the stylus's charging port.
3. Connect the other end of the USB cable to a USB power source, such as a computer's USB port or a USB wall adapter (not included).
4. An indicator light on the stylus will typically illuminate during charging and turn off or change color when fully charged.



Image: A close-up view of the stylus's charging port, showing the cap removed to reveal the charging interface.



Image: The stylus connected via its Micro USB cable to a laptop's USB port, illustrating the charging process.

3.2 No Bluetooth Required

This stylus does not require Bluetooth pairing. Simply charge it and it is ready for use with your compatible device.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

The stylus typically powers on automatically when removed from its charging state or when a button is pressed (if present). To conserve battery, the stylus may enter a sleep mode after a period of inactivity. To reactivate, simply touch the tip to the screen or press any button.

4.2 Using the Stylus

Hold the stylus like a regular pen. Touch the fine tip to your tablet's screen to interact with applications, write notes, draw, or navigate. The stylus is designed for precision and smooth operation.

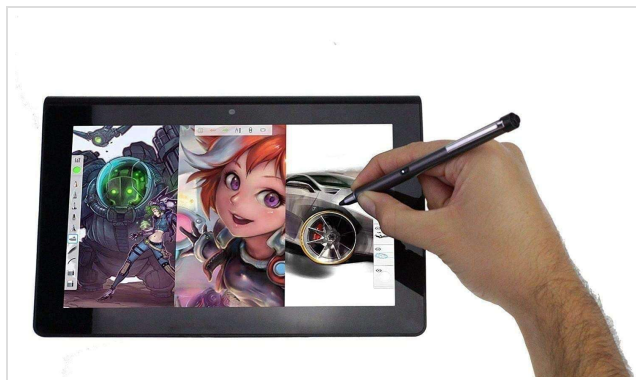


Image: A hand holding the Broomel stylus and actively using it on a tablet screen, demonstrating its application for digital tasks.

4.3 Active Sense Technology (Nib Adjustment)

The stylus incorporates Active Sense Technology, which may allow for slight adjustments to the nib for optimal accuracy.

While specific adjustment methods vary, ensure the nib is securely seated and clean for the best performance.



Image: A diagram illustrating the concept of adjusting the stylus nib for maximum accuracy, highlighting the precision capability.

5. MAINTENANCE

To ensure the longevity and optimal performance of your stylus, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the stylus body and tip with a soft, dry, lint-free cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the stylus in water.
- **Storage:** Store the stylus in a cool, dry place away from direct sunlight and extreme temperatures. When not in use, it is recommended to keep the stylus in a protective case or sleeve to prevent damage to the tip.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the stylus to about 50% and recharge every few months to maintain battery health.

6. TROUBLESHOOTING

If you encounter issues with your Broonel Digital Stylus, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stylus not responding	Low battery; Stylus in sleep mode; Incompatible device; Damaged tip.	Charge the stylus fully. Touch the tip to the screen or press a button to wake it. Ensure your tablet is a compatible Lenovo Tab M8 8" model. Inspect the tip for damage; if damaged, contact support.
Inaccurate or inconsistent input	Dirty screen; Damaged tip; Software glitch.	Clean your tablet screen. Inspect the stylus tip for wear or damage. Restart your tablet. Try using the stylus in different applications.
Stylus not charging	Faulty cable or power source; Charging port obstruction.	Try a different Micro USB cable and USB power source. Ensure the charging port is clean and free of debris.

If the problem persists after trying these solutions, please contact Broonel customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Broonel
Color	Grey
Compatibility	Lenovo Tab M8 8" tablets
Tip Type	Fine Tip
Connectivity	No Bluetooth Required
Power Source	Rechargeable Battery
Batteries Required	Yes (Built-in)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Broonel Rechargeable Fine Tip Digital Stylus comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical support, warranty claims, or any questions regarding your Broonel Digital Stylus, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details.