



Manuals.plus /

› COSTWAY /

› COSTWAY Electric Fireplace TV Stand User Manual

COSTWAY 10104US-WH-CYPF

COSTWAY Electric Fireplace TV Stand User Manual

Model: 10104US-WH-CYPF

PRODUCT OVERVIEW

The COSTWAY Electric Fireplace TV Stand is a versatile furniture piece designed to accommodate televisions up to 65 inches while providing the warmth and ambiance of an 18-inch electric fireplace. This unit combines storage convenience with heating functionality, making it a central addition to living rooms or bedrooms.



Image: Front view of the COSTWAY Electric Fireplace TV Stand in white, featuring a central electric fireplace and two side cabinets, with a large television placed on top.

Key Features:

- **Integrated Design:** Combines a spacious TV stand (58"L x 16"W x 25"H) with an 18-inch electric fireplace (19"W x 5"D x 17.5"H) for both storage and heating.
- **Efficient Heating:** Features a 1400W heater with 5000 BTU heat output, capable of heating up to 400 sq ft. Includes a thermostat (62°F-82°F) for consistent room temperature and energy saving.
- **Realistic Flame Effect:** Designed with realistic dancing flames and lifelike logs, offering 3-level flame brightness (L1/L2/L3). The flame function can be used independently of the heat for year-round ambiance.
- **Ample Storage:** Large countertop supports flat TVs up to 65 inches. Side cabinets include 3-level adjustable shelves to accommodate items of various heights.
- **Safety Features:** Equipped with an anti-toppling device for stability and CSA certified electric fireplace with overheat protection to prevent hazards.

SETUP AND ASSEMBLY

Assembly of the COSTWAY Electric Fireplace TV Stand is required. Please ensure all components are present and undamaged before beginning assembly. It is recommended to have two people for assembly to ensure stability and ease of handling larger components.

Product Dimension



Image: Diagram illustrating the overall dimensions of the TV stand (58"W x 16"D x 25"H) and the electric fireplace insert (19"W x 5"D x 17.5"H).

Important Considerations:

- **Location:** Choose a flat, stable surface for placement. Ensure adequate clearance around the unit for ventilation and safety.
- **Power Source:** Position the unit near a suitable electrical outlet. The fireplace operates on a standard corded electric power source.
- **Anti-Toppling Device:** For enhanced safety, especially in households with children or pets, securely install the included anti-toppling device to anchor the TV stand to the wall.
- **Adjustable Shelves:** The cabinet shelves are adjustable to three different levels, allowing customization for various item heights. Plan your storage needs during assembly.

More Details



Easy-to-clean Surface



Anti-tipping Device



Cable Management Hole



Convenient Cabinet Handle

Image: Detailed views highlighting the anti-tipping device, a cable management hole for organized wiring, and a convenient cabinet handle.

OPERATING INSTRUCTIONS

The electric fireplace can be operated using the control panel on the unit or the included remote control. Ensure the unit is properly plugged into a power outlet before operation.

Remote Control Functions:



Image: Visual guide to the remote control, showing buttons for Power On/Off, Heater Control (62°F-82°F Temp Selection), Flame Control (L3/L2/L1), Timer Setting (0.5H-6H), Heater Up (Temp+), and Heater Down (Temp-). The remote has an effective control distance of 26 ft and requires 2 AAA batteries (not included).

- **Power On/Off:** Press the power button to turn the fireplace on or off.
- **Heater Control:** Adjust the temperature between 62°F and 82°F using the temperature up/down buttons. The thermostat will maintain the set temperature.
- **Flame Control:** Cycle through 3 levels of flame brightness (L1, L2, L3) using the flame button.
- **Timer Setting:** Set an automatic shut-off timer from 0.5 hours to 6 hours.
- **Flame Only Mode:** The flame effect can be operated independently without heat, allowing for year-round use as a decorative element.



Image: Illustrates the option to use the fireplace with both flame and heat, or with flame only. Shows three distinct flame brightness levels (L1, L2, L3) for visual customization.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your COSTWAY Electric Fireplace TV Stand.

- **Cleaning:** The surface of the TV stand is designed to be easy-to-clean. Use a soft, damp cloth to wipe down surfaces. Avoid abrasive cleaners that may damage the finish.
- **Fireplace Insert:** Ensure the fireplace insert is cool before cleaning. Gently wipe the glass and exterior with a soft, dry cloth. Do not spray liquids directly into the unit.
- **Ventilation:** Periodically check that the air intake and outlet vents of the fireplace are clear of dust and obstructions to ensure proper airflow and prevent overheating.
- **Power Cord:** Inspect the power cord regularly for any signs of damage. If damaged, discontinue use and contact customer support.

TROUBLESHOOTING

If you encounter issues with your electric fireplace TV stand, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not fully plugged in, main power switch off, or circuit breaker tripped.	Check power outlet, ensure cord is securely plugged in, verify main power switch on the unit is on, reset circuit breaker if necessary.
No heat output.	Heat function not activated, thermostat set too low, or overheat protection activated.	Ensure heat function is on, increase thermostat setting, allow unit to cool down if overheat protection was triggered.
Flame effect not working.	Flame function not activated.	Press the flame control button on the unit or remote to activate.
Remote control not working.	Dead batteries, incorrect battery orientation, or obstruction between remote and unit.	Replace batteries (2 x AAA), ensure correct polarity, remove any obstructions, and point remote directly at the unit.
Unit makes unusual noises.	Minor fan noise is normal. If loud or unusual, internal component issue.	Ensure vents are clear. If noise persists and is concerning, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact COSTWAY customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	COSTWAY
Model Name	Electric Fireplace TV Stand
Model Number	10104US-WH-CYPF
Product Dimensions	16"D x 58"W x 25"H
Fireplace Insert Dimensions	19"W x 5"D x 17.5"H (18-inch fireplace)
Material	Engineered Wood, Metal, Plastic, Tempered Glass
Color	White
Power Source	Corded Electric
Heat Output	5000 BTU per Hour
Heating Coverage	400 sq ft
Heater Power	1400W
Thermostat Range	62°F - 82°F
Flame Brightness Levels	3 (L1/L2/L3)
Maximum Compatible TV Size	65 Inches
Item Weight	88 Pounds
Certifications	CSA Certified

SAFETY INFORMATION

Adhering to safety guidelines is crucial for the safe operation of your electric fireplace TV stand.

- **Overheat Protection:** The electric fireplace is equipped with an automatic overheat protection system that will shut off the unit if it reaches an unsafe temperature. If this occurs, unplug the unit, allow it to cool, and check for any obstructions around the vents before restarting.
- **Anti-Toppling Device:** Always install the provided anti-toppling device to secure the TV stand to the wall, preventing accidental tipping.
- **Ventilation:** Do not block the air intake or outlet vents of the fireplace. Maintain adequate clearance around the unit to ensure proper ventilation.
- **Electrical Safety:** Do not overload electrical outlets. Use a grounded outlet. Do not run the power cord under carpeting or in high-traffic areas where it could be damaged.
- **Placement:** Do not place flammable materials near the fireplace. Keep children and pets at a safe distance from the heating element.



Image: Illustrates key safety and design features: Overheat Protection, CSA Certification, Anti-toppling Device, Quiet Metal Hinge, and Adjustable Foot Pad.

WARRANTY AND SUPPORT

The COSTWAY Electric Fireplace TV Stand comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation included with your purchase or contact COSTWAY customer support.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact COSTWAY customer support. Contact information can typically be found on the product packaging, the official COSTWAY website, or within the purchase documentation.

When contacting support, please have your model number (10104US-WH-CYPF) and purchase date readily available to expedite the process.

