

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nova](#) /

› [Nova NHT 1074 / NHT 1076 Cordless Rechargeable Trimmer User Manual](#)

Nova NHT 1074 / NHT 1076

Nova NHT 1074 / NHT 1076 Cordless Rechargeable Trimmer User Manual

Model: NHT 1074 / NHT 1076

INTRODUCTION

Thank you for choosing the Nova NHT 1074 / NHT 1076 Cordless Rechargeable Trimmer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grooming device. Please read these instructions carefully before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Keep the appliance dry. Do not use it near water or in wet conditions.
- Do not immerse the appliance in water or any other liquid.
- Keep the appliance away from children.
- Always check the trimmer blades before use. Do not use if blades are damaged, as this may cause injury.
- Use only the charging cable provided with the appliance.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.
- Unplug the appliance before cleaning.

PACKAGE CONTENTS

Please check the package for the following items:

- Nova Cordless Rechargeable Trimmer (NHT 1074 / NHT 1076)
- USB Charging Cable
- Comb Attachments (3mm, 6mm, 9mm)

- Cleaning Brush
- Lubricating Oil (may vary by package)



Image: The Nova trimmer, two USB charging cables, and three comb attachments (3mm, 6mm, and 9mm) are displayed.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Nova trimmer:

- **Trimmer Head:** Contains the stainless steel blades for precise trimming.
- **On/Off Switch:** Located on the front for easy operation.
- **Charge Indicator Light:** Illuminates during charging and indicates battery status.
- **Charging Port:** Located at the bottom for connecting the USB charging cable.
- **Comb Attachments:** Adjustable guides for different trimming lengths (3mm, 6mm, 9mm).



Image: A detailed view of the Nova trimmer highlighting its main body, power button, and the three comb attachments.

SETUP

Charging the Trimmer

Before first use, fully charge the trimmer for optimal performance. The trimmer features a rechargeable battery providing up to 30 minutes of runtime.

1. Ensure the trimmer is switched off.
2. Insert the small end of the USB charging cable into the charging port at the bottom of the trimmer.
3. Connect the larger end of the USB cable to a compatible USB power source (e.g., computer, USB wall adapter).
4. The charge indicator light will illuminate, indicating that the trimmer is charging.
5. Once fully charged, the indicator light may change color or turn off (refer to specific model behavior). Disconnect the charger.

 **NOVA®**



USB CHARGING

30 Minutes of Run Time

Image: The Nova trimmer is shown connected to a laptop via its USB charging cable, illustrating the charging process.



Up To
30 MINUTES
of **RUNTIME**



**Rechargeable
Battery**



**Charge
Indicator**



Image: A close-up of the trimmer's body, emphasizing the charge indicator light and text indicating "Up To 30 MINUTES of RUNTIME" and "Rechargeable Battery".

Attaching and Detaching Comb Attachments

The trimmer comes with various comb attachments to achieve different hair lengths.

- **To Attach:** Align the comb attachment with the trimmer head and push it down until it clicks into place. Ensure it is securely fastened.
- **To Detach:** Gently push the comb attachment upwards from the trimmer head until it releases.

Always ensure the trimmer is switched off before attaching or detaching comb attachments.

OPERATING INSTRUCTIONS

Follow these steps for effective trimming:

1. **Prepare:** Ensure your beard or hair is clean and dry.
2. **Select Length:** Choose the desired comb attachment (3mm, 6mm, or 9mm) and securely attach it to the trimmer head. For a closer trim, you may use the trimmer without an attachment.
3. **Turn On:** Slide the On/Off switch to the "On" position.

4. **Trim:** Hold the trimmer with the blades flat against your skin. Move the trimmer slowly against the direction of hair growth. Use light pressure.
5. **Shape:** For detailing and shaping, remove the comb attachment and carefully use the bare blades.
6. **Turn Off:** Once finished, slide the On/Off switch to the "Off" position.

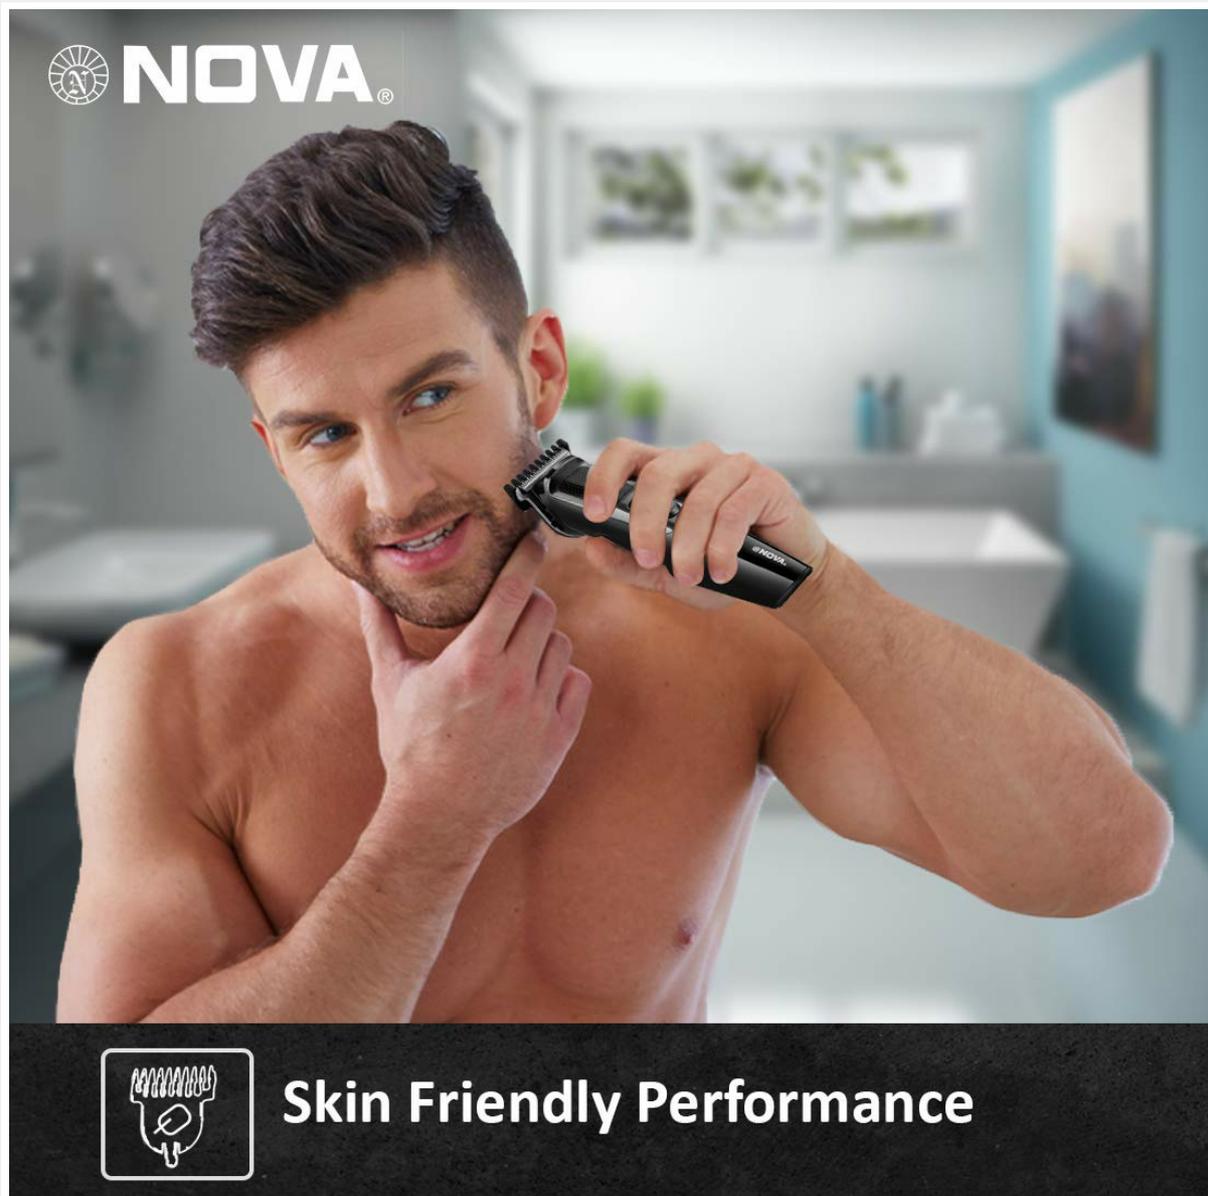


Image: A man is shown using the Nova trimmer to trim his beard, illustrating the product's skin-friendly performance.

MAINTENANCE

Cleaning the Trimmer

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. **Turn Off:** Ensure the trimmer is switched off and disconnected from the charging cable.
2. **Remove Comb:** Detach any comb attachment.
3. **Brush Blades:** Use the provided cleaning brush to remove loose hairs from the blades and the trimmer head.
4. **Wipe Body:** Wipe the body of the trimmer with a dry or slightly damp cloth. Do not use abrasive cleaners or immerse the trimmer in water.
5. **Lubricate (Optional):** Apply a small drop of lubricating oil (if provided) to the blades periodically to

maintain smooth operation.

Storage

Store the trimmer in a cool, dry place, away from direct sunlight and out of reach of children. Ensure the blades are protected to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer not cutting effectively.	Blades are clogged with hair or dull.	Clean the blades thoroughly. If blades are dull, consider replacement (contact support).
Trimmer makes unusual noise.	Blades require lubrication or are misaligned.	Apply lubricating oil to the blades. Ensure blades are properly seated.
Charge indicator not lighting up.	Charging cable or power source issue.	Check the USB cable connection and try a different USB power source.

SPECIFICATIONS

- **Model:** NHT 1074 / NHT 1076
- **Power Source:** Battery Powered (Rechargeable)
- **Runtime:** Up to 30 minutes
- **Charging:** USB (NHT 1074) / Cordless (NHT 1076)
- **Blade Material:** Stainless Steel
- **Body Material:** Acrylonitrile Butadiene Styrene
- **Color:** Black
- **Item Weight:** Approximately 998 g (2.2 Pounds)
- **Dimensions (LxWxH):** 10 x 10 x 10 Millimeters (approximate)
- **Recommended Use:** Beard Trimming

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and how to claim support.

For technical assistance, troubleshooting, or to inquire about replacement parts, please contact Nova customer support through their official website or the contact information provided in your product packaging.

