



[Manuals.plus](#) /

› [Teka](#) /

› Teka Telescopic Oven Guides 111490009 Instruction Manual

Teka 111490009

Teka Telescopic Oven Guides Instruction Manual

Model: 111490009 | Brand: Teka

1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your Teka Telescopic Oven Guides. These guides are designed to enhance convenience and stability when handling oven trays, offering partial extraction for easier access to your food.

2. PRODUCT OVERVIEW

The Teka Telescopic Oven Guides are a set of two rails, one for each side of your oven, made from durable stainless steel. They allow for partial extension of oven trays, making it easier to insert, remove, and check food during cooking. The design ensures greater stability compared to standard oven racks.

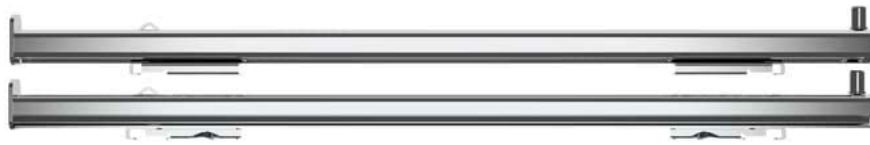


Image 1: Teka Telescopic Oven Guides. This image displays the two telescopic oven guides, made of stainless steel, designed for easy installation and partial tray extraction.

Key Features:

- **Partial Extraction:** Allows oven trays to be pulled out partially for easy access.
- **Enhanced Stability:** Provides greater stability when manipulating trays.
- **Durable Material:** Constructed from high-quality stainless steel for longevity.
- **Easy Installation:** Designed for straightforward installation.
- **Versatile Use:** Enables cooking at up to five different heights within the oven.

3. SAFETY INFORMATION

- **Pyrolysis Function:** The telescopic guides **must be removed** from the oven before activating the oven's pyrolysis (self-cleaning) function. Failure to do so may damage the guides or the oven.
- Ensure the guides are securely installed before placing any weight on them.
- Always use oven mitts when handling hot trays or guides.

4. SETUP AND INSTALLATION

The Teka Telescopic Oven Guides are designed for easy installation in standard 60 cm ovens. They are compatible with Teka oven models manufactured from 2015 onwards, including HBB, HCB, HLB, HLC, HBC, and HCC series.

Installation Steps:

1. Ensure the oven is cool and disconnected from the power supply.
2. Remove any existing oven racks or guides from the desired height level.
3. Identify the left and right guides. They are typically designed to fit specific sides.
4. Align the guide with the oven's side supports at the chosen height.
5. Gently push the guide into place until it clicks or locks securely onto the supports.
6. Repeat the process for the other guide on the opposite side.
7. Test the guides by gently pulling them out and pushing them back in to ensure smooth operation and secure attachment.

Note: The guides are detachable for cleaning and for removal during the pyrolysis cycle.

5. OPERATING INSTRUCTIONS

Once installed, the telescopic guides simplify the use of your oven trays:

- To place a tray, slide it onto the extended guides. The partial extraction mechanism allows you to pull the tray out smoothly without it tipping.
- To remove a tray, pull the guides out to their partial extension limit, lift the tray, and then push the guides back into the oven.
- The guides can be installed at various heights, allowing you to utilize up to five different cooking levels within your oven, depending on your oven model.

6. MAINTENANCE

To ensure the longevity and smooth operation of your Teka Telescopic Oven Guides, follow these maintenance guidelines:

- **Cleaning:** Clean the guides regularly with a soft cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that could scratch the stainless steel finish.
- **Removal for Pyrolysis:** As mentioned in the safety section, always remove the guides before running the oven's pyrolysis self-cleaning cycle.
- **Inspection:** Periodically check the guides for any signs of wear or damage. Ensure they slide smoothly and remain securely attached to the oven walls.

7. TROUBLESHOOTING

If you encounter any issues with your telescopic oven guides, consider the following:

- **Guides not sliding smoothly:** Ensure they are clean and free from food debris. Check for any physical obstructions or damage.
- **Guides not fitting securely:** Verify that they are correctly aligned and fully engaged with the oven's side supports. Ensure they are compatible with your specific oven model and year of manufacture (from 2015 onwards).

If problems persist, please refer to the warranty and support section for assistance.

8. SPECIFICATIONS

Model Number	111490009
Brand	Teka
Material	Stainless Steel
Color	Stainless Steel
Dimensions (W x H x D)	Approximately 15 mm x 35 mm x 390-690 mm (minimum to maximum extension)
Weight	2 Kilograms
Compatibility	Standard 60 cm ovens, Teka models manufactured from 2015 onwards (HBB, HCB, HLB, HLC, HBC, HCC, HBL series).
Components Included	2 Telescopic Oven Guides

9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For specific details regarding the warranty period and terms, please refer to the documentation provided with your oven or contact Teka customer service. For technical assistance, spare parts, or any inquiries regarding your Teka Telescopic Oven Guides, please visit the official Teka website or contact their customer support department. You can find contact information on the Teka brand store page: [Teka Brand Store](#).