

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Moulinex](#) /

> [Moulinex Home Bread Breadmaker Kneading Paddle Instruction Manual for OW2000, OW3000, and PF30 Series](#)

Moulinex OW2000, OW3000, PF30

Moulinex Home Bread Breadmaker Kneading Paddle Instruction Manual

For Models: OW2000, OW3000, PF30 Series

INTRODUCTION

This document provides essential information for the proper installation, operation, and maintenance of your new replacement kneading paddle for Moulinex, Tefal, and Arno Home Bread breadmakers.

The kneading paddle is a crucial component responsible for mixing and kneading dough within your bread machine, ensuring consistent results for various bread types.

Please read these instructions carefully before use to ensure optimal performance and longevity of the part.

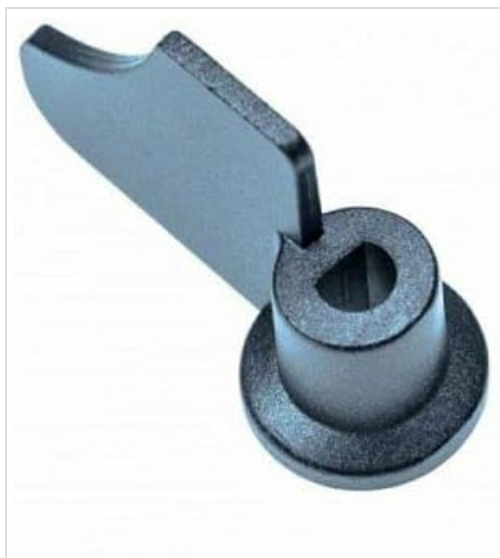


Image: A general view of the Moulinex Home Bread breadmaker kneading paddle, showing its distinct shape and attachment point.

INSTALLATION GUIDE

Follow these steps to correctly install the replacement kneading paddle:

1. Ensure the breadmaker is unplugged from the power outlet and completely cooled before handling any internal components.
2. Remove the bread pan from the breadmaker.
3. Locate the drive shaft at the bottom center of the bread pan.
4. Align the new kneading paddle with the drive shaft. The paddle typically has a square or D-shaped opening that matches the shaft's profile.
5. Press the paddle firmly onto the shaft until it is securely seated. Ensure it can rotate freely without obstruction.
6. Return the bread pan to the breadmaker, ensuring it is locked into place according to your breadmaker's instructions.



Image: A close-up view of the kneading paddle's base, highlighting the attachment point designed to fit onto the bread pan's drive shaft.

OPERATING YOUR BREADMAKER WITH THE NEW PADDLE

Once installed, the kneading paddle operates automatically as part of your breadmaker's programmed cycle. No special action is required for the paddle itself during operation.

- Ensure the paddle is correctly installed and securely seated before adding any ingredients to the bread pan.
- Do not overfill the bread pan, as this can impede paddle movement and affect dough consistency.
- The paddle will mix ingredients and knead the dough according to the selected program. Refer to your breadmaker's original instruction manual for specific program settings, ingredient measurements, and general operation.

CARE AND CLEANING

Proper cleaning extends the life of your kneading paddle and ensures hygienic food preparation.

1. After each use, allow the bread pan and paddle to cool completely before cleaning.

2. Remove the paddle from the bread pan. If it is stuck due to baked-on dough, fill the pan with warm water and let it soak for 10-15 minutes to loosen the residue.
3. Wash the paddle by hand using warm, soapy water and a soft sponge or cloth. Avoid abrasive cleaners, metal scouring pads, or harsh brushes, which can damage the paddle's surface or any non-stick coating.
4. Rinse thoroughly under running water to remove all soap residue.
5. Dry the paddle completely before storing or reinstalling it in the bread pan.
6. Do not wash the paddle in a dishwasher unless explicitly stated in your breadmaker's original manual, as high temperatures and harsh detergents can degrade materials over time.

TROUBLESHOOTING COMMON ISSUES

This section addresses common issues related to the kneading paddle.

Issue	Possible Cause / Solution
Paddle not mixing dough effectively.	Ensure the paddle is correctly seated on the drive shaft. Check for any dough buildup or foreign objects preventing free rotation.
Paddle stuck in baked bread.	This is a common occurrence. Allow the bread to cool slightly, then gently twist and pull the paddle out. A small hook tool (often included with breadmakers) can assist in removal.
Dough leaking from around the paddle shaft at the bottom of the bread pan.	This indicates a worn seal in the bread pan, not an issue with the paddle itself. The bread pan may need replacement to prevent further leakage.

PRODUCT SPECIFICATIONS

- **Part Type:** Replacement Kneading Paddle
- **Brand:** Moulinex (also compatible with Tefal and Arno models)
- **Material:** Durable metal, often with a non-stick coating.
- **Compatibility:** Designed for Moulinex, Tefal, and Arno Home Bread Breadmakers.
- **Compatible Models (Partial List):** OW2000, OW2001, OW3000, OW3001, OW3010, OW3020, OW3022, OW3025, PF3022, 573101, 573107, 573813/B7, and other specific sub-models (e.g., OW20000/B70, OW300001/B7A). Please refer to your appliance's identification plate for full compatibility verification.
- **ASIN:** B09Z35QLSC
- **Manufacturer:** Moulinex

WARRANTY AND CUSTOMER SUPPORT

This replacement part is typically covered by the retailer's return policy. For specific warranty information regarding this replacement part, please refer to the purchase documentation or contact the seller directly.

For general inquiries about your Moulinex, Tefal, or Arno breadmaker, please consult your original appliance manual or visit the official brand website for customer support contact details.

