

Moerman 23218

Moerman Excelerator 2.0 Squeegee 18 Inch User Manual

Model: 23218

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Moerman Excelerator 2.0 Squeegee. Please read these instructions carefully before operating the device to ensure optimal performance and longevity.

PRODUCT FEATURES

- Push button mechanism to alternate between swivel and fixed head positions.
- Side lock button for selecting one of five adjustable angles.
- Locking mechanism for easy channel replacement.
- Ergonomic grip handle for comfortable use.
- Designed to utilize Liquidator 2.0 channels.

SETUP AND ASSEMBLY

The Moerman Excelerator 2.0 Squeegee is designed for quick assembly and channel replacement.

1. **Channel Installation:** To install or replace the squeegee channel (blade holder), locate the locking mechanism on the squeegee head. Depress the locking mechanism and slide the Liquidator 2.0 channel into place until it clicks securely. Ensure the channel is fully seated.
2. **Rubber Blade Insertion:** If the rubber blade is not pre-installed, carefully slide the rubber blade into the channel with the sharp edge facing outwards. Ensure it is centered and extends evenly from both ends of the channel.



Figure 1: The Moerman Excelerator 2.0 Squeegee, showing the handle, head, and 18-inch channel with rubber blade. This image provides an overall view of the assembled product.



Figure 2: A close-up view of the squeegee channel and rubber blade. This illustrates how the rubber blade is secured within the channel for effective cleaning.

OPERATING INSTRUCTIONS

Follow these steps for effective window cleaning with your Excelerator 2.0 Squeegee:

1. **Prepare Surface:** Ensure the window surface is thoroughly wet with a suitable cleaning solution.
2. **Adjust Head Position:** Use the push button on the handle to switch between a swivel head for angled strokes or a fixed head for straight, consistent movements.
3. **Select Angle:** Utilize the side lock button to choose one of the five adjustable angles. This allows for optimal blade contact on various window shapes and access points.
4. **Squeegee Technique:** Apply light, even pressure to the squeegee. Start from the top of the window

and pull downwards in overlapping strokes, or use horizontal strokes, ensuring the blade maintains contact with the glass.

5. **Clean Blade:** After each stroke, wipe the rubber blade clean with a lint-free cloth to prevent streaks.



Figure 3: A detailed view of the squeegee handle, highlighting the push button for swivel/fixing head and the side lock button for angle adjustment. These controls allow for versatile operation.

MAINTENANCE

Proper maintenance extends the life and performance of your squeegee.

- **Rubber Blade Care:** Regularly inspect the rubber blade for nicks, tears, or hardening. A damaged blade will cause streaks. Replace the blade when signs of wear are evident.
- **Cleaning:** After each use, rinse the squeegee head and rubber blade with clean water to remove any soap residue or debris. Dry thoroughly before storage.
- **Storage:** Store the squeegee in a clean, dry place, preferably hanging, to prevent the rubber blade from resting on surfaces that could deform it.

TROUBLESHOOTING

If you encounter issues during operation, consider the following:

- **Streaks on Glass:**
 - Ensure the rubber blade is clean and free of debris.
 - Check the rubber blade for damage or wear; replace if necessary.
 - Verify that the window surface is adequately lubricated with cleaning solution.
 - Adjust the angle of the squeegee to ensure proper blade contact.

- **Squeegee Not Gliding Smoothly:**

- Ensure sufficient cleaning solution is applied to the glass.
- Check for any obstructions on the glass surface.

SPECIFICATIONS

Brand	Moerman
Model Number	23218
Blade Width	18 Inches
Blade Material	Rubber
Handle Material	Plastic
Product Dimensions	1 x 0.25 x 17.5 inches
Item Weight	2.01 ounces (57 Grams)
Color	Black (with blue accents)
Style	Adjustable, Ergonomic

WARRANTY AND SUPPORT

Moerman products are manufactured to high-quality standards. For specific warranty information or technical support, please refer to the official Moerman website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the [Moerman Store on Amazon](#).