

TOPTECH Rock-8

TOPTECH Rock-8 Portable Bluetooth Speaker User Manual

Model: Rock-8

INTRODUCTION

Thank you for purchasing the TOPTECH Rock-8 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: Front view of the TOPTECH Rock-8 Portable Bluetooth Speaker, showcasing its compact design, control panel, and the illuminated blue woofer with multi-color LED lights.

PACKAGE CONTENTS

Ensure all items are present in the package:

- TOPTECH Rock-8 Portable Bluetooth Speaker

- Wired Microphone
- Charging Cable
- User Manual (this document)

PRODUCT FEATURES

- Powerful 8-inch woofer for dynamic audio performance.
- Vibrant multi-color LED lights that sync with music.
- Multiple connectivity options: Bluetooth, USB, TF Card, FM Radio, AUX input.
- Portable design with integrated trolley handle and wheels.
- Built-in rechargeable battery offering up to 5 hours of playtime.
- Includes a wired microphone for karaoke and announcements.



Image: Diagram illustrating the key features of the TOPTECH Rock-8 speaker, including its various ports and functionalities like Bluetooth connectivity, USB, TF card, FM radio, and microphone input.

SETUP

Charging the Speaker

1. Locate the charging port on the back or side of the speaker.
2. Connect the provided charging cable to the speaker and a compatible power source (e.g., wall adapter, USB port).
3. The charging indicator light will illuminate. Allow approximately 3-4 hours for a full charge.
4. Once fully charged, the indicator light may change color or turn off. Disconnect the speaker from the power source.

Connecting the Microphone

- Insert the wired microphone's plug into the "MIC IN" port on the speaker's control panel.

- Ensure the microphone is securely connected.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the speaker, press and hold the **Power** button until the display illuminates.
- To turn off the speaker, press and hold the **Power** button again until the display turns off.

Mode Selection

Press the **Mode** button repeatedly to cycle through available input modes:

- **Bluetooth Mode:** For wireless audio streaming from compatible devices.
- **USB Mode:** For playing audio files from a USB flash drive.
- **TF Card Mode:** For playing audio files from a TF (microSD) card.
- **FM Radio Mode:** For listening to FM radio stations.
- **AUX Mode:** For connecting external audio devices via a 3.5mm audio cable.

Bluetooth Pairing

1. Turn on the speaker and switch to **Bluetooth Mode**. The speaker will enter pairing mode, indicated by a flashing Bluetooth icon or audible prompt.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "**ROCK-8**" from the list of found devices.
4. Once paired, the speaker will confirm the connection, and you can begin streaming audio.

USB/TF Card Playback

- Insert a USB flash drive or TF card into the corresponding port.
- The speaker will automatically switch to USB or TF Card mode and begin playing compatible audio files.
- Use the **Previous/Next** buttons to skip tracks and the **Play/Pause** button to control playback.

FM Radio Operation

1. Switch to **FM Radio Mode**.
2. Press the **Play/Pause** button to initiate an automatic scan for available radio stations. The speaker will save found stations.
3. Use the **Previous/Next** buttons to navigate between saved stations.

AUX Input

- Connect one end of a 3.5mm audio cable (not included) to the **AUX IN** port on the speaker.
- Connect the other end to the audio output of your external device (e.g., MP3 player, computer).
- Switch the speaker to **AUX Mode**. Audio will now play through the speaker.

Volume Control

- Adjust the main volume knob on the control panel to increase or decrease the overall sound level.
- If using the microphone, adjust the microphone volume knob (if available) for independent control.

LED Lights

- The LED lights automatically sync with the music. There may be a dedicated button to cycle through light modes or turn them off (refer to speaker's control panel for specific button).

Maintenance

- Cleaning:** Use a soft, dry cloth to wipe the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to maintain battery health.
- Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.

Troubleshooting

Problem	Possible Cause	Solution
No power	Battery is drained; Power button not pressed correctly.	Charge the speaker fully; Press and hold the Power button until the display illuminates.
No sound	Volume too low; Incorrect mode selected; Device not paired (Bluetooth); Cable not connected (AUX).	Increase volume; Select correct input mode; Re-pair Bluetooth device; Check AUX cable connection.
Bluetooth not connecting	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth pairing mode; Move device closer to speaker; Turn off other Bluetooth devices.
Microphone not working	Microphone not fully inserted; Microphone volume too low.	Ensure microphone is securely plugged into the MIC IN port; Increase microphone volume.
Poor FM radio reception	Weak signal; Environmental interference.	Relocate the speaker to an area with better reception; Extend any built-in antenna if available.

Specifications

- Model:** Rock-8
- Brand:** TOPTECH
- Woofer Size:** 8-inch
- Power Source:** Battery Powered
- Battery Life:** Up to 5 hours (rechargeable)
- Connectivity:** Bluetooth, USB, TF Card, FM Radio, AUX
- Dimensions (L x W x H):** 10 x 10 x 21 inches
- Item Weight:** 5.39 pounds
- Color:** Blue (for this specific model)
- Compatible Devices:** Smartphone, Tablet, Laptop
- Manufacturer:** TOP TECH AUDIO
- UPC:** 752574407173

Warranty and Support

Specific warranty details are not provided within this manual. For warranty information, technical support, or service inquiries, please contact TOPTECH customer service directly or visit their official website. Keep your purchase receipt as proof of purchase.

You can visit the TOPTECH Store on Amazon for more information: [TOPTECH Store](#)

© 2024 TOPTECH. All rights reserved.