

TOPTECH Rock-8

User Manual: Top Tech Audio Rock-8 Portable Bluetooth Speaker

Model: Rock-8 | Brand: TOPTECH

INTRODUCTION

Thank you for purchasing the Top Tech Audio Rock-8 Portable Bluetooth Speaker. This powerful and versatile speaker is designed to deliver high-quality audio with dynamic LED lighting, making it perfect for parties, outdoor events, and public address. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.

SAFETY INFORMATION

- Read all instructions before using the product.
- Do not expose the speaker to water, moisture, or extreme temperatures.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from heat sources and direct sunlight.
- Use only the specified charging accessories.
- Ensure proper ventilation around the speaker during operation.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Top Tech Audio Rock-8 Portable Bluetooth Speaker
- Wired Microphone
- Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: Front view of the Rock-8 speaker, showcasing the 8-inch woofer and vibrant LED light display.

The Rock-8 speaker features a robust design with an integrated trolley and wheels for easy portability. The front panel includes the main 8-inch woofer with a dynamic LED light display. The control panel is located at the top, providing access to various functions and input ports.



Figure 2: Detailed view of the control panel and connectivity options, including USB, TF Card, AUX, and Microphone ports.

Key Components:

- **Control Panel:** Located on the top, includes volume knob, mode button, playback controls, and input ports.
- **8-inch Woofer:** Delivers powerful and clear audio with deep bass.
- **LED Lights:** Integrated lights that sync with music, enhancing the party atmosphere.
- **Trolley Handle and Wheels:** For convenient transportation.
- **Input Ports:** USB, TF Card, AUX, and Microphone input.

SETUP

1. Charging the Battery

Before first use, fully charge the speaker's built-in rechargeable battery. Connect the provided charging cable to the speaker's charging port and plug the other end into a suitable power outlet. The charging indicator light will illuminate. Once fully charged (approximately 3-4 hours), the indicator light may change color or turn off. A full charge provides up to 5 hours of playtime.

2. Powering On/Off

Locate the Power switch on the control panel. Flip the switch to the "ON" position to power on the speaker. You will hear an audible prompt. To power off, flip the switch to the "OFF" position.

3. Connecting the Microphone

Insert the plug of the wired microphone into the "MIC IN" port on the control panel. Adjust the microphone volume using the dedicated knob if available, or the main volume control.

OPERATING INSTRUCTIONS

1. Mode Selection

Press the "MODE" button on the control panel to switch between available input modes: Bluetooth, USB, TF Card, AUX, and FM Radio.

2. Bluetooth Pairing

1. Turn on the speaker and select Bluetooth mode. The speaker will enter pairing mode, indicated by a flashing Bluetooth indicator or audible prompt.
2. Enable Bluetooth on your smartphone or other compatible device.
3. Search for "Rock-8" in the list of available devices and select it to pair.
4. Once successfully paired, you will hear a confirmation sound. You can now stream audio wirelessly from your device.

3. USB/TF Card Playback

Insert a USB flash drive or TF (microSD) card containing MP3 audio files into the respective port. The speaker will automatically switch to USB/TF mode and begin playing music. Use the playback controls (Play/Pause, Next/Previous Track) on the control panel to manage your music.

4. AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the "AUX IN" port using a 3.5mm audio cable (not included). Switch the speaker to AUX mode. Audio from your connected device will now play through the speaker.

5. FM Radio

Switch to FM Radio mode. Press and hold the Play/Pause button to initiate an automatic station scan. The speaker will scan and save available FM stations. Use the Next/Previous Track buttons to navigate between saved stations.

6. LED Light Control

The LED lights automatically sync with the music. There may be a dedicated button on the control panel to cycle through light modes or turn them off/on. Refer to the specific button labels on your unit.

7. Karaoke Function

With the wired microphone connected, you can sing along to your music playing from any source (Bluetooth, USB, AUX). Adjust the microphone volume and echo effects (if available) for the desired karaoke experience.

MAINTENANCE

Cleaning

Wipe the speaker's exterior with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure no liquid enters the speaker's openings.

Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery before storing and to recharge it every few months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker fully.
No sound	Volume is too low or muted. Incorrect input mode.	Increase volume. Ensure correct mode (Bluetooth, USB, AUX, FM) is selected.
Bluetooth not pairing	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer. Turn off other Bluetooth devices.
Microphone not working	Microphone not fully plugged in. Microphone volume too low.	Ensure microphone is securely plugged into the MIC IN port. Increase microphone volume.
Poor FM reception	Weak signal.	Relocate the speaker to an area with better signal.

SPECIFICATIONS

Model Number	Rock-8
Brand	TOPTECH
Output Wattage	1800 Watts (Peak)
Woofer Size	8-inch
Connectivity	Bluetooth, USB, TF Card, AUX, FM Radio
Power Source	Battery Powered (Rechargeable)
Battery Playtime	Up to 5 hours
Material	Polypropylene (PP), Acrylonitrile Butadiene Styrene (ABS)
Dimensions (L x W x H)	10 x 10 x 21 inches
Item Weight	5.59 pounds (2.54 Kilograms)
Included Accessories	Wired Microphone, Charging Cable
UPC	752574407180

WARRANTY AND SUPPORT

TOPTECH products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact information provided on the product packaging or visit the official TOPTECH website. Please retain your proof of purchase for warranty claims.

© 2025 TOPTECH. All rights reserved.