

[Manuals.plus](#) /

› [AM.PM](#) /

› AM.PM X-Joy S F40HXB00 Wall-Mounted Bidet Mixer Kit User Manual

AM.PM F40HXB00

AM.PM X-Joy S F40HXB00 Wall-Mounted Bidet Mixer Kit User Manual

Model: F40HXB00

1. INTRODUCTION

Thank you for choosing the AM.PM X-Joy S F40HXB00 Wall-Mounted Bidet Mixer Kit. This product is designed to provide comfort and hygiene with its elegant design and advanced features. The X-Joy S series is known for its quality and reliability, incorporating a 35mm SoftMotion ceramic cartridge for precise temperature and pressure control.

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your bidet mixer kit. Please read it thoroughly before installation and keep it for future reference.



Image 1.1: Overview of the AM.PM X-Joy S F40HXB00 Wall-Mounted Bidet Mixer Kit.

2. SAFETY INFORMATION

Please observe the following safety precautions during installation and use:

- Installation should be performed by a qualified professional to ensure compliance with local plumbing and building codes.
- Turn off the main water supply before beginning any installation or maintenance work.
- Ensure all connections are secure and watertight to prevent leaks.
- Do not use abrasive cleaners or harsh chemicals on the chrome finish, as this may damage the surface.
- Keep small parts out of reach of children.

3. PACKAGE CONTENTS

Carefully unpack the product and verify that all components are present and undamaged. The package should contain:

- Wall-mounted bidet mixer unit
- Hygienic hand shower
- Flexible shower hose (1500 mm)
- Wall bracket for hand shower
- Decorative escutcheon
- Installation hardware (screws, anchors, seals)
- Instruction Manual (this document)



Image 3.1: Illustration of the main components included in the kit.

4. INSTALLATION INSTRUCTIONS

This bidet mixer kit is designed for wall-mounted, concealed installation. Professional installation is recommended.

4.1. Pre-Installation

1. **Turn off Water Supply:** Locate the main water shut-off valve and turn off the water supply to your bathroom.

2. **Prepare Wall Cavity:** Ensure there is adequate space within the wall for the concealed mixer body and plumbing connections.
3. **Check Water Lines:** Flush the water lines to remove any debris before connecting the mixer.

4.2. Mixer Installation

1. **Mount Concealed Body:** Secure the concealed mixer body within the wall cavity according to the manufacturer's guidelines, ensuring it is level and at the correct depth relative to the finished wall surface.
2. **Connect Water Inlets:** Connect the hot and cold water supply lines to the corresponding inlets on the mixer body. Ensure proper sealing with PTFE tape or thread sealant.
3. **Connect Outlet:** Connect the outlet pipe from the mixer body to the flexible hose connection point.
4. **Install Decorative Escutcheon:** Once the wall is finished, install the decorative escutcheon over the concealed mixer body.
5. **Attach Handle:** Secure the mixer handle to the cartridge stem. The handle features red and blue indicators for hot and cold water.



Image 4.1: Detail of the mixer handle, showing hot (red) and cold (blue) indicators.

4.3. Hand Shower and Hose Installation

1. **Mount Wall Bracket:** Choose a suitable location for the hand shower wall bracket, ensuring it is easily accessible.

Mark and drill holes, then secure the bracket using the provided screws and anchors.

2. **Connect Flexible Hose:** Attach one end of the flexible shower hose to the water outlet from the mixer (or the dedicated hose connection point). Attach the other end to the hygienic hand shower. Ensure all connections are hand-tightened and then gently tightened with a wrench, avoiding overtightening.
3. **Place Hand Shower:** Place the hygienic hand shower into its wall bracket.





Image 4.2: Detail of the hygienic hand shower and its connection.

4.4. Post-Installation

1. **Restore Water Supply:** Slowly turn on the main water supply.
2. **Check for Leaks:** Carefully inspect all connections for any signs of leaks. Tighten connections if necessary.
3. **Test Operation:** Test the mixer and hand shower for proper water flow and temperature control.

5. OPERATING INSTRUCTIONS

The AM.PM X-Joy S bidet mixer is designed for simple and intuitive operation.

5.1. Water Flow and Temperature Control

- **Turn On/Off:** Lift the mixer handle to turn on the water flow. Push it down to turn off.
- **Adjust Flow:** The further you lift the handle, the greater the water flow.
- **Adjust Temperature:** Rotate the handle left for hot water (red indicator) and right for cold water (blue indicator). The SoftMotion ceramic cartridge allows for precise temperature adjustments.

5.2. Using the Hygienic Hand Shower

- Once the water flow is activated via the mixer handle, press the button or lever on the hand shower to activate the water spray.
- Release the button/lever to stop the spray.
- Always turn off the main water flow using the mixer handle after use to prevent continuous pressure on the hose and hand shower.

6. CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your AM.PM X-Joy S bidet mixer kit.

- **Cleaning:** Clean the chrome surfaces regularly with a soft cloth and mild soap or a non-abrasive cleaner specifically designed for chrome finishes. Rinse thoroughly with clean water and dry immediately to prevent water spots.
- **Avoid Harsh Chemicals:** Do not use abrasive sponges, scouring pads, or cleaners containing alcohol, ammonia, bleach, or phosphoric acid, as these can damage the chrome finish.

- **Aerator Maintenance:** Periodically unscrew and clean the aerator on the hand shower to remove any mineral deposits or debris that may affect water flow.
- **Hose Inspection:** Regularly check the flexible hose for any signs of wear, kinks, or damage. Replace if necessary.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Low water flow	Clogged aerator; partially closed stopcock; low water pressure in the building.	Clean the hand shower aerator; ensure stopcocks are fully open; consult a plumber if building pressure is low.
Water leaks from connections	Loose connections; damaged seals/washers.	Tighten connections (do not overtighten); replace damaged seals/washers.
Difficulty adjusting temperature	Cartridge issue; mineral buildup.	Contact a qualified plumber for inspection or cartridge replacement.
Hand shower not spraying	Button/lever stuck; clogged spray nozzles.	Ensure button/lever moves freely; clean spray nozzles.

If the problem persists after attempting these solutions, please contact customer support or a qualified plumber.

8. SPECIFICATIONS

Feature	Detail
Model	F40HXB00 (X-Joy S)
Manufacturer	AM-PM
Dimensions (L x W x H)	13.5 x 8 x 12 cm
Weight	1.42 kilograms
Color	Chrome
Style	Modern
Finish	Chrome-plated
Material	Brass (body), Ceramic (handle material)
Installation Method	Wall-mounted (concealed)

Feature	Detail
Number of Handles	1
Handle/Lever Position	Middle
Number of Holes Required	2
Hose Length	1500 Millimeters
Special Functions	SoftMotion Ceramic Cartridge, Leak-resistant



Image 8.1: Diagram showing key dimensions of the mixer and hand shower components.

9. WARRANTY AND SUPPORT

AM.PM offers a **5-year warranty** on most of its products, reflecting our commitment to quality and durability. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or warranty inquiries, please contact AM.PM customer service through the official website or your point of purchase. Provide your product model number (F40HXB00) and a detailed description of the issue to facilitate assistance.

For more information, visit the [AM.PM Brand Store](#).

© 2023 AM.PM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09Z6VPQKD>

More documents and user manuals: <https://manuals.plus/>