

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Portable Bluetooth Cassette Player User Manual

ASHATA Portable Cassette Player

ASHATA Portable Bluetooth Cassette Player

Model: B09Z73WCBD

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your ASHATA Portable Bluetooth Cassette Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience. This device allows you to play compact cassette tapes, record audio, listen to FM radio, and connect via Bluetooth for both audio input and output.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only specified power sources (2 x AA batteries or DC 5V adapter).
- Keep the device away from water and other liquids.
- When using headphones, set the volume to a moderate level to prevent hearing damage.

PACKAGE CONTENTS

Please check the package for the following items:

- ASHATA Portable Bluetooth Cassette Player
- 3.5mm Wired Headphones
- USB Power Cable (for DC 5V power input)
- User Manual (this document)



Image: The ASHATA Portable Bluetooth Cassette Player shown with its included wired headphones and USB power cable.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your cassette player:

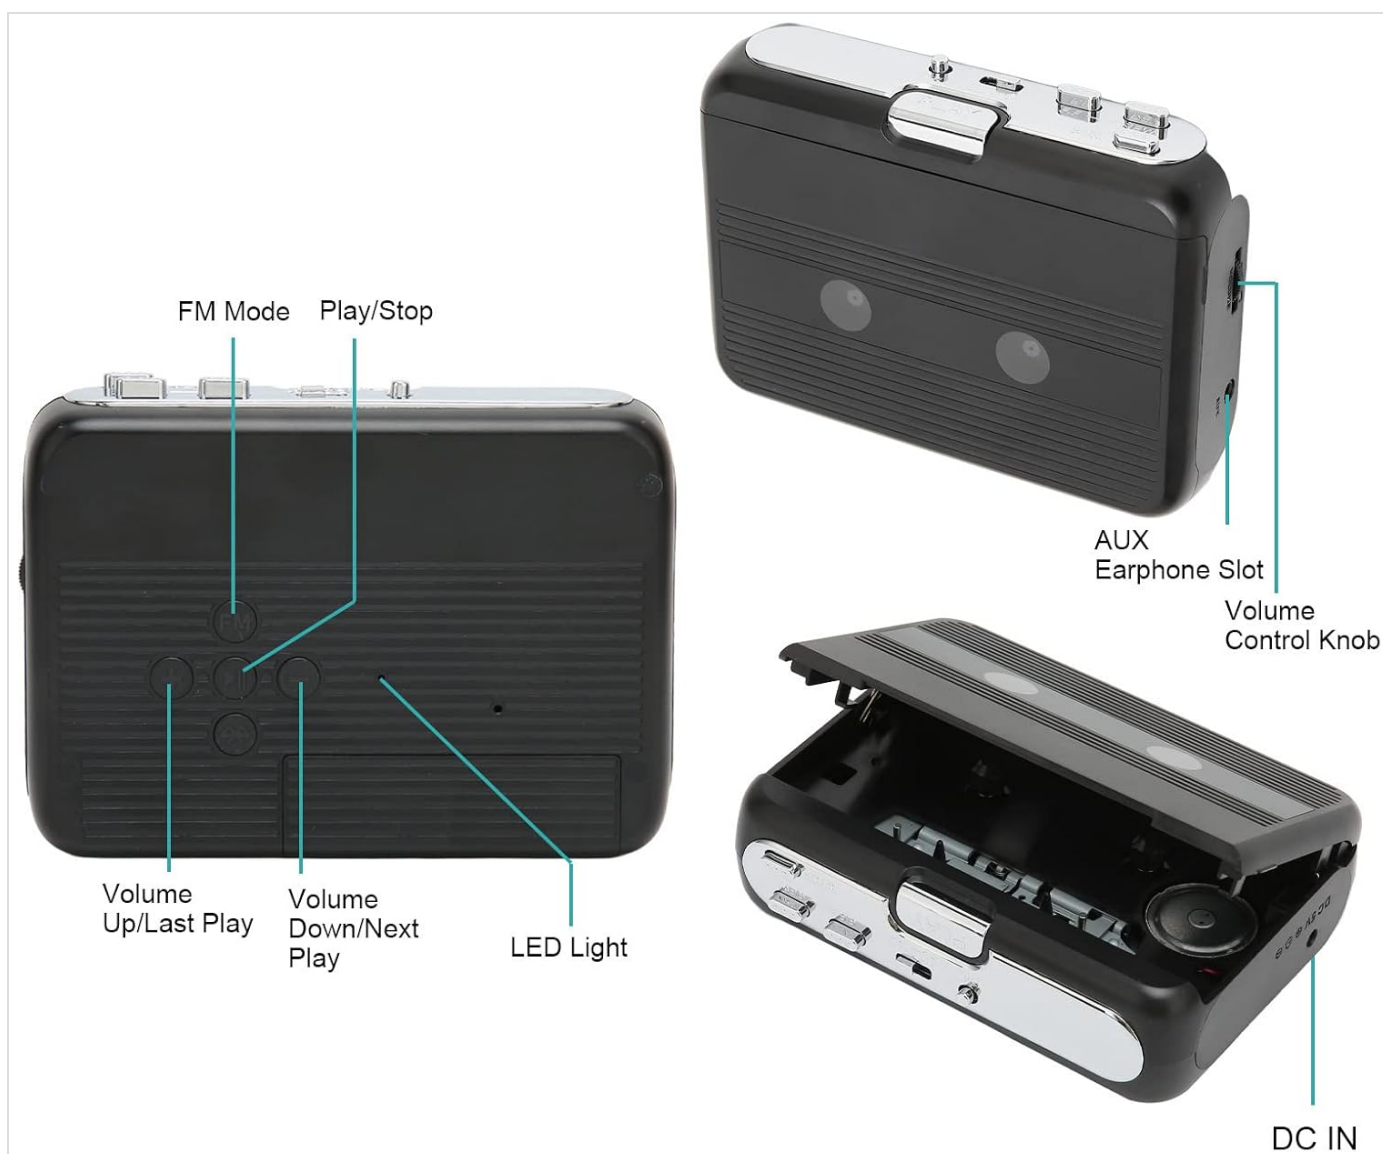


Image: A multi-view diagram of the cassette player highlighting key controls and ports such as FM Mode button, Play/Stop button, Volume Up/Last Play button, Volume Down/Next Play button, LED Light, AUX Earphone Slot, Volume Control Knob, and DC IN port.

- **Play/Stop Button:** Initiates or halts tape playback.
- **FF (Fast Forward) Button:** Advances the tape quickly.
- **REW (Rewind) Button:** Rewinds the tape quickly.
- **DIR (Direction) Button:** Changes the playback direction for auto-reverse.
- **FM Mode Button:** Switches to FM radio mode.
- **Volume Up/Last Play Button:** Increases volume or navigates to the previous track/station.
- **Volume Down/Next Play Button:** Decreases volume or navigates to the next track/station.
- **LED Light:** Indicates power and Bluetooth status.
- **AUX Earphone Slot (3.5mm):** Connects headphones or external audio devices.
- **Volume Control Knob:** Adjusts the audio output volume.
- **DC IN Port (5V):** Connects to an external 5V power adapter (not included).
- **Built-in Microphone:** For recording audio onto cassette tapes.

SETUP

Powering the Device

Your cassette player can be powered by two methods:

1. **AA Batteries:** Open the battery compartment cover on the back of the device. Insert two (2) AA batteries (not included), ensuring correct polarity (+/-). Close the cover securely.
2. **DC 5V Power Adapter:** Connect a DC 5V power adapter (not included) to the DC IN port on the side of the player. Use the provided USB power cable with a compatible USB power source.

Loading a Cassette Tape

1. Gently open the cassette compartment door.
2. Insert a standard compact cassette tape with the exposed tape facing upwards and the side you wish to play facing you.
3. Close the cassette compartment door firmly until it clicks into place.



Image: The ASHATA Portable Bluetooth Cassette Player with its cassette compartment open, revealing the internal tape mechanism where a cassette tape would be inserted.

OPERATING INSTRUCTIONS

Cassette Playback

1. Ensure a cassette tape is loaded and the device is powered on.
2. Press the **PLAY** button to begin playback.
3. Adjust the volume using the **Volume Control Knob**.

4. To fast forward, press the **FF** button. To rewind, press the **REW** button. Press **PLAY** again to resume normal playback.
5. To stop playback, press the **STOP** button.
6. **Auto Reverse Function:** Press the **DIR** button during playback to change the tape direction and play the other side of the cassette without flipping it manually.

Bluetooth Functionality

The device supports Bluetooth 5.0 for both transmitting and receiving audio.

Bluetooth Output (Transmitter Mode)

To send audio from the cassette player to Bluetooth headphones or speakers:

1. Ensure the cassette player is in playback mode.
2. Activate pairing mode on your Bluetooth headphones or speaker.
3. The cassette player will automatically search for and connect to nearby Bluetooth audio devices. The LED indicator will show connection status.

Bluetooth Input (Receiver Mode)

To play audio from your phone or other Bluetooth device through the cassette player (using its 3.5mm output to external speakers/headphones):

1. Ensure the cassette player is powered on.
2. On your phone or Bluetooth device, search for available Bluetooth devices and select the ASHATA cassette player.
3. Once connected, audio from your phone will play through the cassette player's 3.5mm output.

FM Radio

The 3.5mm wired headphones act as an antenna for the FM radio function.

Cassette Payer

Accepts all 3.5mm interface devices such as speakers, earbuds, car stereo speakers

FM mode

Can receive radio (with 3.5mm headphone as antenna) and supports automatic FM channel search function



Image: The ASHATA Portable Bluetooth Cassette Player, illustrating its compatibility with all 3.5mm interface devices like speakers and earbuds, and its FM radio capability which uses 3.5mm headphones as an antenna for automatic channel search.

1. Plug the 3.5mm wired headphones into the AUX Earphone Slot.
2. Press the **FM Mode** button to switch to FM radio.
3. The device will automatically search for and tune into available FM stations.
4. Use the **Volume Up/Last Play** and **Volume Down/Next Play** buttons to navigate between stations.
5. Adjust the volume using the **Volume Control Knob**.

Recording

The device features a built-in microphone for recording audio onto a blank cassette tape.

1. Insert a blank cassette tape into the compartment.
2. Press the **RECORD** button (if available, typically combined with PLAY or a separate button). *Note: The provided product description does not explicitly detail a dedicated record button, but mentions 'Recorder' functionality and 'Built-In Microphone'. Refer to the device's physical controls for the specific record button.*
3. Speak into the built-in microphone.

4. Press the **STOP** button to end the recording.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or solvents.
- **Tape Head Cleaning:** Periodically clean the tape heads with a specialized cassette head cleaning kit to ensure optimal sound quality.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the device in a cool, dry place away from dust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Batteries are dead or incorrectly inserted; DC adapter not connected or faulty.	Replace batteries, check battery polarity; ensure DC adapter is properly connected and functional.
No sound during tape playback.	Volume is too low; headphones not connected; tape head is dirty; tape is damaged.	Increase volume; ensure headphones are fully plugged in; clean tape head; try a different tape.
Cannot connect via Bluetooth.	Device not in Bluetooth mode; target device not in pairing mode; interference.	Ensure the cassette player is in the correct Bluetooth mode (transmitter/receiver); put the target device into pairing mode; move away from other electronic devices.
Poor FM radio reception.	Headphones not connected; weak signal.	Ensure 3.5mm headphones are plugged in (they act as the antenna); try moving to a different location for better signal.
Play button cannot be pressed down.	Key stuck or (FF/REW/STOP) not reset.	Ensure all other function buttons (FF, REW, STOP) are fully released and not stuck. Gently press STOP to reset mechanisms.

SPECIFICATIONS

Feature	Detail
Model	B09Z73WCBD
Power Supply	2 x AA Batteries (not included) or DC 5V (adapter not included)
Bluetooth Version	5.0
Audio Output	3.5mm Headphone Jack
Supported Tape Type	Compact Cassette
Microphone	Built-In, Mono

Feature	Detail
Dimensions	5.51 x 5.12 x 1.57 inches (14 x 13 x 4 cm)
Weight	10.9 ounces (approx. 309 grams)

WARRANTY INFORMATION

ASHATA products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship for a period specified by your retailer or local laws from the date of original purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your ASHATA Portable Bluetooth Cassette Player, please contact your retailer or visit the ASHATA brand store for support. For the latest information and support resources, please refer to the official ASHATA website or the contact information provided with your purchase.

ASHATA Brand Store: [ASHATA on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09Z73WCBD>

More documents and user manuals: <https://manuals.plus/>