

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRUPS](#) /

› [KRUPS Simply Brew To Go Coffee Maker User Manual](#)

KRUPS Simply Brew To Go

KRUPS Simply Brew To Go Coffee Maker User Manual

Model: Simply Brew To Go (10942227922)

Brand: KRUPS

PRODUCT OVERVIEW

The KRUPS Simply Brew To Go Coffee Maker is designed for convenience and portability, allowing users to enjoy freshly brewed coffee on the go. This compact single-serve drip coffee machine includes a 14-ounce stainless steel travel tumbler, eliminating the need for separate mugs. It operates with a simple one-button control and utilizes a permanent filter, reducing waste from disposable pods and paper filters. Its efficient design makes it suitable for various small spaces, including dorms, campers, and office cubicles.





Image: The KRUPS Simply Brew To Go Coffee Maker, featuring its compact design and the included stainless steel travel tumbler.

SETUP AND FIRST USE

- 1. Unpack and Clean:** Carefully remove all packaging materials. Before first use, wash the permanent filter basket and the travel tumbler with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
- 2. Positioning:** Place the coffee maker on a stable, flat, heat-resistant surface near an electrical outlet. Ensure there is adequate space around the unit for ventilation.
- 3. Initial Rinse Cycle:** For the first use, it is recommended to run a plain water cycle to clean the internal components.
 - Open the top lid of the coffee maker.
 - Fill the water reservoir with fresh, cold water up to the "MAX 10" line indicated on the side water level indicator.
 - Place the empty permanent filter basket into its designated slot.
 - Place the included travel tumbler or your preferred mug on the drip tray.
 - Close the top lid securely.

- Plug the coffee maker into a standard electrical outlet.
- Press the power button located at the bottom front of the unit to start the brewing cycle.
- Allow the cycle to complete, then discard the hot water.

4. Your coffee maker is now ready for brewing.

NO PODS. SAVE MONEY

Better for environment



Image: A hand demonstrating the process of adding coffee grounds directly into the reusable permanent filter basket.

OPERATING INSTRUCTIONS

- 1. Prepare Coffee Grounds:** Open the top lid. Place the permanent filter basket into its holder. Add your desired amount of ground coffee into the filter. The included measuring spoon can assist with this.
- 2. Add Water:** Fill the water reservoir with fresh, cold water. The side water level indicator shows markings for up to 10 cups, but for single-serve use with the included tumbler, fill to the appropriate level for 14 ounces.
- 3. Place Tumbler/Mug:** Ensure the 14-ounce stainless steel travel tumbler (or your own mug) is placed securely on the drip tray beneath the coffee dispenser.

- 4. Start Brewing:** Close the top lid. Plug the coffee maker into a standard electrical outlet. Press the power button. The indicator light will illuminate, and brewing will begin.
- 5. Enjoy Your Coffee:** Once the brewing cycle is complete, the coffee maker will automatically shut off. Carefully remove the tumbler/mug. The double-walled stainless steel tumbler helps keep your coffee hot for extended periods.

**SIMPLY PRESS ONE BUTTON
& your hot coffee is ready to go**



Image: A close-up of a finger activating the simple one-touch power button to start the brewing process.

AT HOME & TO GO



Image: Demonstrates the versatility of the coffee maker, showing it in a home kitchen setting and the travel tumbler being used on the go in a car.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your KRUPS Simply Brew To Go Coffee Maker.

Daily Cleaning:

- **Permanent Filter Basket:** After each use, remove the permanent filter basket and discard used coffee grounds. Wash the filter basket with warm, soapy water or place it in the dishwasher (top rack recommended). Rinse thoroughly.
- **Travel Tumbler:** Wash the stainless steel travel tumbler and its lid with warm, soapy water after each use. The tumbler is dishwasher safe.
- **Drip Tray:** Remove and empty the drip tray. Wash it with warm, soapy water and rinse.
- **Exterior:** Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the unit in water.

Descaling (Monthly or as Needed):

Mineral deposits from water can build up over time, affecting performance. Descaling your coffee maker regularly, especially if you notice slower brewing or reduced coffee temperature.


1. Prepare a descaling solution using white vinegar and water (1:1 ratio) or a commercial descaling agent according to its instructions.
2. Pour the solution into the water reservoir.
3. Place an empty tumbler or mug on the drip tray.
4. Run a brewing cycle without coffee grounds.
5. After the cycle, discard the solution.
6. Run 2-3 cycles with fresh, clean water to rinse out any remaining descaling solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the unit is securely plugged into a working electrical outlet. Check your circuit breaker.
Coffee is not brewing.	Insufficient water in reservoir; filter basket not properly seated; lid not closed.	Fill water reservoir to the desired level. Ensure the permanent filter basket is correctly placed. Close the top lid completely.
Coffee is not hot enough.	Mineral buildup (scaling); insufficient water.	Perform a descaling cycle. Ensure adequate water is added for the desired brew strength.
Water leaks from the unit.	Overfilled water reservoir; filter basket overflow; unit not level.	Do not exceed the "MAX" fill line. Ensure coffee grounds do not block the filter. Place the unit on a level surface.
Coffee grounds in brewed coffee.	Filter basket overfilled; filter not properly seated; fine grind coffee.	Do not overfill the filter basket. Ensure the filter is correctly seated. Use a medium grind coffee.

SPECIFICATIONS

- **Brand:** KRUPS
- **Model Name:** Simply Brew To Go
- **Item Model Number:** 10942227922
- **Color:** Black & Stainless Steel
- **Product Dimensions:** 5.55"D x 6.89"W x 12.2"H
- **Coffee Maker Type:** Drip Coffee Machine
- **Filter Type:** Reusable
- **Included Components:** Permanent Filter, Measuring Spoon, 14 oz Double-Walled Stainless Steel Travel Tumbler + Lid
- **Operation Mode:** Manual (One-touch operation)
- **Coffee Input Type:** Ground Coffee
- **Item Weight:** 14 ounces
- **Voltage:** 240V
- **Date First Available:** April 29, 2022

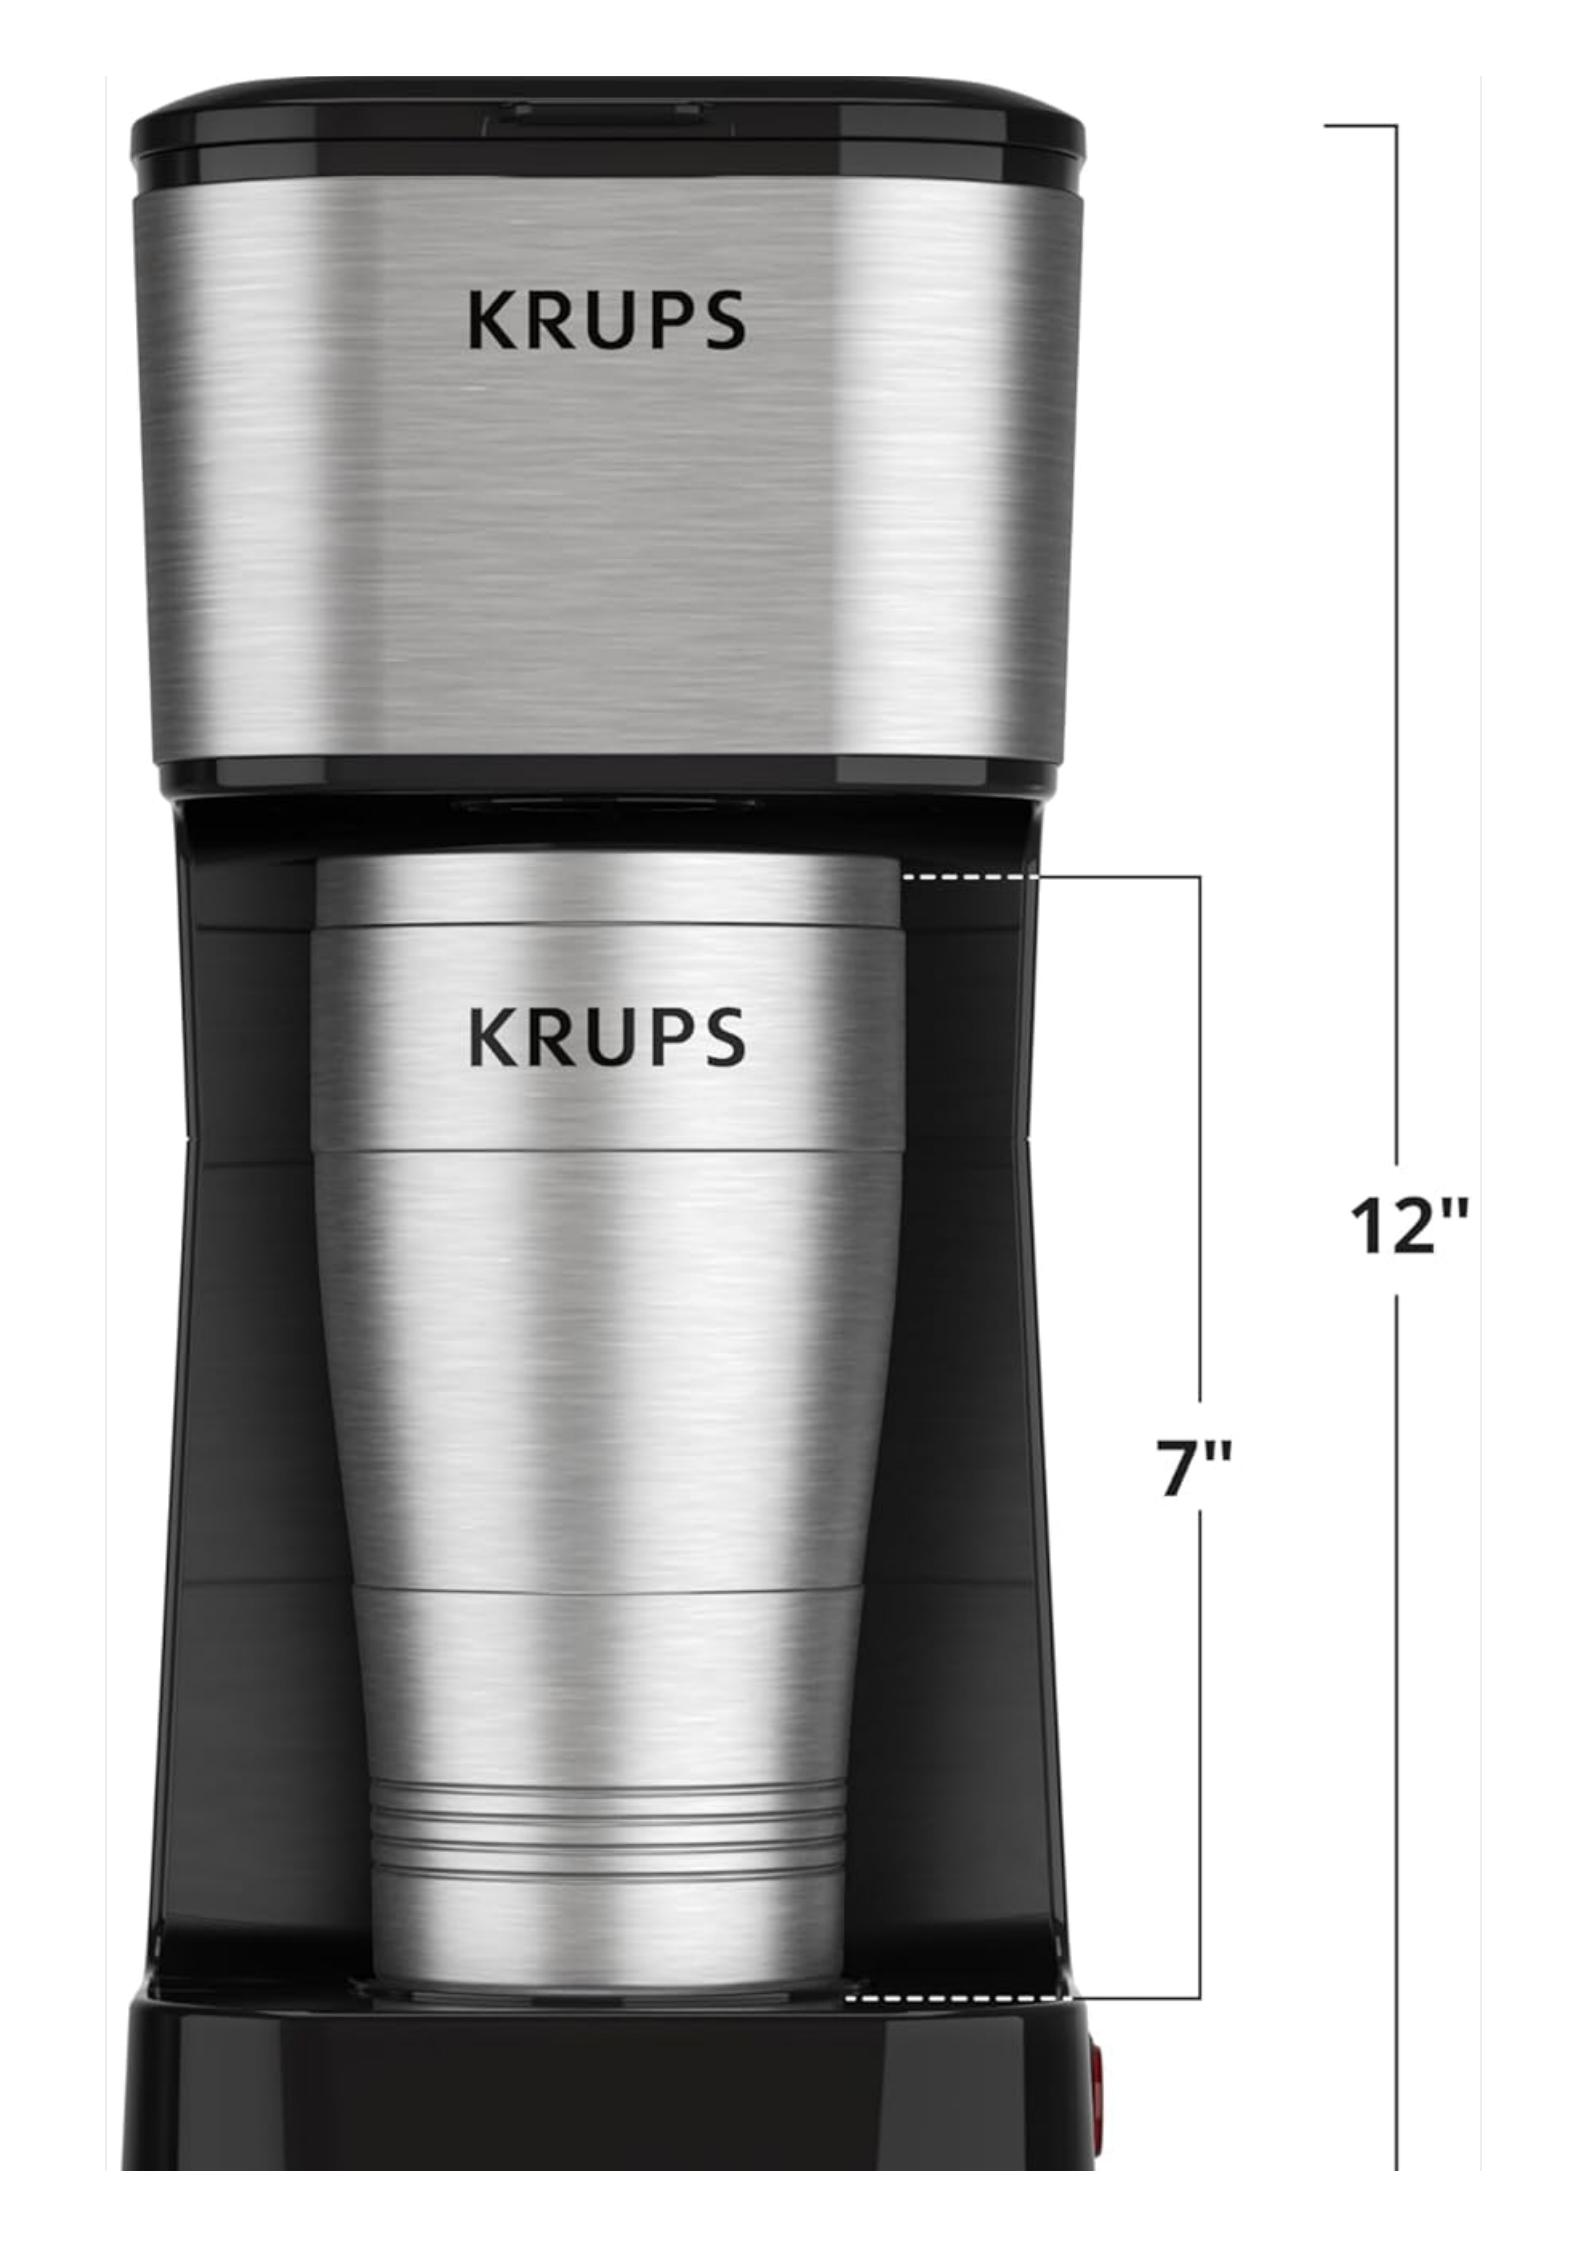

KRUPS

KRUPS

12"

7"



Image: Visual representation of the coffee maker's dimensions: 12 inches in height, 5.5 inches in width, and 7 inches from base to the top of the tumbler.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official KRUPS website or the warranty card included with your product. You may also find additional resources and contact information via the [KRUPS Store on Amazon](#). A digital version of the User Manual is available for download:[User Manual \(PDF\)](#).

© 2025 KRUPS. All rights reserved.