

Cook's Essentials CE117ICE-SS

Cook's Essentials Portable Ice Maker Instruction Manual

Model: CE117ICE-SS

INTRODUCTION

Thank you for purchasing the Cook's Essentials Portable Ice Maker. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the ice maker and retain it for future reference.



Image: The Cook's Essentials Portable Ice Maker in silver, shown with its accompanying white ice scoop. The unit features a clear lid and a side ventilation grille.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance is for household use only.

WHAT'S IN THE Box

Upon unpacking, please ensure all components are present and in good condition:

- Cook's Essentials Portable Ice Maker Unit
- Ice Scoop
- Ice Basket
- Instruction Manual (this document)



Image: An inside view of the ice maker, highlighting the removable ice basket and the white ice scoop placed within it. The ice-making mechanism is visible above the basket.

SETUP

1. **Unpack:** Carefully remove the ice maker from its packaging.
2. **Placement:** Place the ice maker on a flat, stable surface away from direct sunlight and heat sources. Ensure there is at least 4 inches of clearance around the unit for proper ventilation.

- Clean:** Before first use, clean the interior of the ice maker. Refer to the "Maintenance" section for detailed cleaning instructions.
- Power Connection:** Plug the power cord into a grounded electrical outlet.
- Add Water:** Open the lid and remove the ice basket. Fill the water reservoir with potable water up to the MAX fill line. Do not overfill.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: A detailed view of the ice maker's control panel. It features indicator lights for "ADD WATER", "ICE FULL", and "POWER", along with buttons for "ON/OFF" and "SELECT" to choose between small (S) and large (L) ice cube sizes.

ADD WATER Indicator: Illuminates when the water reservoir needs refilling.

ICE FULL Indicator: Illuminates when the ice basket is full.

POWER Indicator: Illuminates when the unit is powered on.

ON/OFF Button: Press to turn the ice maker on or off.

SELECT Button: Press to choose between small (S) or large (L) ice cube sizes. The corresponding indicator light will

illuminate.

Making Ice

1. Ensure the unit is plugged in and the water reservoir is filled.
2. Press the **ON/OFF** button to turn on the ice maker. The **POWER** indicator will light up.
3. Press the **SELECT** button to choose your desired ice cube size (Small or Large).
4. The ice maker will begin the ice-making cycle. The first batch of ice may take slightly longer.
5. When the **ICE FULL** indicator lights up, the ice basket is full. Remove ice to continue production.
6. When the **ADD WATER** indicator lights up, refill the water reservoir.
7. To stop ice production, press the **ON/OFF** button.

MAINTENANCE

Cleaning

Regular cleaning helps maintain ice quality and extends the life of your ice maker. The unit features a self-cleaning mode.

1. Self-Cleaning Mode:

- Ensure the water reservoir is filled.
- Press and hold the **ON/OFF** button for 5 seconds to activate self-cleaning. The unit will cycle water through its system.
- The self-cleaning cycle typically lasts for a few minutes. Once complete, drain the water.

2. Manual Cleaning:

- Unplug the ice maker from the power outlet.
- Remove the ice basket.
- Drain any remaining water from the reservoir by removing the drain plug located at the bottom of the unit (if applicable, consult diagram in full manual).
- Clean the interior with a soft cloth dampened with a mild detergent solution. Rinse thoroughly.
- Clean the exterior with a soft, damp cloth.
- Dry all parts thoroughly before reassembling and storing.

Storage

If the ice maker will not be used for an extended period, drain all water, clean the unit, and store it in a dry, cool place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not working.	Not plugged in; Power outage; Unit is off.	Ensure unit is plugged into a working outlet; Check circuit breaker; Press ON/OFF button.
"ADD WATER" indicator is on.	Water reservoir is empty.	Fill the water reservoir up to the MAX line.
"ICE FULL" indicator is on.	Ice basket is full.	Remove ice from the basket.

Problem	Possible Cause	Solution
Ice cubes are small or clumpy.	Water temperature too high; Air temperature too high; Unit needs cleaning.	Use colder water; Ensure unit is in a cool, well-ventilated area; Perform self-cleaning or manual cleaning.
Unusual noise during operation.	Normal operation sounds (compressor, water pump); Unit not level.	Some noise is normal; Ensure unit is on a flat, stable surface. If noise is excessive or new, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	CE117ICE-SS
Brand	Cook's Essentials
Ice Production Capacity	Up to 26 lbs per 24 hours
Ice Basket Capacity	1/2 lb
Construction Material	Stainless Steel
Refrigerant	R134a
Dimensions (Approx.)	12.1 x 11.1 x 10 inches
Weight (Approx.)	19 Pounds

WARRANTY AND SUPPORT

This product is sold as "Renewed" by Amazon Renewed. For specific warranty information and customer support, please refer to the documentation provided with your renewed product or contact Amazon Renewed customer service directly. General product support for Cook's Essentials appliances can often be found on the manufacturer's official website.

© 2024 Cook's Essentials. All rights reserved.

Related Documents

	<p>Cook's Essentials 1.5 Pint Self-Freezing Ice Cream Maker Instruction Manual</p> <p>Instruction manual for the Cook's Essentials 1.5 Pint Self-Freezing Ice Cream Maker, Model K45559/EIM-700. Includes important safeguards, parts identification, operating instructions, cleaning and maintenance, and troubleshooting.</p>
---	--

	<p>Cook's Essentials 1.5 Pint Thermo-Electric Ice Cream Maker: Instructions for Proper Use and Care</p> <p>Comprehensive guide for the Cook's Essentials 1.5 Pint Thermo-Electric Ice Cream Maker, covering important safeguards, features, usage instructions, troubleshooting, cleaning, and a variety of recipes.</p>
	<p>Cook's Essentials Bread Maker Manual: Recipes & Instructions</p> <p>User manual for Cook's Essentials Bread Maker (Models 850, 852, 855). Includes operating instructions, troubleshooting, maintenance, and a variety of bread recipes for home baking.</p>
	<p>Cook's Essentials Bread Maker User Manual & Recipes Models 850, 852, 855</p> <p>Comprehensive user manual for Cook's Essentials Bread Maker Models 850, 852, and 855. This guide provides detailed instructions for proper use, care, and troubleshooting, along with a variety of delicious bread recipes including Basic White, Gluten-Free, Sourdough, Raisin, Whole Wheat, and MultiGrain bread.</p>