

WISCENT WTB-779

WISCENT WTB-779 Micro Hi-Fi Stereo System User Manual

Model: WTB-779

1. INTRODUCTION

Thank you for purchasing the WISCENT WTB-779 Micro Hi-Fi Stereo System. This manual provides essential information for the safe and efficient operation of your new audio system. Please read it thoroughly before use and retain it for future reference.

The WISCENT WTB-779 is a versatile audio system featuring a CD/DVD player, Bluetooth connectivity, FM radio, USB and SD card playback, AUX input, and a microphone port. It is designed to deliver clear audio in a compact form factor.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent electric shock, fire, or damage to the unit:

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings. Ensure adequate space around the unit for proper airflow.
- Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Carefully unpack your WISCENT WTB-779 Micro Hi-Fi Stereo System and check that all items are present and in good condition. If any items are missing or damaged, please contact your retailer.

- 1 x WISCENT WTB-779 Compact Micro Hi-Fi System (Main Unit and Speakers)
- 1 x Remote Control (batteries not included)
- 1 x 3.5mm AUX Cable
- 1 x RCA Cable
- 1 x User Manual (this document)



Figure 3.1: Package contents of the WISCENT WTB-779 Micro Hi-Fi Stereo System.

4. PRODUCT OVERVIEW

4.1 Front Panel Controls and Connections

All in One Compact Micro Hifi CD DVD Player



Figure 4.1: Front panel layout and controls of the WISCENT WTB-779.

- **Power Button:** Turns the unit on or off.
- **Mode Button:** Cycles through input sources (CD/DVD, Bluetooth, FM, AUX, USB, SD).
- **Volume Knob:** Adjusts the master volume level.
- **Stop Button:** Stops playback.
- **Previous/Channel- Button:** Skips to the previous track/chapter or tunes down FM radio frequency.
- **Mute Button:** Mutes or unmutes the audio output.
- **Play/Pause/Search Button:** Plays or pauses playback; initiates search function in some modes.
- **Next/Channel+ Button:** Skips to the next track/chapter or tunes up FM radio frequency.
- **Open/Close Button:** Opens or closes the disc tray.
- **Disc Tray:** For inserting CDs or DVDs.
- **Mic Input:** 3.5mm jack for connecting an external microphone.
- **Earphone Jack:** 3.5mm jack for connecting headphones.
- **USB Port:** For connecting USB flash drives for media playback.
- **SD Card Slot:** For inserting SD cards for media playback (located on the side or rear, not visible in this image).

4.2 Rear Panel Connections

The rear panel typically includes connections for speakers, FM antenna, and RCA audio/video output for TV connection.

5. SETUP

5.1 Connecting the Speakers

Connect the speaker wires from the main unit to the corresponding speaker terminals on each speaker. Ensure correct polarity (positive to positive, negative to negative) for optimal sound quality.

5.2 Connecting to Power

Plug the power cord into a standard AC power outlet. The unit is designed for wired electrical power.

5.3 Connecting to a TV (Optional)

To view DVDs, connect the RCA cable (included) from the 'Video Out' and 'Audio Out' ports on the rear of the main unit to the corresponding 'Video In' and 'Audio In' ports on your television.

5.4 FM Antenna Connection

Extend the telescopic FM antenna for better radio reception. For improved signal, you may connect an external FM antenna to the designated port on the rear of the unit.

Micro Music Sound HiFi System

✓ High Performance Silk Dome Tweeter for Smooth Treble and Accurate Imaging

勾

✓ Balanced Rubber Woofer for Powerful and Transient bass

勾



Figure 5.1: WISCENT WTB-779 main unit and speakers.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **POWER** button on the front panel or remote control to turn the unit on or off.

6.2 Mode Selection

Press the **MODE** button on the front panel or remote control to cycle through available input sources: CD/DVD, Bluetooth (BT), FM Radio, AUX, USB, and SD.

6.3 CD/DVD Playback

1. Press the **OPEN/CLOSE** button to open the disc tray.
2. Place a CD or DVD disc gently into the tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray.
4. The unit will automatically detect the disc and begin playback. If not, press the **PLAY/PAUSE** button.
5. Use the **PREVIOUS/CHANNEL-** and **NEXT/CHANNEL+** buttons to skip tracks/chapters.
6. Supported disc formats include CD, CD-R, CD-RW, MP3-CD, WMA, DVD, SVCD, VCD, JPEG, and Kodak Picture CD. Blu-ray discs are not supported.
7. The DVD player is region-free, compatible with zones 1, 2, 3, 4, 5, and 6.

High Quality DISIC Drive



CD, DVD, DVD-R/+R, DVD-/+RW, CD-R/RW, VCD, SVCD
AUDIO-BOOK, MP3-CD



MAX:32GB
MP3, JPG, AVI / DIVX / MPG / MPEG4 / VOB / FLV, JPEG

Figure 6.1: Inserting a disc into the WISCENT WTB-779.

6.4 Bluetooth Operation

1. Press the **MODE** button until 'BT' or 'Bluetooth' appears on the display. The unit will enter pairing mode.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select 'WISCENT WTB-779' (or similar name) from the list to pair.
4. Once paired, you can play audio from your device through the stereo system.

6.5 FM Radio

1. Press the **MODE** button until 'FM' appears on the display.
2. Extend the telescopic antenna for best reception.
3. Use the **PREVIOUS/CHANNEL-** and **NEXT/CHANNEL+** buttons to manually tune to a station.
4. To auto-scan and save stations, refer to the specific instructions in the full manual (if available) or experiment with holding down the play/pause button. The unit supports 20 programmable preset stations.

6.6 USB/SD Playback

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. Press the **MODE** button until 'USB' or 'SD' appears on the display.
3. The unit will automatically detect and begin playing compatible audio files (MP3, WMA).
4. Supported file systems are FAT16/32, with a maximum capacity of 32GB.

6.7 AUX Input

Connect an external audio device (e.g., smartphone, MP3 player) to the AUX IN jack using the provided 3.5mm AUX cable. Select 'AUX' mode to play audio from the connected device.

6.8 Microphone Input

Connect a microphone to the MIC input jack for karaoke or voice amplification. Adjust the microphone volume separately if available, or use the main volume control.

6.9 Headphone Output

Plug headphones into the earphone jack for private listening. The main speakers will be muted automatically.

6.10 Remote Control

The included remote control provides full functionality for operating the WISCENT WTB-779 from a distance. Insert two AAA batteries (not included) into the remote control before use. Point the remote control directly at the main unit's sensor.

7. MAINTENANCE

7.1 Cleaning the Unit

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

7.2 Disc Care

Handle discs by their edges. Keep discs clean and free of scratches. Store discs in their cases when not in use to prevent dust and damage.

8. TROUBLESHOOTING

If you encounter issues with your WISCENT WTB-779, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; power outlet faulty.	Ensure power cord is securely plugged in. Try a different power outlet.
No sound	Volume too low; Mute activated; incorrect input mode; speakers not connected.	Increase volume. Deactivate Mute. Select correct input mode. Check speaker connections.
Disc not playing	Disc inserted incorrectly; disc dirty or scratched; unsupported disc format.	Re-insert disc correctly. Clean or replace disc. Ensure disc format is supported (not Blu-ray).
Bluetooth pairing failure	Unit not in pairing mode; device too far; Bluetooth disabled on device.	Ensure unit is in BT mode. Move device closer. Enable Bluetooth on your device.
Poor FM reception	Antenna not extended; weak signal.	Extend the telescopic antenna fully. Try repositioning the unit or connecting an external antenna.
Remote control not working	Batteries depleted or inserted incorrectly; obstruction between remote and unit.	Replace batteries. Ensure correct polarity. Remove any obstructions. Point remote directly at the unit.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Model	WTB-779
Brand	WISCENT
Output Wattage	30 Watts
Audio Output Mode	Stereo
Connectivity Technology	Bluetooth, USB
Supported Disc Formats	CD, CD-R, CD-RW, MP3, WMA, DVD, SVCD, VCD, JPEG, Kodak Picture CD (No Blu-ray)
DVD Region Compatibility	Region-free (1, 2, 3, 4, 5, 6 zones)

Feature	Specification
USB/SD Support	Up to 32GB, FAT16/32 file system
FM Radio Presets	20 stations
Power Source	Corded Electric
Item Weight	4.73 Kilograms
Product Dimensions	56 x 31.4 x 21.2 cm

10. WARRANTY AND SUPPORT

The WISCENT WTB-779 Micro Hi-Fi Stereo System comes with a **36-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures lifetime technical support.

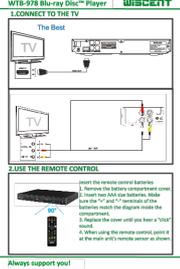
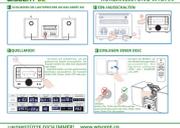


Figure 10.1: Warranty information.

For warranty claims, technical assistance, or any product-related inquiries, please contact WISCENT customer support through your purchase platform or the official WISCENT website.

Related Documents - WTB-779

	<p>WISCENT WTB-797 Nostalgic Bluetooth Stereo System Quick Start Guide</p> <p>A quick start guide for the WISCENT WTB-797 Nostalgic Bluetooth Stereo System, covering power on/off, unit overview, source modes, placing a disc, adjusting volume, radio mode, Bluetooth connection, USB mode, and AUX IN mode.</p>
	<p>WISCENT WTB-791 Portable CD Boombox Instruction Manual</p> <p>User manual for the WISCENT WTB-791 Portable CD Boombox, covering setup, operation, features like FM radio, CD playback, Bluetooth, AUX, and USB. Includes technical specifications and warranty information.</p>

	<p>Wiscent WST977 Full HD DVD-Player User Manual</p> <p>Comprehensive user manual for the Wiscent WST977 Full HD DVD-Player, covering safety instructions, connections, operation, features, technical specifications, system configuration, CD ripping, MP3/JPEG playback, and troubleshooting.</p>
	<p>WISCENT WTB-978 Blu-ray Disc Player Quick Start Guide</p> <p>Learn how to connect and operate your WISCENT WTB-978 Blu-ray Disc Player with this comprehensive quick start guide. Includes remote control functions and setup instructions.</p>
	<p>Wiscent WTB799 Quick Start Guide</p> <p>Concise guide to setting up and operating the Wiscent WTB799 audio system, covering speaker connection, power, source selection, disc playback, volume, radio, Bluetooth, and USB modes.</p>
	<p>Wiscent WTB792 Boombox Quick Start Guide</p> <p>A concise guide to setting up and operating the Wiscent WTB792 Boombox, covering power, battery installation, unit overview, source modes, disc playback, volume adjustment, radio, Bluetooth, USB, and AUX input.</p>