

Manuals.plus /
› JINX /
› JINX Official Peanuts Snoopy Masked Hero Plush Toy Instruction Manual

JINX 12279

JINX Official Peanuts Snoopy Masked Hero Plush Toy Instruction Manual

Model: 12279

1. INTRODUCTION

Thank you for choosing the JINX Official Peanuts Snoopy Masked Hero Plush Toy. This collectible plush features Snoopy from The Snoopy Show animated television series, designed with authentic details and soft, easy-to-touch plush fabric. This manual provides essential information for the proper care and enjoyment of your new plush toy.



Figure 1: JINX Official Peanuts Snoopy Masked Hero Plush Toy, approximately 5.5 inches tall.

2. SETUP

The JINX Snoopy Masked Hero Plush Toy requires no assembly or batteries. It is ready for use directly out of its packaging.

1. **Unboxing:** Carefully remove the plush toy from its packaging.
2. **Initial Inspection:** Inspect the plush toy for any signs of damage or manufacturing defects. If any issues are

found, please refer to the Warranty and Support section.

3. **Tag Removal:** Remove all tags and plastic fasteners before giving the toy to a child. These items are not part of the toy and should be discarded safely.

3. OPERATING INSTRUCTIONS

This plush toy is designed for imaginative play, cuddling, and display. It is suitable for fans of all ages, from toddlers to collectors.

- **Play:** Engage in gentle play. The plush is soft and durable for typical handling.
- **Display:** The toy can be displayed on shelves, beds, or desks as a collectible item.
- **Interaction:** No electronic components are present; interaction is purely physical.



Figure 2: Detailed front view of the Snoopy Masked Hero plush.

4. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your plush toy. The toy is constructed from polyester plush

fabric.

- **Cleaning:** Spot clean only. Use a soft cloth dampened with mild soap and water to gently clean soiled areas.
- **Drying:** Allow the plush to air dry completely. Do not use a machine dryer, as this can damage the fabric and filling.
- **Avoid:** Do not machine wash, bleach, iron, or dry clean the plush toy. These methods can cause irreversible damage.
- **Storage:** Store in a clean, dry environment away from direct sunlight to prevent fading.

5. TROUBLESHOOTING

Most issues with plush toys are minor and can be resolved with simple steps.

- **Minor Stains:** Refer to the Maintenance and Care section for spot cleaning instructions.
- **Loose Threads:** If you notice any loose threads, carefully trim them with scissors. **Do not pull** on loose threads, as this may unravel stitching.
- **Loss of Shape:** Gently reshape the plush by hand. The polyester filling is designed to be resilient.
- **Damage:** For significant damage, please contact customer support as outlined in the Support section.

6. SPECIFICATIONS

Feature	Detail
Brand	JINX
Model Number	12279
Character	Snoopy (Peanuts)
Material Type	Polyester (Outer Material, Inner Material)
Item Dimensions (L x W x H)	3.5 x 3.5 x 5.25 inches
Item Weight	1.5 Ounces
Recommended Age	3 months and up
UPC	889343159435
Color	White (Masked Snoopy)

7. WARRANTY INFORMATION

This JINX product is covered by a manufacturer's warranty. The specific terms and duration of the warranty may vary. For detailed information regarding your product's warranty, please refer to the official JINX website or contact their customer support directly.

8. SUPPORT

For any questions, concerns, or assistance not covered in this manual, please contact JINX customer support.

- **Online Support:** Visit the official JINX website for FAQs and contact options.
- **Manufacturer:** Jinx

© 2024 JINX. All rights reserved. Peanuts © Peanuts Worldwide LLC.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09ZBM1ZGV>

More documents and user manuals: <https://manuals.plus/>