



[Manuals.plus](#) /

› [COSTWAY](#) /

› COSTWAY 3x3M Beige Cantilever Parasol Instruction Manual

COSTWAY NP10288

COSTWAY 3x3M Beige Cantilever Parasol Instruction Manual

Model: NP10288

INTRODUCTION

Thank you for choosing the COSTWAY 3x3M Beige Cantilever Parasol. This outdoor parasol is designed to provide extensive shade and comfort for your garden, patio, or other outdoor spaces. It features a robust structure with 8 steel ribs, a 360-degree rotation capability, and a multi-level tilt adjustment system. The canopy is made from high-quality, UV-resistant, waterproof, and fade-resistant polyester fabric, ensuring durability and protection. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.



Image: The COSTWAY 3x3M Beige Cantilever Parasol providing shade in an outdoor environment.

SAFETY INSTRUCTIONS

- Always ensure the parasol base is adequately weighted. A weighted base (not included) is essential for stability, especially in windy conditions.
- Close and secure the parasol during strong winds, heavy rain, or other severe weather conditions to prevent damage or injury.
- Do not use the parasol near open flames or heat sources.
- Keep children and pets away from the parasol during opening, closing, and adjustment to prevent accidents.
- Regularly inspect all components for wear and tear. Replace any damaged parts immediately.
- Ensure all screws and bolts are tightened securely during assembly and periodically check their tightness.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1 x Cantilever Parasol Canopy and Frame Assembly
- 1 x Cross Base
- Assembly Hardware (bolts, washers, nuts, tools if included)



Image: Key components of the parasol, including the canopy strap, main pole, robust steel ribs, and the cross base.

SETUP INSTRUCTIONS

Follow these steps to assemble your cantilever parasol:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the package contents list.
2. **Assemble the Cross Base:** Connect the sections of the cross base (if separate) using the provided hardware. Ensure all connections are tight and secure.
3. **Attach the Main Pole:** Insert the main pole of the parasol into the center opening of the assembled cross base. Secure it with the appropriate bolts and washers.

4. **Secure the Base:** Place a weighted base (such as sandbags, water-filled weights, or concrete slabs, not included) onto the cross base to ensure maximum stability. This step is crucial for safety.
5. **Prepare the Canopy:** Gently unfold the parasol canopy. Ensure the ribs are properly aligned.
6. **Final Checks:** Before operating, ensure all connections are secure and the parasol is stable.



Image: The cross base with the directional pedal for 360-degree rotation, highlighting the importance of a weighted base.

OPERATING INSTRUCTIONS

Opening and Closing the Parasol

The parasol features a convenient crank lift mechanism:

- **To Open:** Turn the crank handle clockwise until the canopy is fully extended and taut. Ensure the fabric is not caught in the ribs. You may need to gently pull on some ribs to fully tension the canopy.
- **To Close:** Turn the crank handle counter-clockwise until the canopy is fully retracted. Secure the closed canopy with the integrated buckle strap to prevent it from unfurling in the wind.

Adjusting the Tilt Angle

The parasol offers a manual tilt mechanism to block sunlight from various angles:

- Locate the tilt handle on the main pole.
- Press or pull the handle (depending on the design) to release the locking mechanism.
- Adjust the canopy to your desired tilt angle. The parasol typically offers 3 levels of inclination.
- Release the handle to lock the canopy in place.

360-Degree Rotation

To reposition the parasol for optimal shade throughout the day:

- Step on the directional pedal located at the base of the main pole.
- While holding the pedal down, gently rotate the entire parasol assembly to the desired direction.
- Release the pedal to lock the parasol in its new position. The parasol can be fixed in 8 different positions for flexible use.



Image: Visual guide for the 3-level tilt adjustment and the crank handle for canopy operation.

MAINTENANCE AND CARE

- **Cleaning the Canopy:** Clean the polyester canopy regularly with mild soap and water. Rinse thoroughly and allow it to air dry completely before closing or storing. Do not use harsh chemicals or abrasive cleaners.
- **Cleaning the Frame:** Wipe the metal frame with a damp cloth and mild detergent. Dry thoroughly to prevent rust.
- **Storage:** Always close and secure the parasol when not in use or during inclement weather. For long-term storage, especially during off-season, it is recommended to remove the canopy from the frame, clean both thoroughly, and store them in a dry, protected area. Using a protective cover (not included) is highly recommended.
- **Hardware Check:** Periodically check all bolts and screws to ensure they remain tight. Tighten as necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Parasol is unstable or sways in light wind.	Insufficient base weight; loose connections.	Ensure the cross base is adequately weighted with sandbags, water-filled weights, or concrete slabs. Check and tighten all assembly bolts.

Problem	Possible Cause	Solution
Canopy does not open fully or appears loose.	Canopy fabric caught; ribs not fully extended; crank mechanism issue.	Ensure no fabric is caught in the ribs. When opening, gently pull on the ends of the ribs to help tension the canopy. Check the crank mechanism for obstructions.
Tilt mechanism is not locking.	Locking pin/lever not engaged; obstruction.	Ensure the tilt handle is fully released after adjusting the angle. Check for any debris or obstruction preventing the locking mechanism from engaging.
360-degree rotation is stiff or not locking.	Directional pedal not fully pressed/released; debris in mechanism.	Ensure the directional pedal is fully pressed down to rotate and fully released to lock. Clean any debris around the pedal and rotation mechanism.

PRODUCT SPECIFICATIONS

Model Number: NP10288

Brand: COSTWAY

Color: Beige

Canopy Shape: Square

Canopy Dimensions: 300 cm x 300 cm (L x W)

Overall Height: 273 cm

Material: Metal (frame), Polyester (canopy)

Number of Ribs: 8

Opening Mechanism: Crank Lift

Tilt Mechanism: Manual Tilt (3 levels)

Rotation: 360-degree with directional pedal (8 locking positions)

Special Features: UV Resistant, Water Resistant, Fade Resistant, Ventilated Canopy, Cross Base Included

Item Weight: 19.6 Kilograms

Recommended Use: Outdoor (Courtyard, Garden, Patio, Market)

Spécifications :

Spécifications :

Couleur : Beige / Marron / Rouge vin

Matériau : acier, tissu en polyester

Dimensions totales : 300 x 300 x 273 cm (L x l x H)

Dimensions de la base : 100 x 100 cm (L x l x H)

Poids net : 19 kg

L'ensemble comprend :

1 x Parasol

1 x Base en croix

1 x Guide de l'utilisateur



Conception
ajustable



Construction
fiable



Structure
pliable



Rangement à
faible encombrement



Apparence
moderne



Image: Detailed specifications of the parasol, including dimensions, weight, and material composition.

Dimension de la Tube de Parasol :

6,9 cm × 4,9 cm



Image: Dimensional diagram illustrating the height, width, and canopy diameter of the parasol.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer directly. Keep your purchase receipt as proof of purchase. For general inquiries about COSTWAY products, please visit the official COSTWAY website or contact their customer service department.